

Shingle/Lap Sider

Safety, Operation, Maintenance, & Parts Manual

SLR

rev. A.00-G1.03

Safety is our #1 concern!

February 2022

Form #903

**For use with LT15* through LT70 models and for
LX* models.**

* LT15 and LX models requires an adapter kit:



**WARNING! Read and understand this
manual before using this machine.**

California
Proposition 65 Warning



WARNING: Breathing gas/diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Always start and operate the engine in a well-ventilated area.
If in an enclosed area, vent the exhaust to the outside.
Do not modify or tamper with the exhaust system.
Do not idle the engine except as necessary.

For more information go to **www.P65warnings.ca.gov**.



WARNING: Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to **www.P65Warnings.ca.gov/wood**.

Active Patents assigned to Wood-Mizer, LLC

Wood-Mizer, LLC has received patents that protect our inventions which are a result of a dedication to research, innovation, development, and design. Learn more at: woodmizer.com/patents

©2024 Wood-Mizer LLC

Printed in the United States of America, all rights reserved. No part of this manual may be reproduced in any form by any photographic, electronic, mechanical or other means or used in any information storage and retrieval system without written permission from

Wood-Mizer, LLC
8180 West 10th Street
Indianapolis, Indiana 46214

SECTION 1 SAFETY

1.1	Safety Symbols	1-1
-----	----------------------	-----

SECTION 2 INSTALLATION

2.1	Assembly.....	2-1
2.2	Installation and Setup.....	2-2
2.3	Installation and Setup (revision A.00 through F1.01).....	2-3

SECTION 3 LT15 INSTALLATION

3.1	LT15 Rev. E6.04+ and All LT15W	3-1
3.2	LT15 Rev. E4.00 - E6.03	3-1
3.3	LT15 Rev. A0.00 - E3.03.....	3-2

SECTION 4 LX INSTALLATION

4.1	LX25/LX50/LX55	4-1
4.2	LX150/LX250.....	4-5

SECTION 5 SHINGLE OPERATION

5.1	Shingle setup	5-1
5.2	Shingle cutting operation	5-2

SECTION 6 LAP SIDING OPERATION

6.1	Lap siding setup	6-1
-----	------------------------	-----

SECTION 7 REPLACEMENT PARTS

7.1	Frame 1	7-2
7.2	Frame 2	7-4
7.3	Frame 3	7-5
7.4	LT15 Adapters	7-6
7.5	LX25/LX50/LX55 Adapter.....	7-7
7.6	LX 150/250 Adapter	7-8
7.7	LT15 Auxiliary Bed Rail	7-9
7.8	Shingle Lap Siding Resaw (revision A.00-F.01)	7-10

SECTION 1 SAFETY

The Shingle/Lap Siding Option (SLR) (see FIG. 2-1) creates tapered shingles or siding with your Wood-Mizer sawmill.

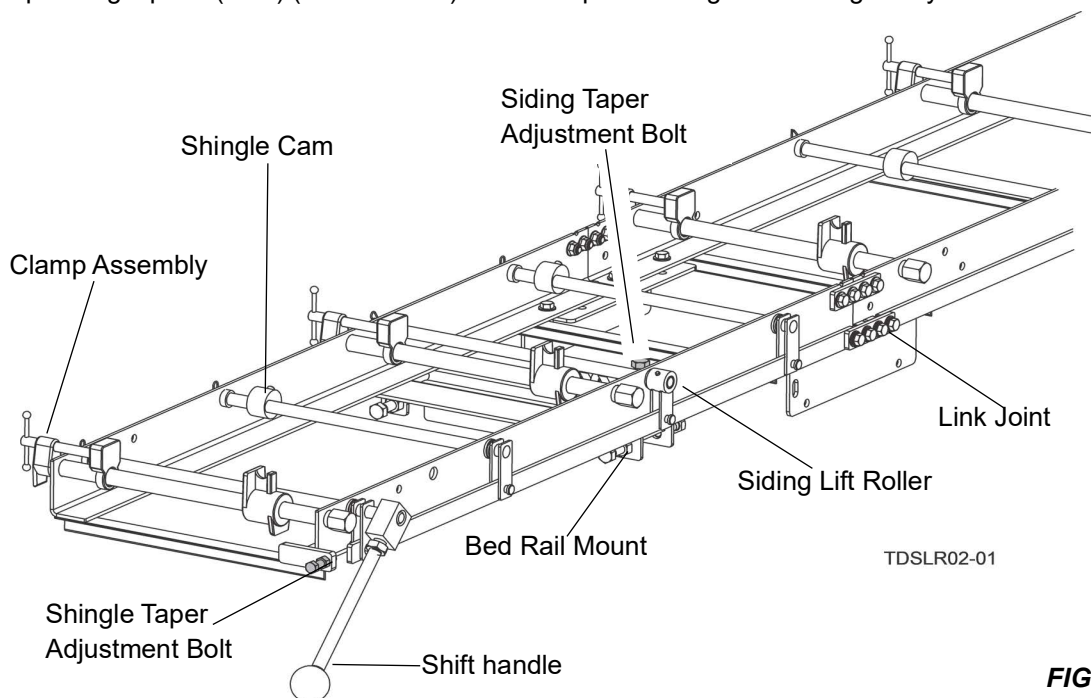


FIG. 1-1

1.1 Safety Symbols

The following symbols and signal words call your attention to instructions concerning your personal safety. Be sure to observe and follow these instructions.



DANGER! indicates an imminently hazardous situation which, if not avoided, will result in serious injury or death.



WARNING! suggests a potentially hazardous situation which, if not avoided, could result in serious injury or death.



CAUTION! refers to potentially hazardous situations which, if not avoided, may result in minor or moderate injury or damage to equipment.

NOTICE indicates vital information.



WARNING! Clean sawdust from all areas where sawdust may gather **after every 8-hour shift**. Failure to do so may result in fire, causing death or serious injury



SETUP SAFETY



WARNING! Do not use if the mill is set up on ground with more than a 10 degree incline. An incline could cause the mill to tip over.

Use a lifting device (fork lift, crane, etc.) for parts over 100 lbs.

Use two persons for lifting parts over 50lbs.

Keep all non-essential personnel out of the area while setting up the equipment.



SECTION 2 INSTALLATION



WARNING! Turn the base unit's power to OFF, remove the key, and disconnect the battery ground terminal, if applicable.

On electric equipment, **lock out power supply** before performing any installation. See Electrical Lockout Procedures (OSHA regulation 1910.147, appendix A reprinted in the Operator's Manual).

Ensure your unit is on a level surface and secure from movement.

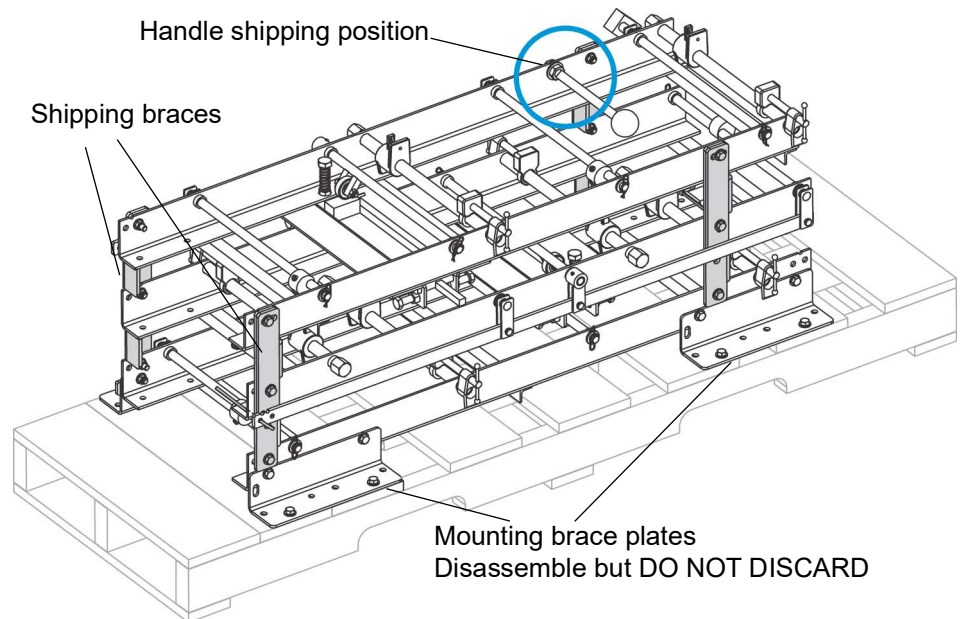


FIG. 2-1



2.1 Assembly

1. Uncrate the SLR; discard the shipping braces (total 8) and fasteners. See FIG. 2-1.

Fastener bag contains:

PART	PART NUMBER	QTY
SLR Fastener Kit	130832	1
Bolt, 3/8-16x1 Gr5 HH	F05007-87	32
Washer, 3/8 Flat SAE	F05011-3	40
Nut, 3/8-16 Flanged Nylock	F05010-222	32
Washer, 3/8 Split Lock	F05011-4	8
Bolt, 3/8-16x3/4 Gr5	F05007-118	8
Nut, 5/8-18 Hex jam	F05010-11	1
Knob, 5/8-18 Ball	P04211	1
Plate, SLR Link Arm Joint	128328	6

2. Lay out the frames as shown in FIG.2-2 to attach plates as shown in FIGs. 2-2 and 2-3

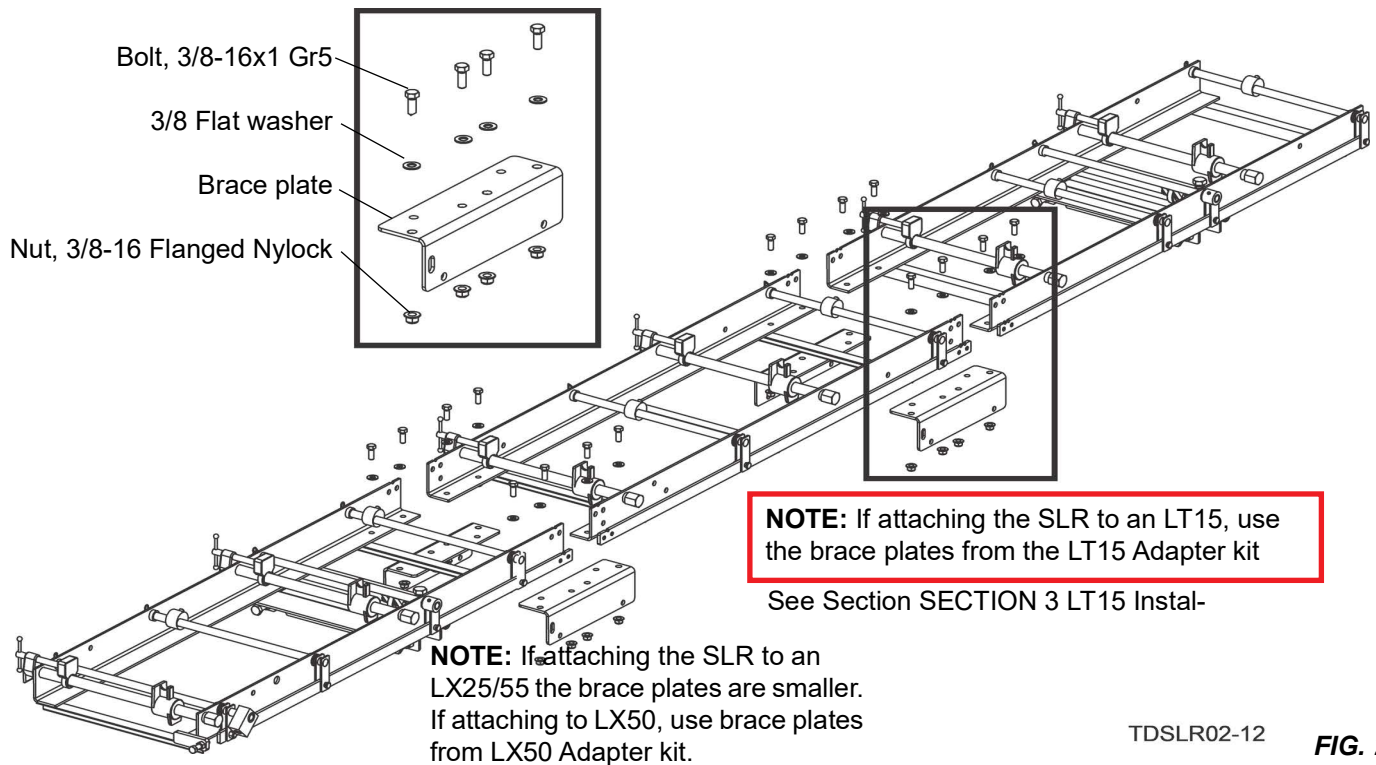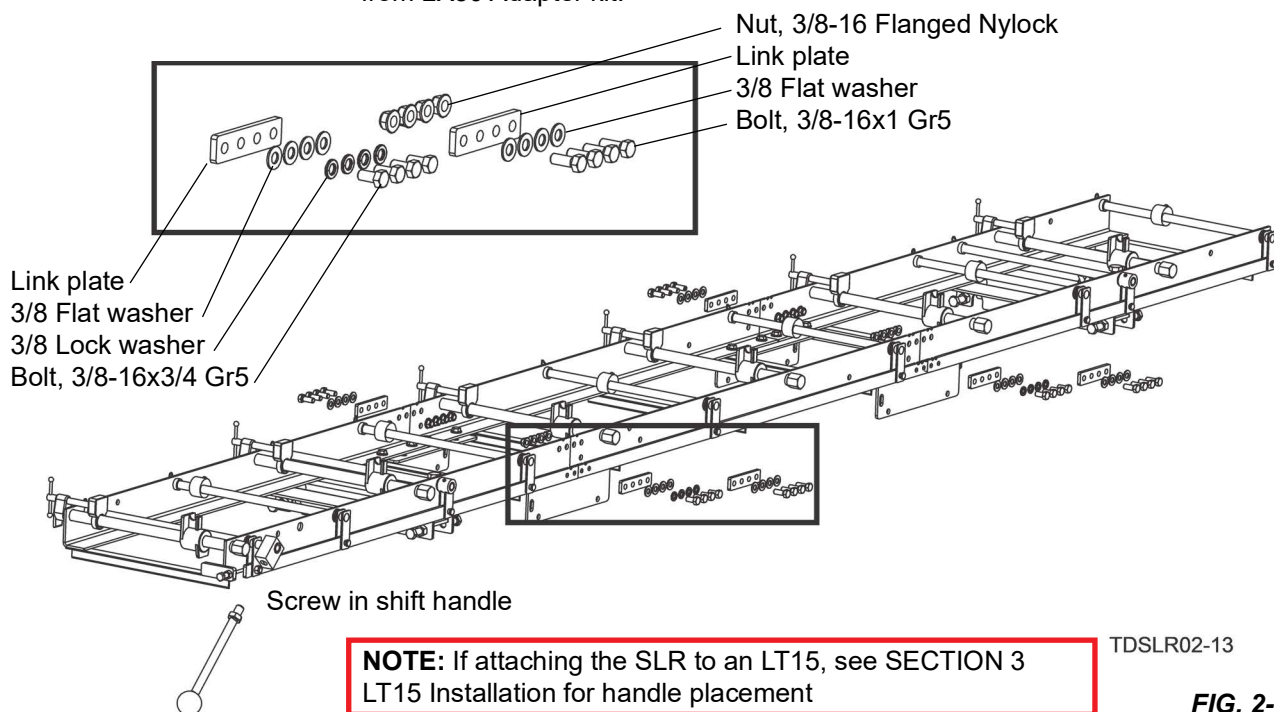
FIG. 2-2

FIG. 2-3

2.2 Installation and Setup



WARNING! Use a lifting device (fork lift, crane, etc.) for parts over 100 lbs.

Use two persons for lifting parts over 50lbs.¹

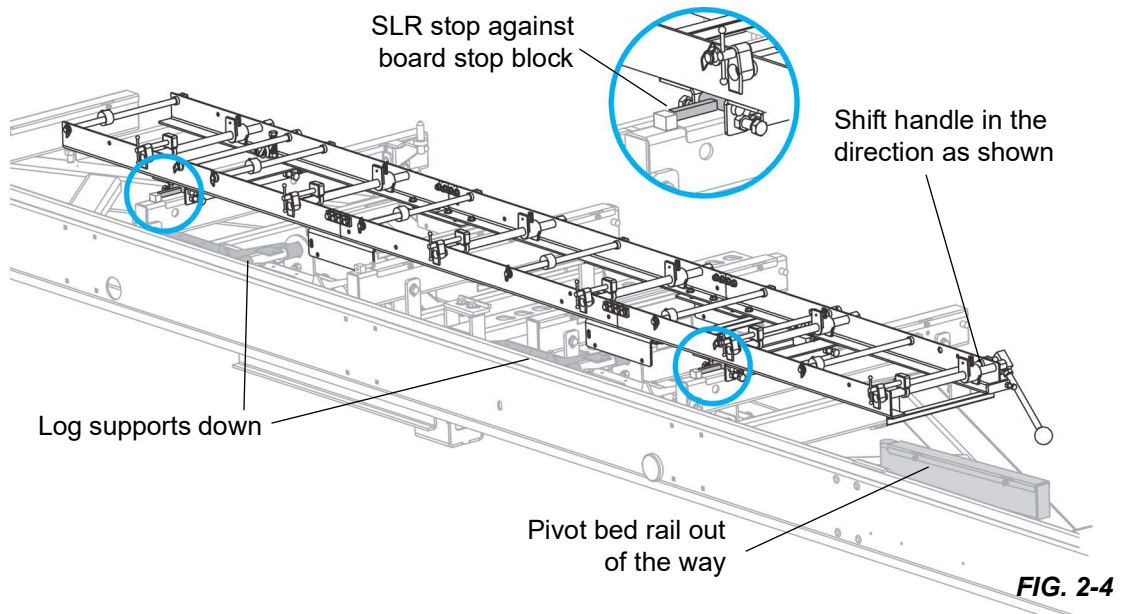
1. Position the sawhead upward, out of the way.
2. Lower all log supports.



3. Move rear pivoting bed rail parallel to the bed frame.

4. Position the SLR on the mill bed with the mounting brackets around the front and rear bed rails.

- a. Position the shift handle at the rear end of the mill.
- b. Ensure the SLR frame is lying flat on the bed rails.



NOTICE: DO NOT tighten the clamp bolts on the bed rails.

The SLR bed must be able to move during operation. The clamp bolts should only be tightened before towing the sawmill with the SLR attached.

5. Slide the SLR frame all the way over toward the inboard side of the sawmill bed until the SLR stops touch the bed rail stop blocks.

2.3 Installation and Setup (revision A.00 through F1.01)

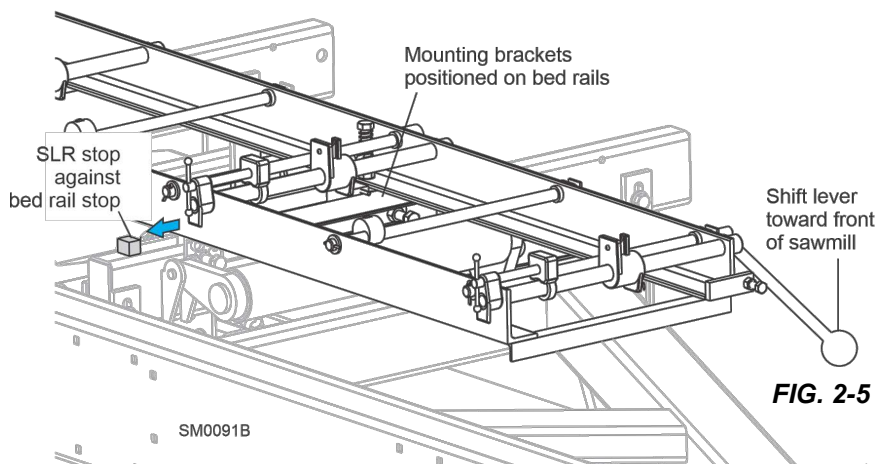
1. Position the SLR on the mill bed with the mounting brackets around the front and rear bed rails.

The shift lever should be at the rear end of the mill.

2. Make sure the SLR frame is lying flat on the bed rails.
3. DO NOT tighten the clamp bolts on the bed rails.

The clamp bolts should only be tightened before towing the sawmill with the SLR attached.

4. Slide the SLR frame all the way over toward the inboard side of the sawmill bed until the SLR stops touch the bed rail stop blocks.



SECTION 3 LT15 INSTALLATION



WARNING! Turn the base unit's power to OFF, remove the key, and disconnect the battery ground terminal, if applicable.

On electric equipment, lock out power supply before performing any installation. See Electrical Lockout Procedures (OSHA regulation 1910.147, appendix A reprinted in the Operator's Manual).

Ensure your unit is on a level surface and secure from movement.

3.1 LT15 Rev. E6.04+ and All LT15W

(Bed Sections Rev. G.00+): Kit SLRKIT-LT15.1 is required to mount the SLR.

1. Place the rail adapter on the second and third bed rails of the first bed section as shown in FIG. 3-1.
2. Slide the adapter against the bed rail stop blocks.

NOTE: If the adapter contacts the log support first, raise the support to the height of the adapter and use the log support as the side starting point.

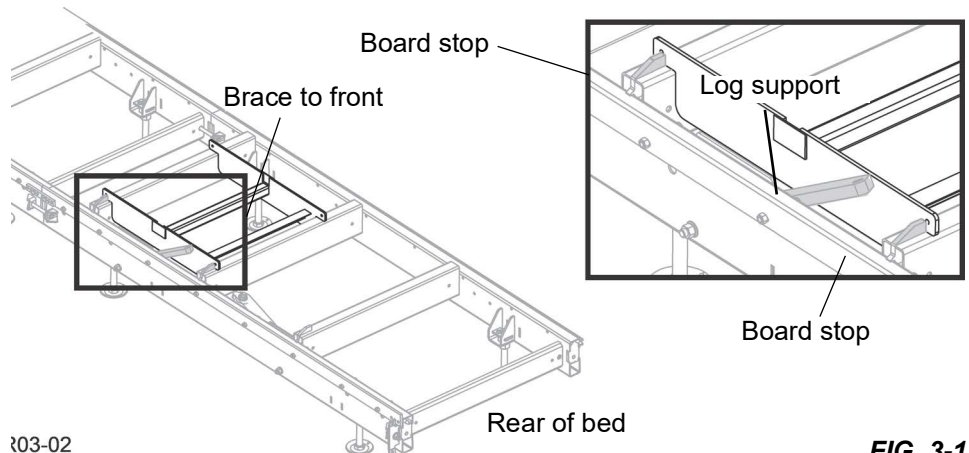


FIG. 3-1

3. Relocate the SLR shift handle to avoid interference with the rear bed rail. See FIG. 3-2
 - a. Unbolt and unpin the handle shaft from the frame.
 - b. Unbolt and unpin the cam shaft.
 - c. Remove the cam from the cam shaft.
 - d. Slide the handle shaft in former position of the cam shaft, sliding the cam on the shaft while inserting.
 - e. Bolt and pin the handle shaft to the frame.
 - f. Slide the cam shaft in former position of the handle shaft.
 - g. Bolt and pin the cam shaft to the frame.

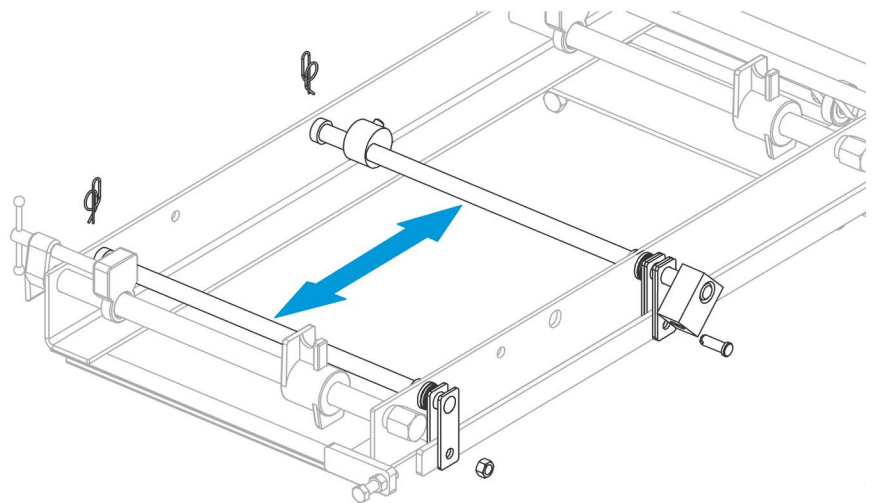


FIG. 3-2

4. Position the SLR on the bed with the shift handle toward the rear of the sawmill.
5. Push the SLR stops against the rail adapter.
6. Screw in the handle to the handle shaft.
7. Continue SLR set up. See [Section SECTION 5 Shingle Operation](#) or [Section SECTION 6 Lap Siding Operation](#).

3.2 LT15 Rev. E4.00 - E6.03

(Bed Sections Rev. E.00 - F.00): Kit SLRKIT-LT15 is required to mount the SLR.

1. Place the rail adapter on the last bed rail of the second bed section as shown.
2. Adjust the stop bolt against the frame tube.
3. Install the stop block to the last bed rail of the first bed section and tighten the clamp bolt.
4. Position the SLR on the bed with the shift handle toward the rear of the sawmill.
5. Push the SLR stops against the rail adapter and stop block.

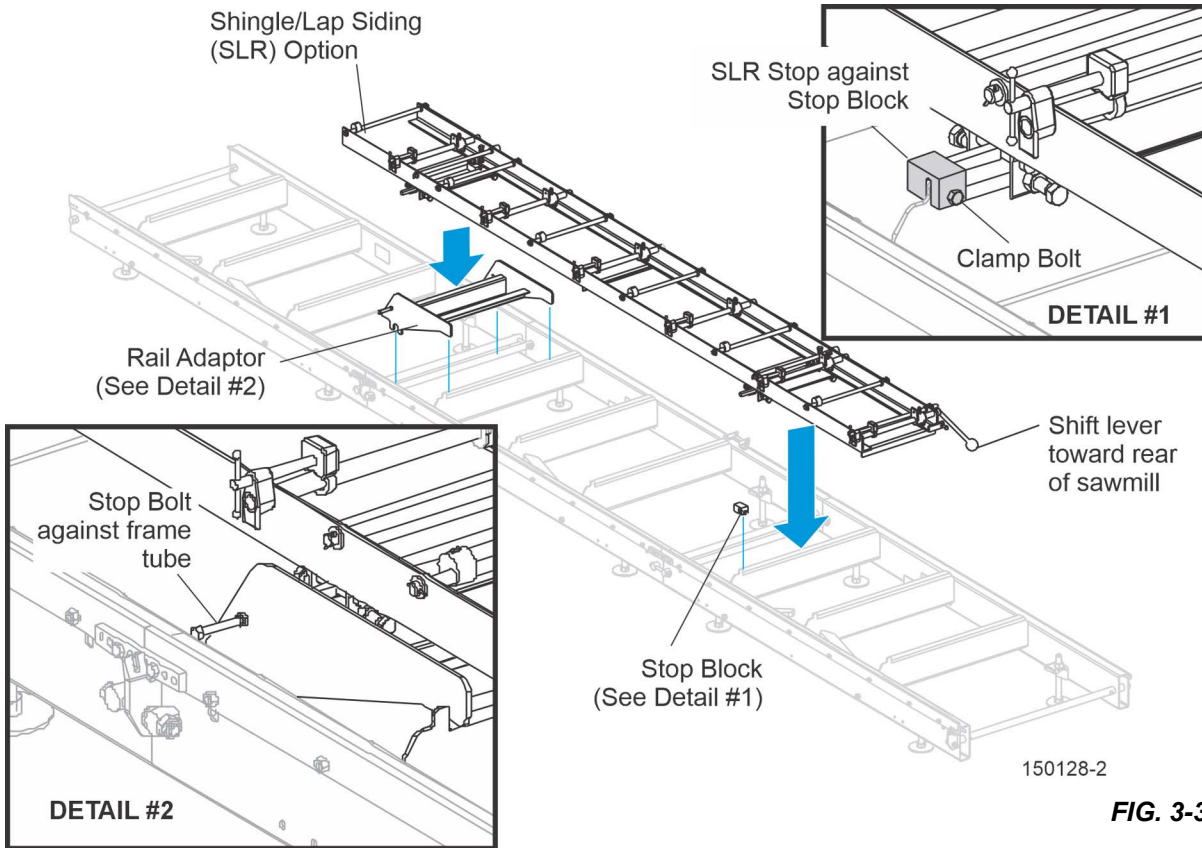


FIG. 3-3

3.3 LT15 Rev. A0.00 - E3.03

(Bed Sections Rev. A0.00 - D.06): Auxiliary bed rail (part number 016037) needed.

1. Mount the auxiliary bed rail near the end of the middle bed section as shown (See LT15 manual for details).
2. Position the SLR on the bed with the shift handle toward the rear of the sawmill.
3. Push the SLR stops against the bed rail stop blocks.

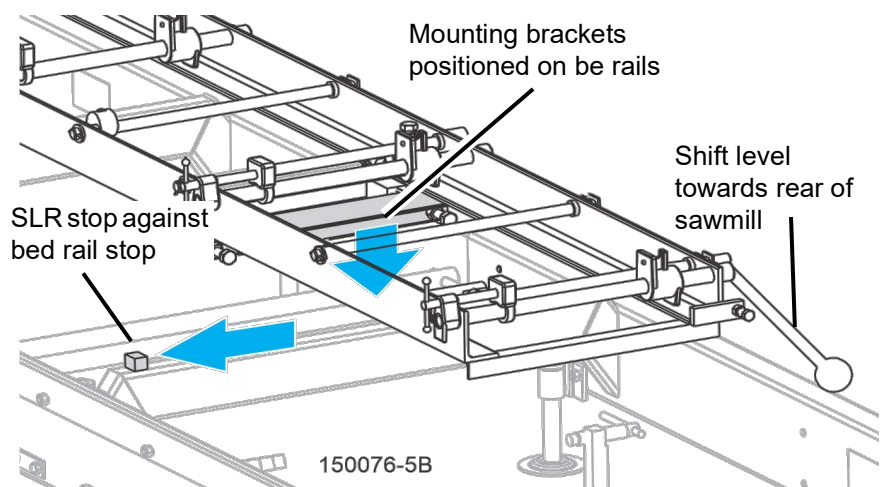


FIG. 3-4

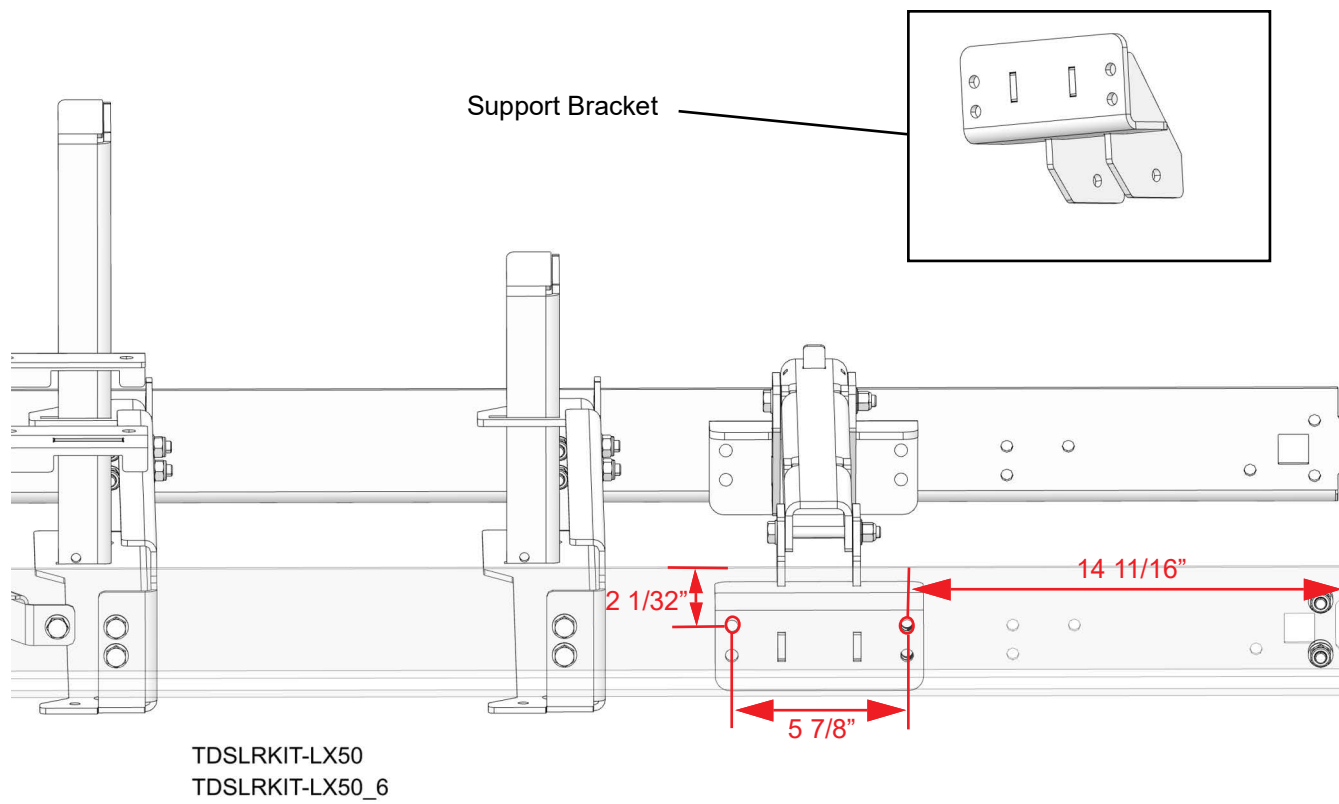
SECTION 4 LX INSTALLATION

4.1 LX25/LX50/LX55

Steps 1-2 for LX50 Start Only


1. Drill (2) new 10.5mm clearance holes for M10 bolts into each side of bed frame in front bed section.

NOTE: Use Support Bracket as a template.



2. Drill (1) new 10.5mm clearance hole for an M10 bolt into each side of bed frame in rear bed section.

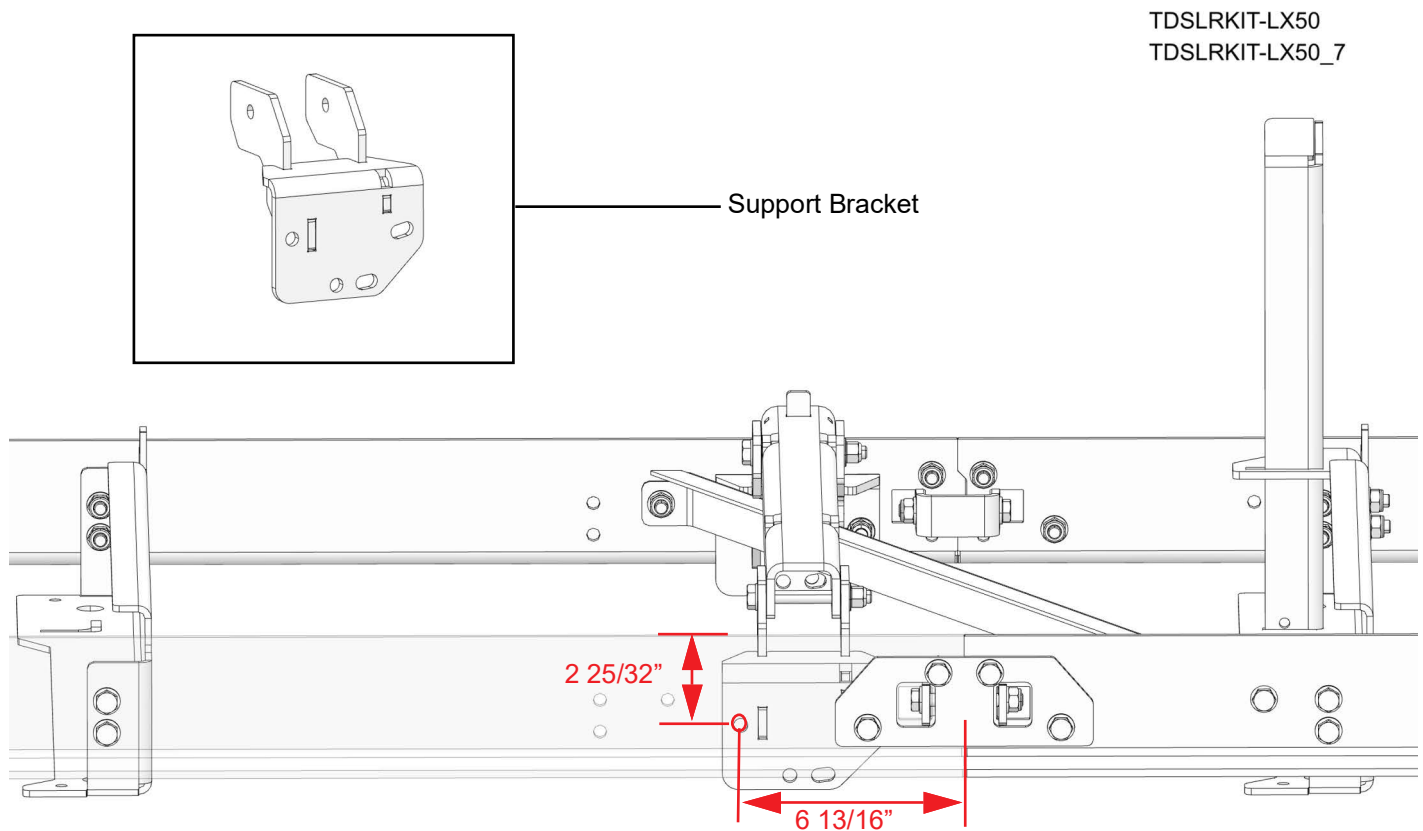NOTE: Use Support Bracket as a template.



3. Use (4) M10-1.5x35mm hex head bolts, (4) M10 flat washers, and (4) M10x1.5 flanged nylon locking nuts to mount front section of adapter kit to front bed section, as shown in FIG 4-1 and 4-2.

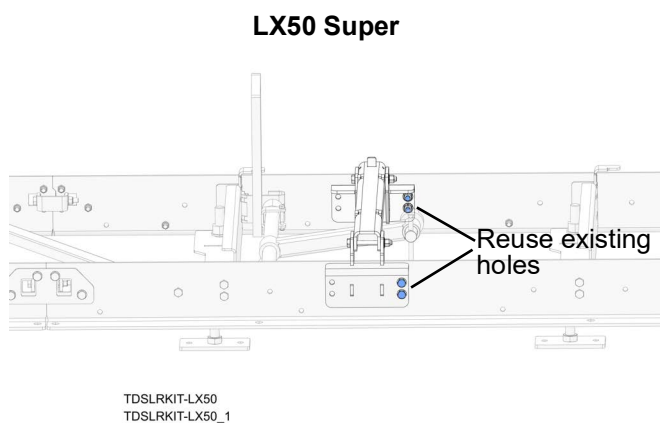


FIG. 4-1

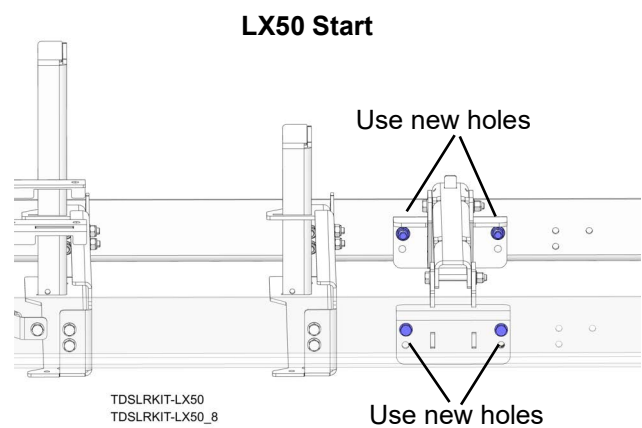
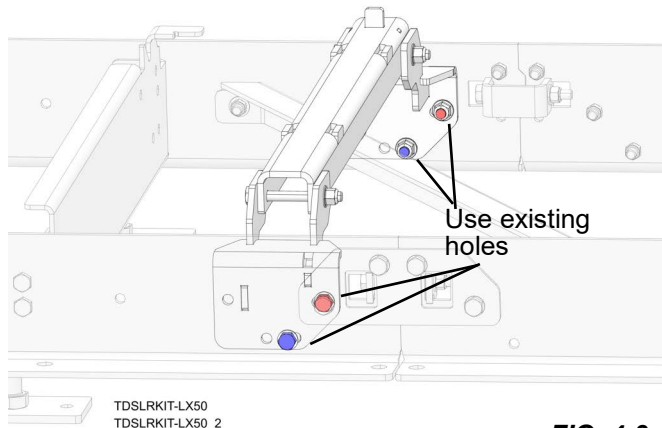
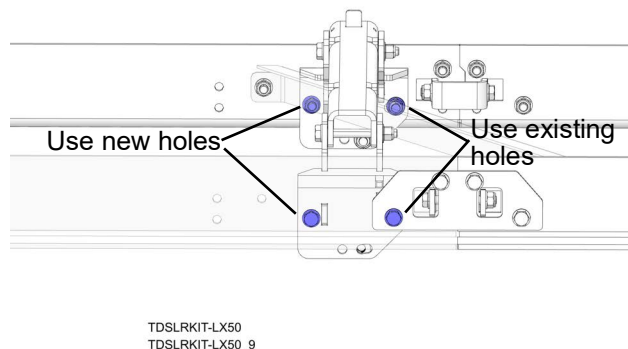



FIG. 4-2

4. Use (4) M10-1.5x35mm hex head bolts, (4) M10 flat washers, and (4) M10x1.5 flanged nylon locking nuts to mount rear section of adapter kit to rear bed section, as shown in FIG 4-3 and 4-4.


LX50 Super**FIG. 4-3****LX50 Start****FIG. 4-4**

NOTE: Use only the M10x35mm bolts from SLR Kit for mounting. Bolts marked as red (see FIG 4-3) will be replaced with longer bolts from SLR Kit.


5. Position SLR on bed with shift handle toward rear of sawmill, **See Fig. 4-5.**

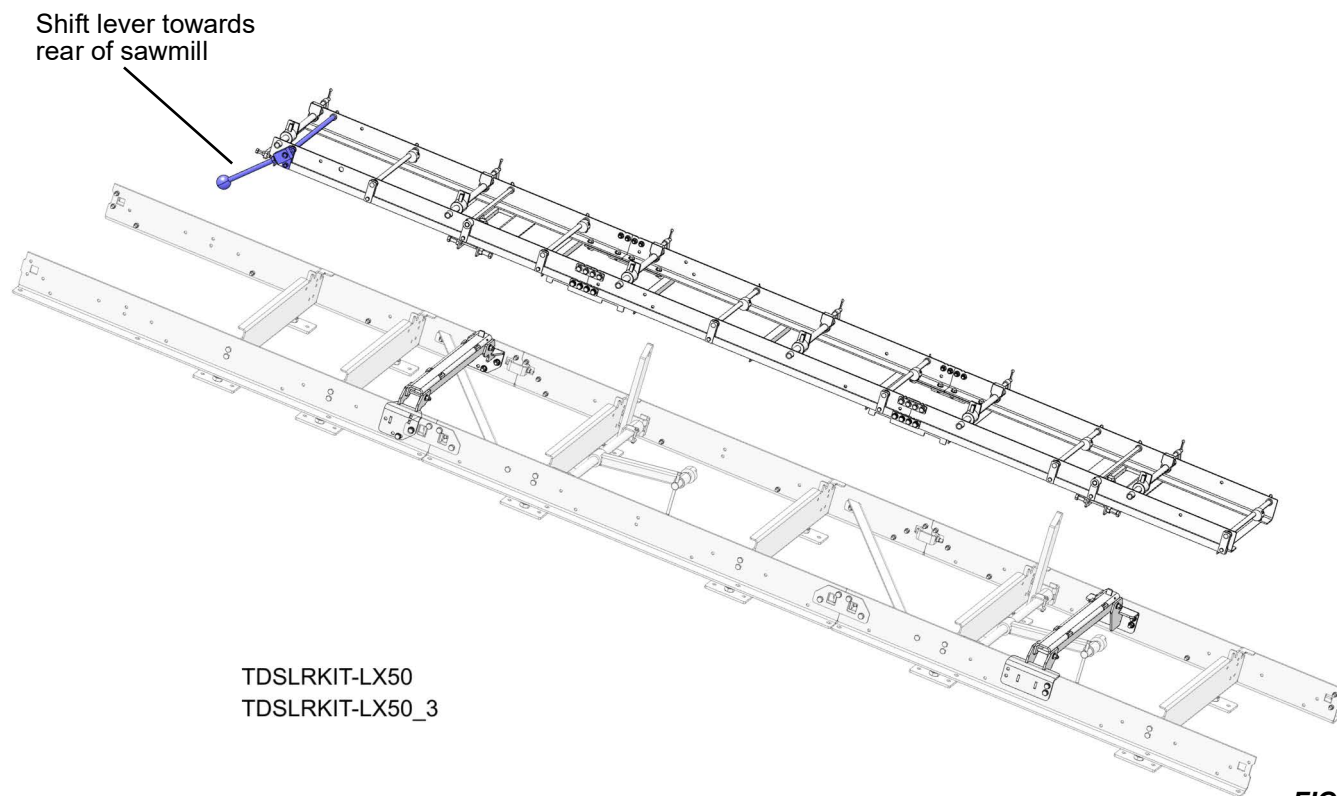**FIG. 4-5**

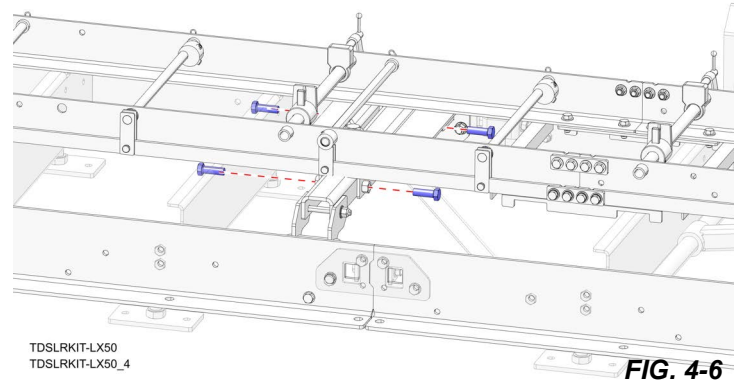6. Use (4) 1/2-13 x 1 1/2 inch Hex Head bolts to secure SLR to rear adapter, as shown in FIG 4-6.



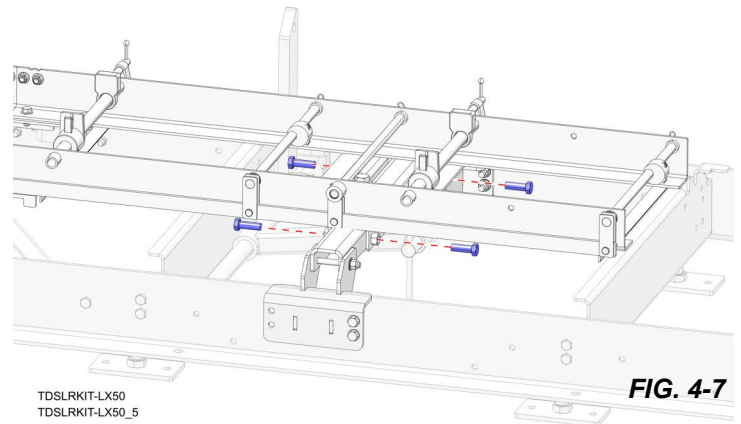7. Use (4) 1/2-13 x 1 1/2 inch bolts to secure SLR to front adapter, as shown in FIG 4-7.



4.2 LX150/LX250

1. Mount the adapter kit ([See Section 7.6](#)) (only one in front) on the first bed section and secure it with the bolts, as shown below.

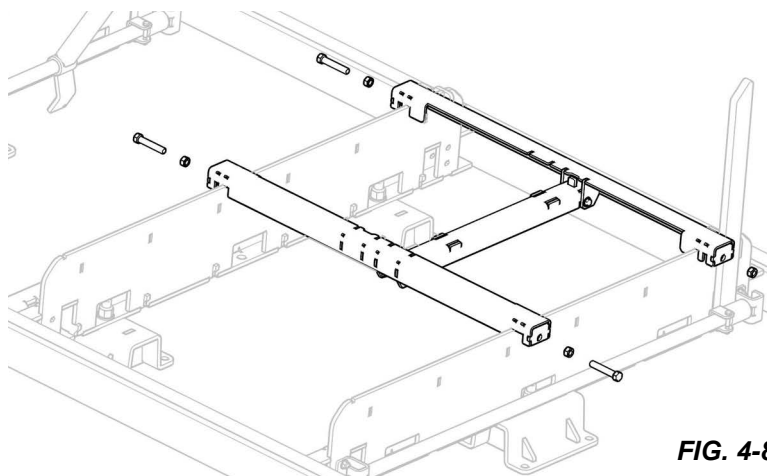


FIG. 4-8

2. Position the SLR on the bed with the shift handle toward the rear of the sawmill.

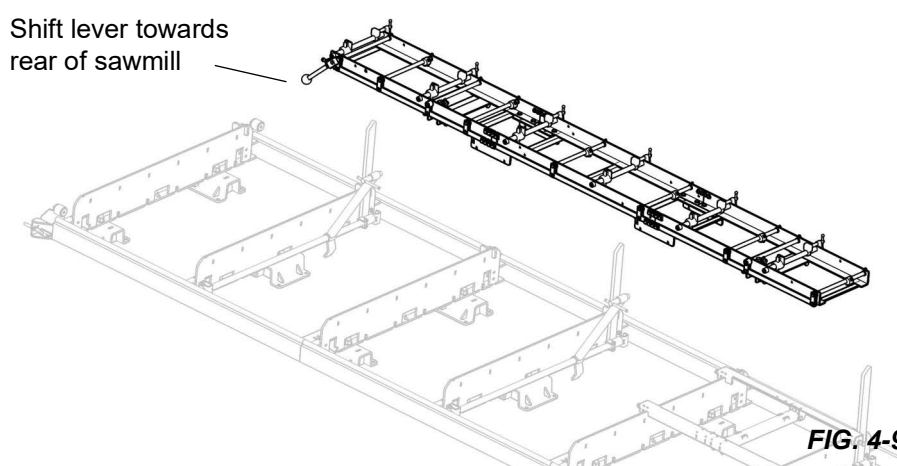


FIG. 4-9

3. Secure SLR with the bolts as shown in FIG 4-10.
- 4.

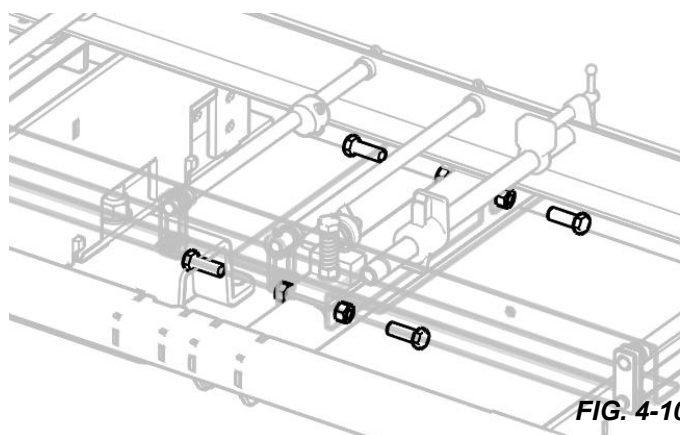


FIG. 4-10

SECTION 5 SHINGLE OPERATION

5.1 Shingle setup

Shingle Block Size			
Length	max	24"	610 mm
	min	14"	355 mm
Width	max	12"	305mm
	max	12"	305 mm

1. Install the SLR to the sawmill bed.
2. Position the **siding** taper adjustment bolts fully down (clockwise) until you can spin the siding lift rollers by hand. See FIG. 5-1.

NOTE: The lift rollers should not tilt the SLR frame when the shift handle is thrown.

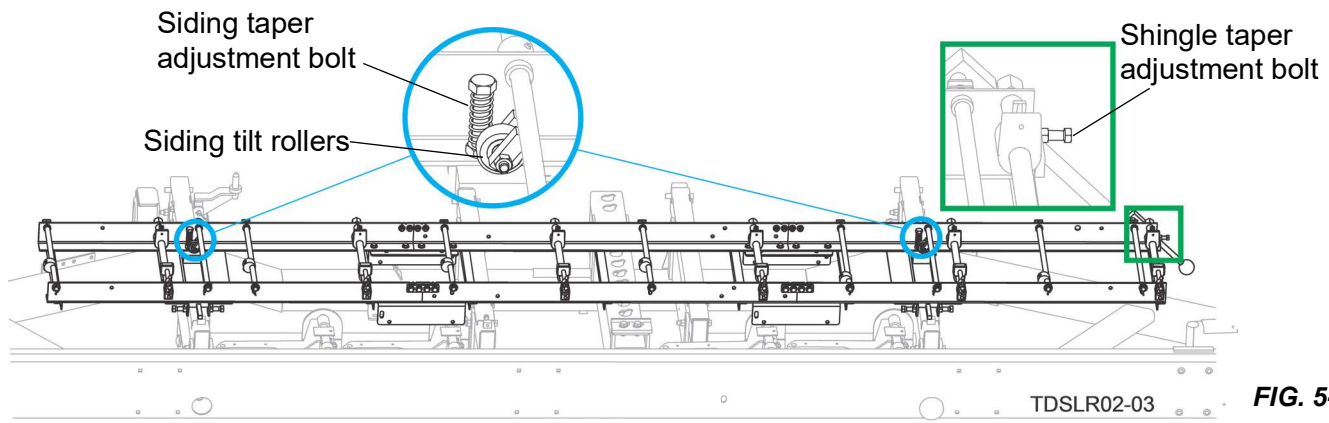


FIG. 5-1

NOTE: If not already done so, position the cams **approximately 1.5 inches away** from the frame to prevent necessary realignment between lap siding and shingle use.


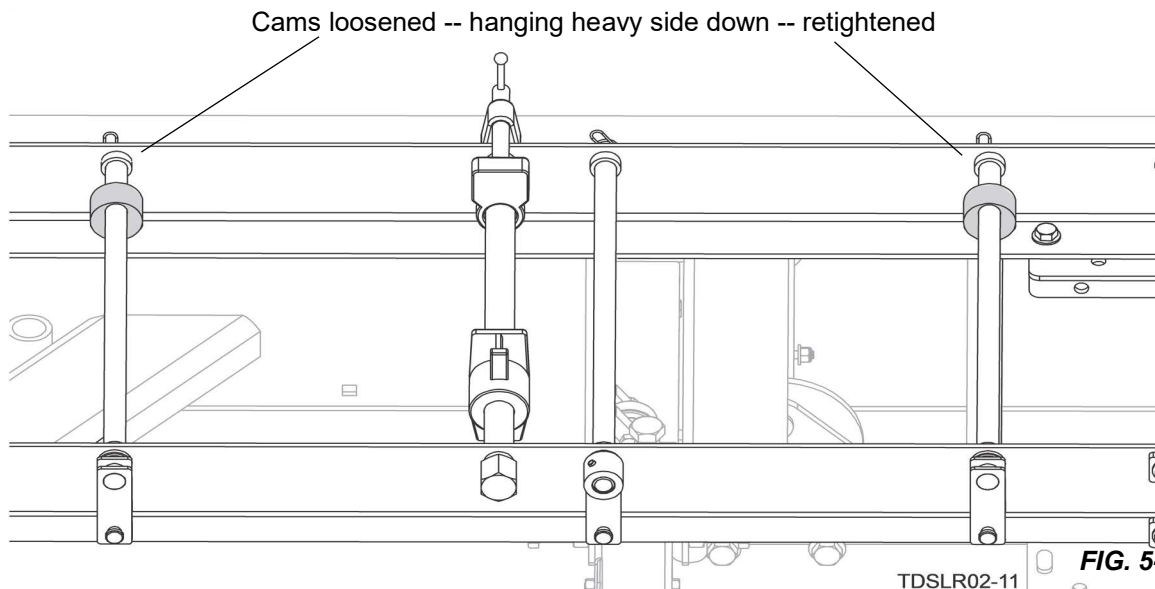


FIG. 5-2

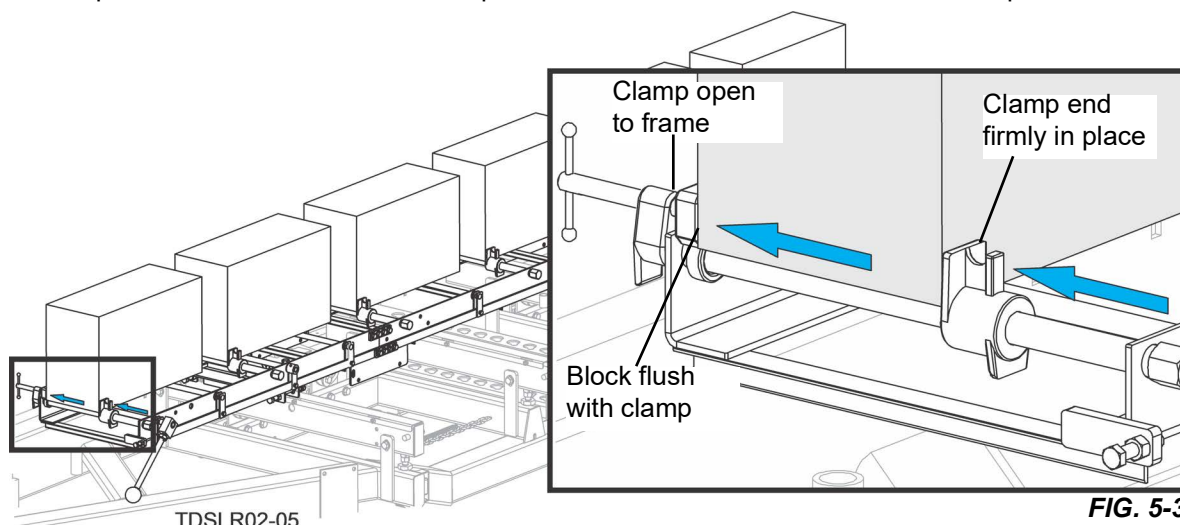Adjust the inner clamps as close to the SLR frame as possible to ensure the rear of the blocks are positioned over the



cams. See FIG. 5-3.

3. Clamp up to six shingle blocks, one over each cam. See FIG. 5-3.
4. Turn the clamp handle clockwise to firmly clamp the block in position to prevent movement during operation.
5. Lower the shift handle.
6. Make a trim cut across all the blocks to even them out.
7. Calculate the desired shingle size:

Thick end - Thin end = Cut setting

Example:

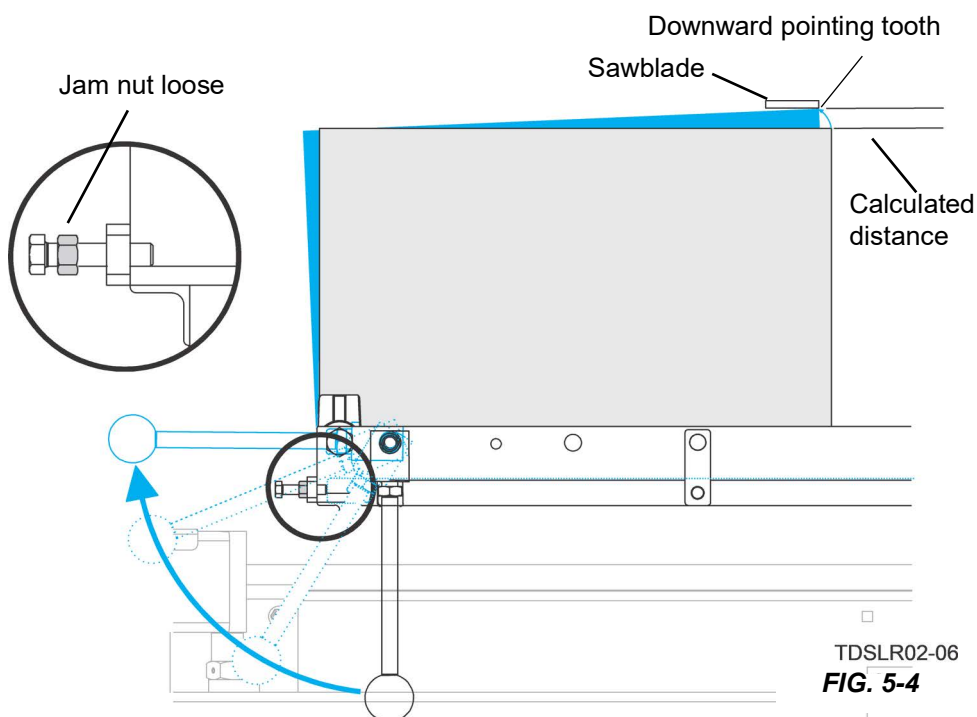
For a shingle 1/8" at the thin end, and 5/8" at the thick end:

$$5/8" - 1/8" = 4/8" (1/2")$$

Set the block tilt for 1/2".

8. Raise the blade the calculated height.
9. Set the saw blade over a trimmed block.
10. Position the blade at the end of the first block.

NOTE: Double check the blade position. Measure from a **downward pointing sawtooth**.



11. Adjust the shingle taper adjustment bolt in until it contacts the shift handle linkage.
12. Set the jam nut on the shingle taper adjustment bolt.

5.2 Shingle cutting operation



WARNING! Follow all safety and operating procedures stated in the operation manual for your mill.

1. Lower the shift handle completely downward.
2. Make one trim cut to level all the blocks.
3. Lower the blade the thickness of the **thin end** of the shingle.
4. Raise the shift handle.
5. Make a cut and return the carriage.

NOTE: Each shingle should match tapers to the setting you want. If they don't match, repeat step 2 above.

6. Push the shift handle down and lower the blade the thickness of the **thick end** of the shingle.
7. Make a cut and return the carriage.
8. Repeat steps 3 - 7 down to the heart of the cants.
9. Unclamp the cants, flip 180°, and reclamp.
10. Continue sawing down as low as the SLR clamps will allow.

SECTION 6 LAP SIDING OPERATION

6.1 Lap siding setup

To cut tapered siding, a single cant is clamped in the SLR. The siding taper adjustment bolts are adjusted up so the lifting rollers tilt the SLR frame. When the shift handle is thrown, the SLR frame tilts sideways.

NOTE: Maximum cant width is 12" (304.8 mm) and 12 ft long.

1. Install the SLR to the sawmill bed. .
2. Adjust the **shingle** taper adjustment bolt to 1/4". See FIG.5-1, [Section SECTION 5 Shingle Operation](#).

This will stop the shift handle when the lift rollers reach their maximum height.

3. Adjust the **siding** taper adjustment bolts all the way up so they do not lift the SLR frame from the bed rails.
4. Adjust the inner clamp halves inside the shingle cams to avoid interference with the cant.

NOTE: To saw cants wider than 10", the cams must be adjusted out of the way.

5. Be sure to mark each cam location so it can be returned to its original position for sawing shingles.
6. Loosen the cam set screws and slide the cam along the shaft.
7. Reset the cams according to [Section SECTION 5 Shingle Operation](#).
8. Position the cant so it is centered in the SLR frame.

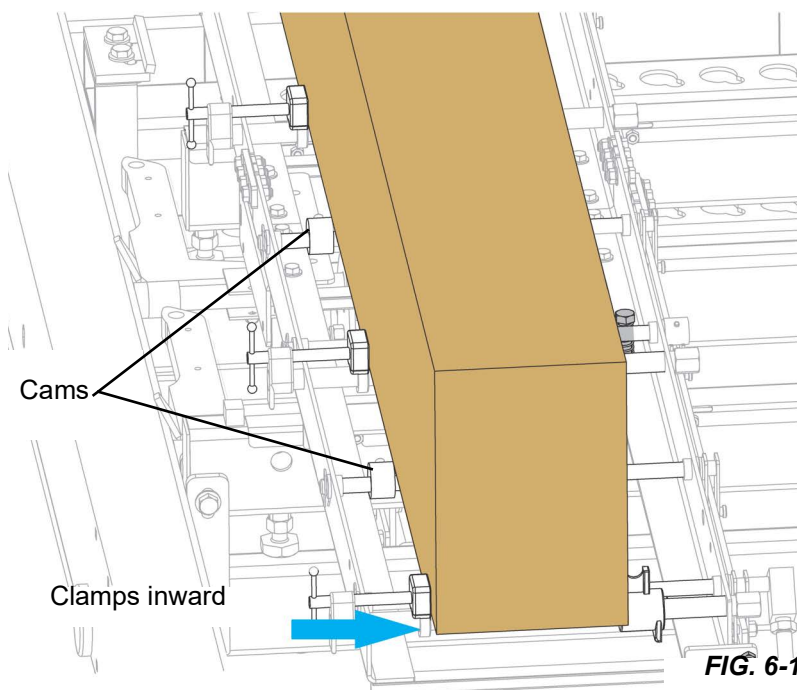


FIG. 6-1

9. Tighten the front clamp to secure one end of the cant.
10. Slide the outer clamp half in until it contacts the block.
11. Turn the clamp handle clockwise to firmly clamp the block in position.
12. Be sure the block is securely clamped so the block will not come loose while being cut.


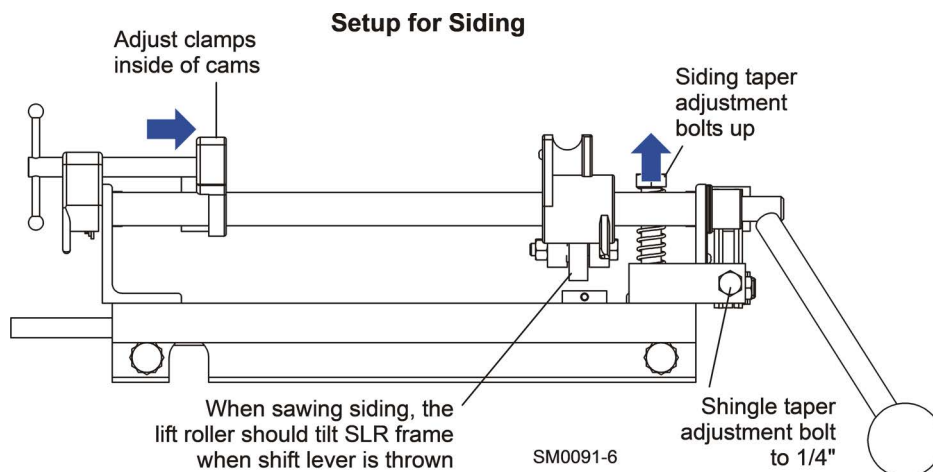


FIG. 6-2

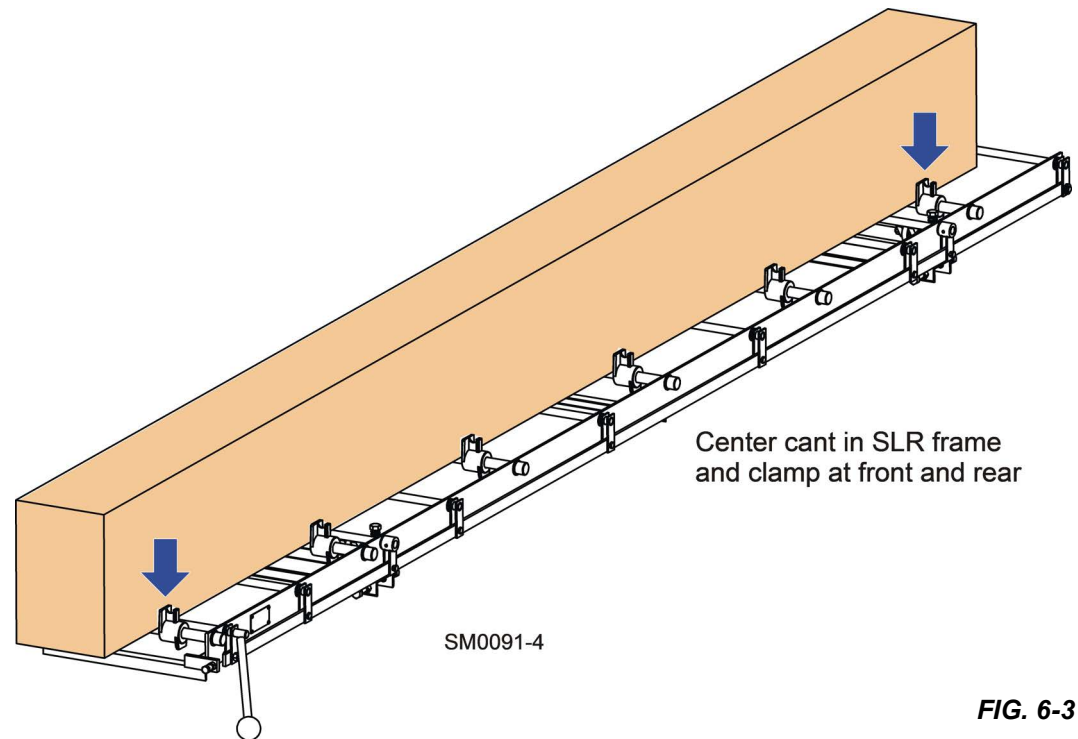13. Repeat the procedure to clamp the rear of the cant.




14. Calculate the dimensions of the siding you want to cut.

The amount of taper is limited by how wide the cant is.

Width (C)	Max. Taper (A - B)
4"	3/16"
6"	5/16"
8"	7/16"
10"	9/16"
12"	11/16"

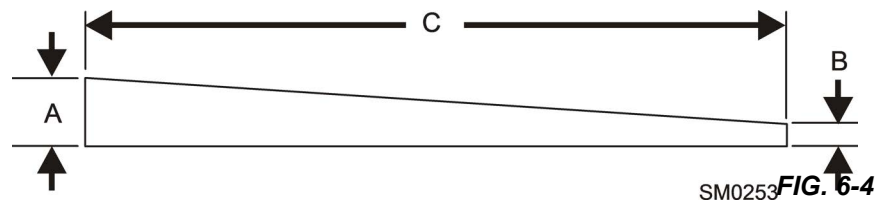TABLE 6-1



15. Before adjusting the SLR for the amount of siding taper, pull the shift handle up and make a trim cut to level the cant.
16. Move the blade so it is positioned even with the top of the cant.
17. Push the shift handle down and measure the amount of taper.
18. Adjust the front siding taper adjustment bolt down to adjust the amount of taper.

For example: If you want to cut siding that is 1/8" on one end and 5/16" on the other end, adjust the SLR for 3/16" taper ($5/16" - 1/8" = 3/16"$). Repeat this procedure at the rear of the cant with the rear siding taper adjustment bolt.



WARNING! Follow all safety and operating procedures explained in the sawmill operator's manual when using the SLR.

19. Lower the saw head the thickness of the thin end (B) of the siding.

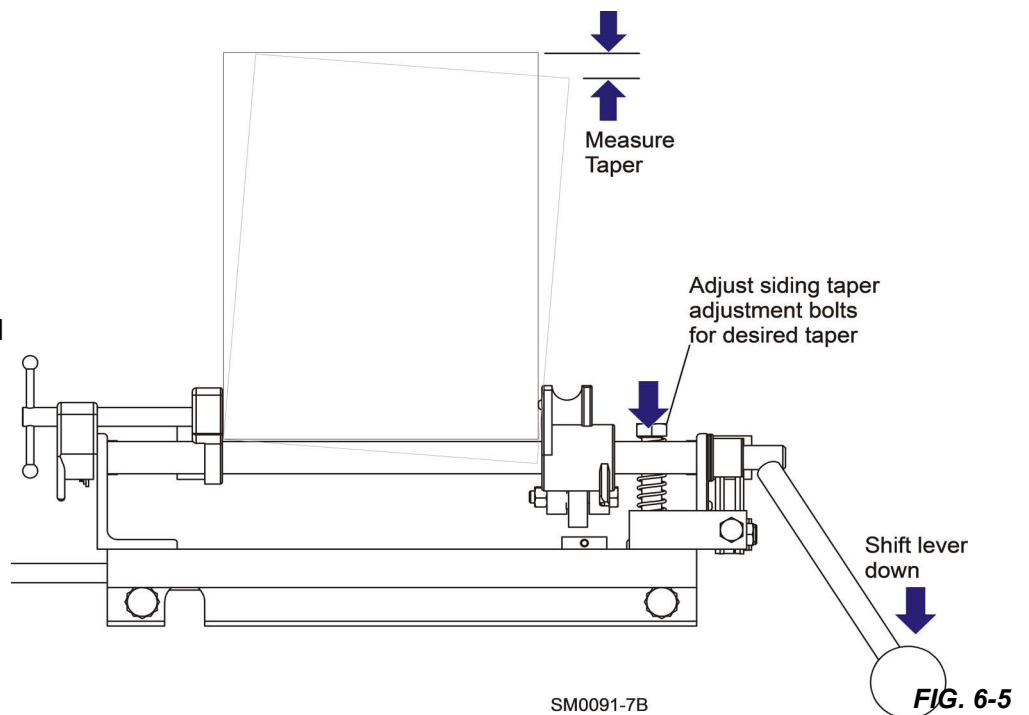
(In our example above, the first drop would be 5/16".)

20. Make a cut and return the carriage.
21. Check the taper of the board. If adjustment is necessary, repeat Step 16 above.

22. Pull the shift handle up and lower the saw head the thickness of the thick end plus the thickness of the thin end plus the thickness of the blade ($B + A + \text{Blade Thickness}$).


Allowing for a 3/16" blade thickness in the example above, the second drop would be 5/8" ($5/16" + 1/8" + 3/16"$).

23. Make a cut and return the carriage.
24. Repeat Steps 19 - 23 down to the heart of the cant.
25. Unclamp the cant, flip 180° and reclamp.
26. Continue sawing down as low as SLR clamps will allow.



SECTION 7 REPLACEMENT PARTS

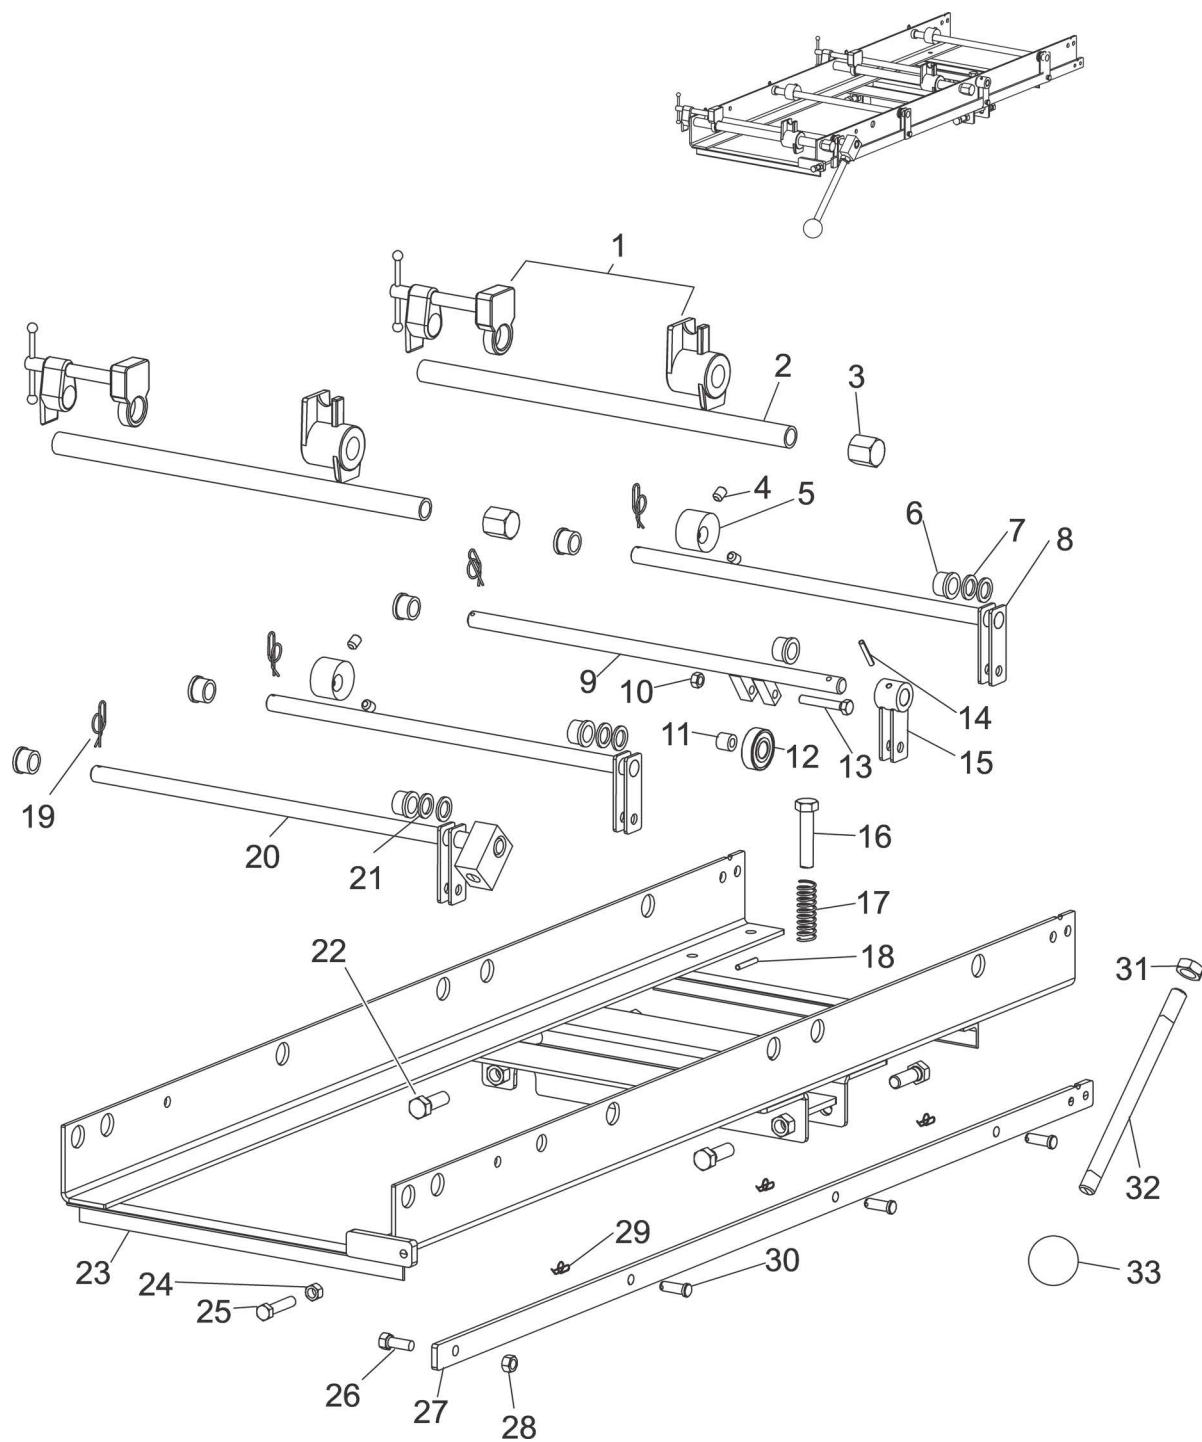
7.1 Frame 1



REF	PART #	DESCRIPTION	COMMENTS	QTY.
	128377	Assy, SLR Frame 1		1
	128378	Assy, SLR Clamp		2
1	P05144	Clamp, Pony		1
2	P05120	Shaft, Lap Siding Pony Clamp		1
3	P05146	Cap, 1/2 NPT Hex Pipe		1
	A07327	Cam Assy		2
4	F05007-12	Screw, 3/8-16x1/2 SH Cup Pt Set		2


REF	PART #	DESCRIPTION	COMMENTS	QTY.
5	S05129	Cam, SLR		1
6	105908	Bushing, .635x7/8x1/2 Bronze		8
	A07329	Shaft, Cam Shakemaker		2
7	F05011-19	Washer, 5/8x15/16x.094 Nylon		2
8	W05138	Weldment, Cam Shaft		1
	110275	Assy, SLR Roller Bearing Arm		1
9	110273	Weldment, SLR Roller Shaft		1
10	F05010-6	Nut, 5/16-18 Swaged Hex		1
11	S05142	Sleeve, SLR Bearing		1
12	P06030-1	Bearing, 5/8x1.5748x.4724		1
13	F05006-13	Bolt, 5/16-18x2 FT HH		1
14	F05012-16	Pin, 3/16x1 1/4 Roll		1
15	W05136	Wldmt, Roller Sleeve Arm		1
16	F05008-124	Bolt, 1/2-13x2-1/4 HH Zn Gr2		2
17	P05155	Spring		1
18	F05012-16	Pin, 3/16x1 1/4 Roll		1
19	F05012-135	Pin, 5/8 In Clevis Retaining		4
20	130815	Weldment, Handle Shaft		1
21	F05011-19	Washer, 5/8x15/16x.094 Nylon		2
22	F05008-33	Bolt, 1/2-13x1 1/2 HH Gr5		8
23	128319	Weldment, SLR Frame 1		1
24	F05010-1	Nut, 3/8-16 Hex		1
25	F05007-129	Bolt, 3/8-16x1 3/4 FT Gr5		1
26	F05007-7	Bolt, 3/8-16x1 HHC		1
27	128325	Plate, SLR Link Arm 1		1
28	F05010-25	Nut, 3/8-16 Swaged Lock		1
29	F05012-136	Pin, 3/8 In Clevis Retaining		3
30	F05012-8	Pin, 3/8x1 3/32 Clevis Zinc Plated		3
	130816	Assembly, Handle SLR		1
31	F05010-11	Nut, 5/8-18 Hex Jam		1
32	130814	Round, SLR Handle		1
33	P04211	Knob, 5/8-18 Ball		1

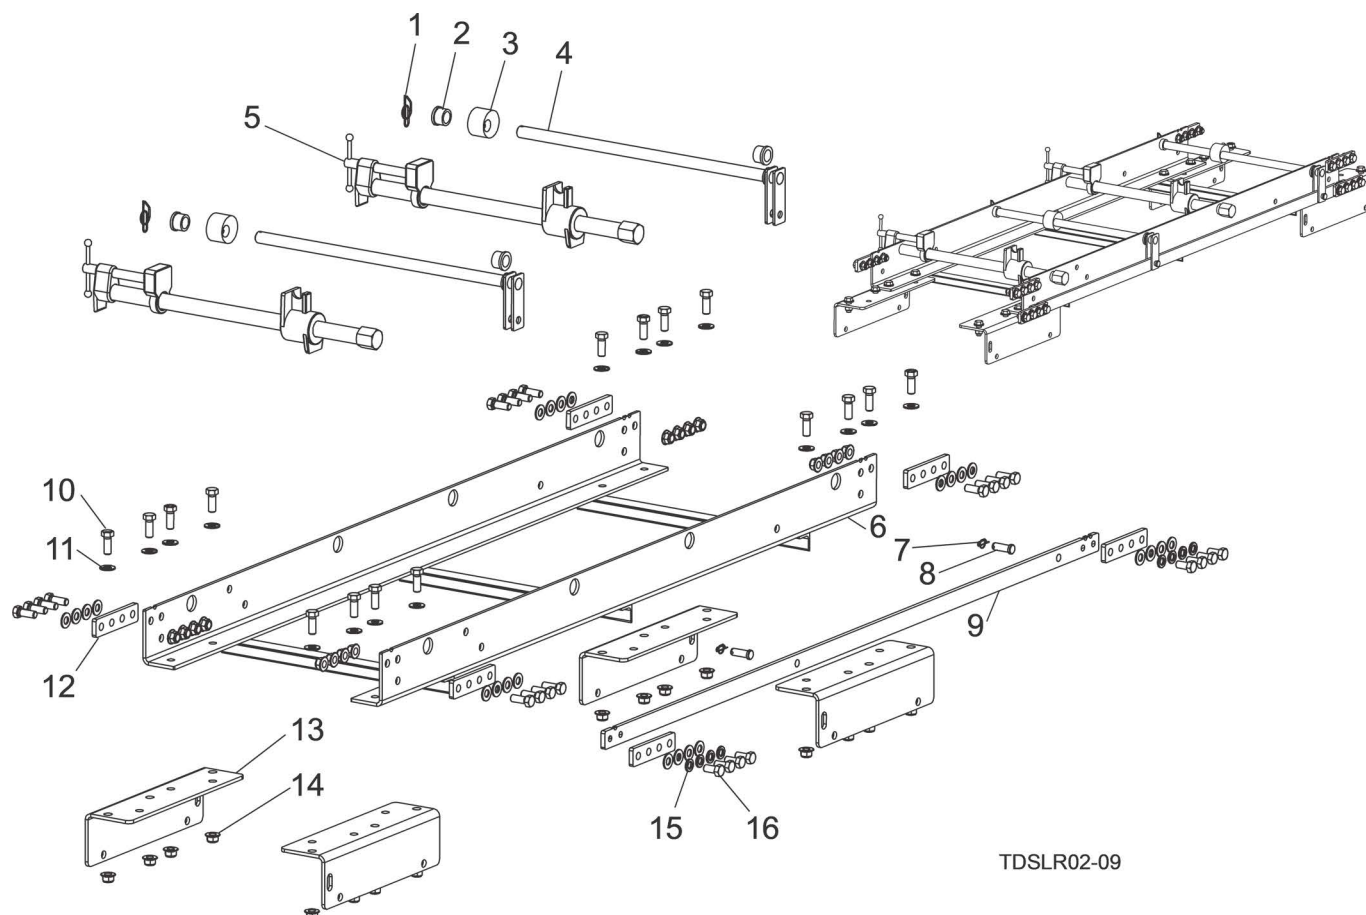7.2 Frame 2




REF	PART #	DESCRIPTION	COMMENTS	QTY.
	128379	Assy, SLR Frame 2		1
1	F05012-135	Pin, 5/8 in Clevis Retaining		2
2	105908	Bushing, .635x7/8x1/2 Bronze		4
3	A07327	Cam Assy	(See Section 7.1)	2
4	A07329	Shaft, Cam Shakemaker	(See Section 7.1)	2
5	128378	Assy, SLR Clamp	(See Section 7.1)	2
6	128320	Weldment, SLR Frame 2		1
7	F05012-136	Pin, 3/8 in Clevis Retaining		2
8	F05012-8	Pin, 3/8x1 3/32 Clevis Zinc Plated		2
9	128326	Plate, SLR Link Arm 2		1
10	F05007-87	Bolt, 3/8-16x1 HH Gr5		32
11	F05011-3	Washer, 3/8 Flat SAE		40
12	128328	Plate SLR Link Arm Joint		6
13	128311	Plate, SLR Brace		4
14	F05010-222	Nut, 3/8-16 Flanged Hex Nylock		32
15	F05011-4	Washer, 3/8 Split Lock		8
16	F05007-118	Bolt, 3/8-16x3/4 HH Gr5		8

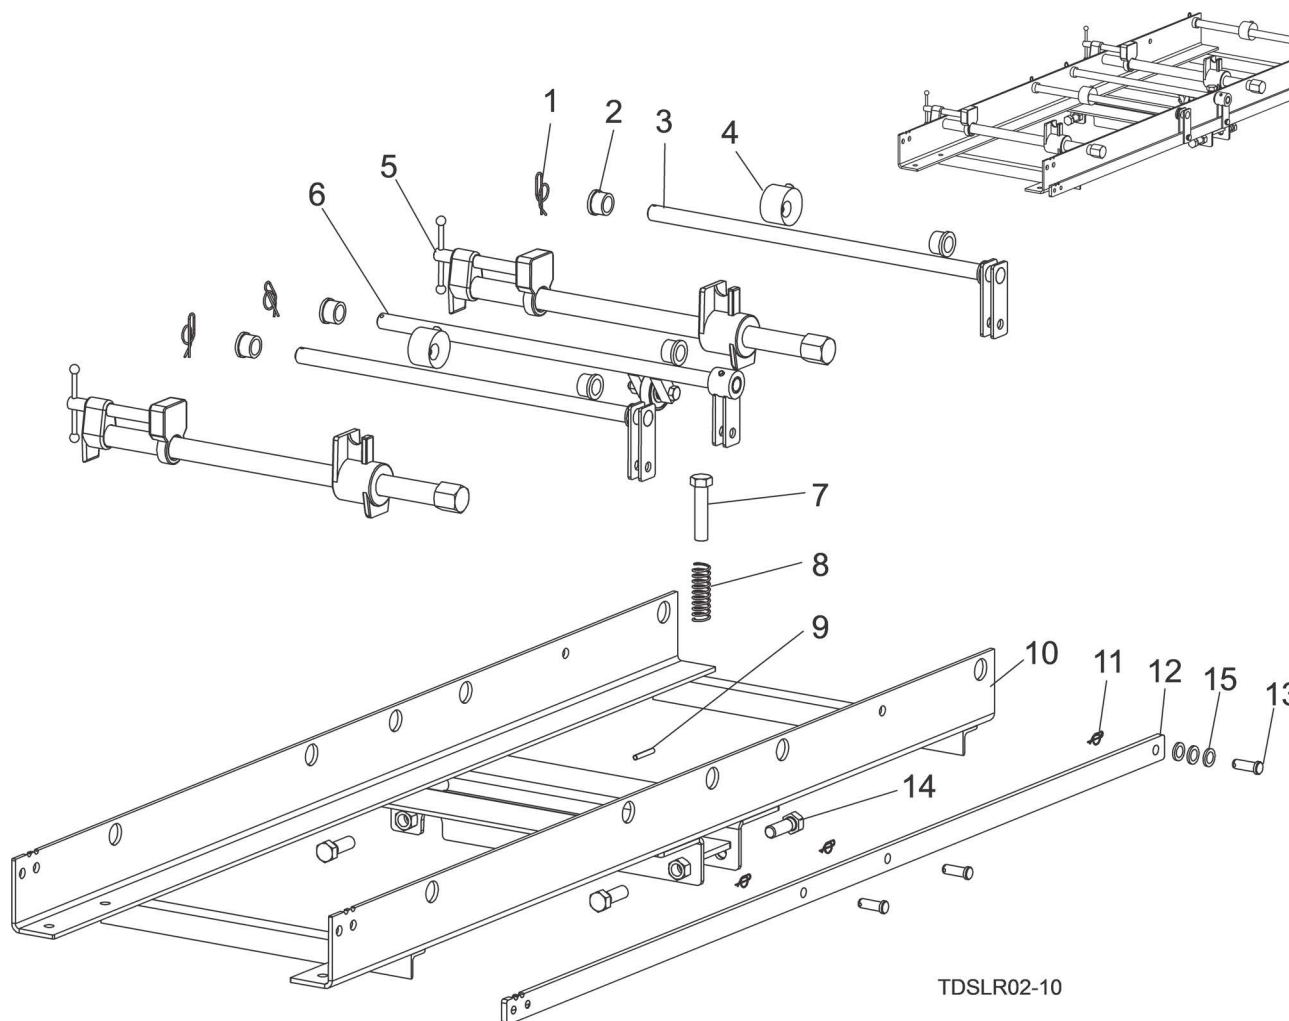7.3 Frame 3



REF	PART #	DESCRIPTION	COMMENTS	QTY.
	128380	Assy, SLR Frame 3		1
1	F05012-135	Pin, 5/8 in Clevis Retaining		3
2	105908	Bushing, .635x7/8x1/2 Bronze		6
3	A07329	Shaft, Cam Shakemaker	(See Section 7.1)	2
4	A07327	Cam Assy	(See Section 7.1)	2
5	128378	Assy, SLR Clamp	(See Section 7.1)	2
6	110275	Assy, SLR Roller Bearing Arm	(See Section 7.1)	1
7	F05008-124	Bolt, 1/2-13x2-1/4 HH Zn Gr2		1
8	P05155	Spring		1
9	F05012-16	Pin, 3/16x1 1/4 Roll		1
10	128323	Weldment, SLR Frame 3		1
11	F05012-136	Pin, 3/8 in Clevis Retaining		3
12	128327	Plate, SLR Link Arm 3		1
13	F05012-8	Pin, 3/8x1 3/32 Clevis Zinc Plated		3
14	F05008-33	Bolt, 1/2-13x1 1/2 HH Gr5		4
15	F05011-3	Washer, 3/8 Flat SAE	F05011-3 added after 10/28/2021 per ECN 38204.	3

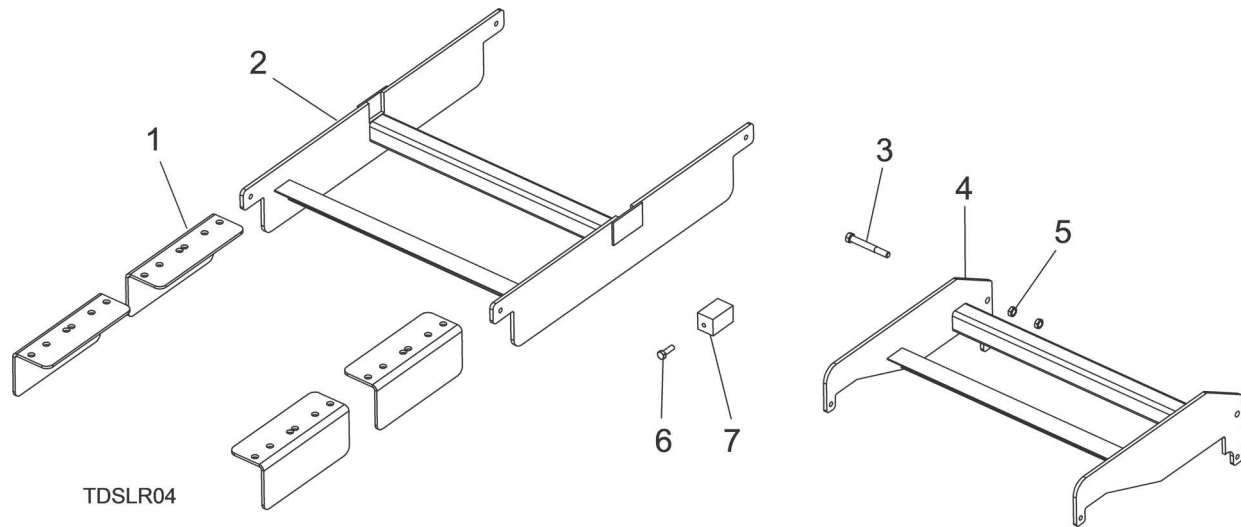
7.4 LT15 Adapters



REF	PART #	DESCRIPTION	COMMENTS	QTY.
	SLRKIT-LT15.1	Mount Assy, SLR/ LT15 Bed Rev. G.00	Used by all LT15 Wide	1
1	130835	Plate, SLR LT15		4
2	006910	Mount Wldmt, 5x2 LT15 SLR		1
	SLRKIT-LT15	Mount Assy, SLR/ LT15 Bed	Rev E.00 to F.00	1
3	F05007-73	Bolt, 3/8-16x3 HH Gr5		1
4	047693	Mount Weldment, LT15 SLR		1
5	F05010-29	Nut, 3/8-16 Jam		2
6	F05006-27	Bolt, 5/16-18x1 Gr5 HH		1
7	047694	Block, SLR Stop		1


7.5 LX25/LX50/LX55 Adapter

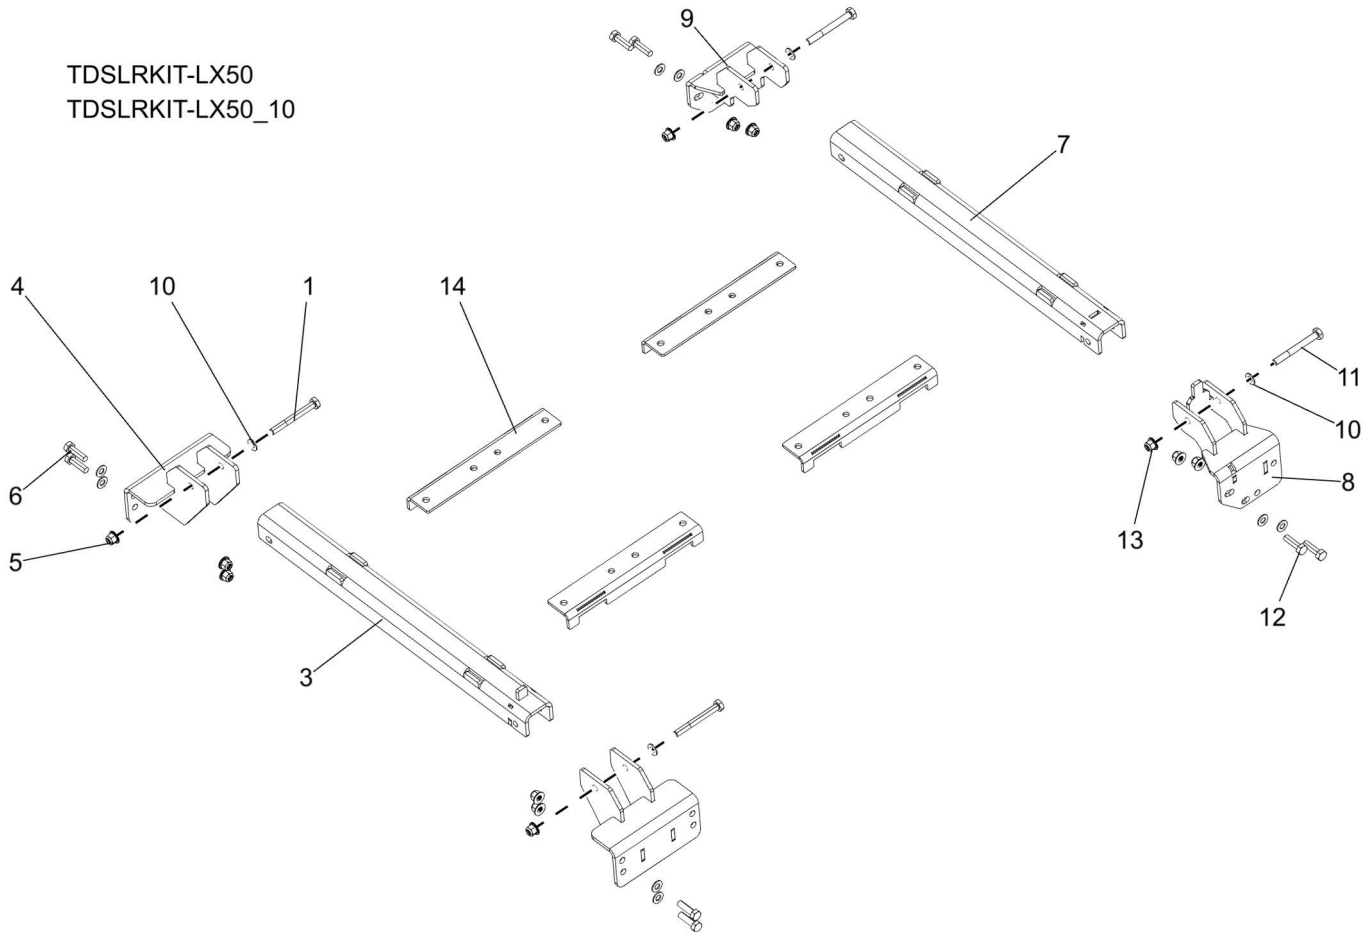TDSLRKIT-LX50
TDSLRKIT-LX50_10



REF	PART #	DESCRIPTION	COMMENTS	QTY.
	SLRKIT-LX50	Assy, SLR-Mizer LX50 Install. Kit		1
	117989	Assy, Front Kit		1
1	F05022-22	Bolt, M10-1.5x90 HH Class 8		2
2	F05011-134	Washer, M10 Flat		6
3	117990	Wldmnt, Brace		1
4	117994	Wldmnt, Front Support		2
5	F05027-47	Nut, M10-1.5 Flanged Nylon Lock		6
6	F05022-18	Bolt, M10-1.50 x 35MM HH Gr 8.8		4
	117997	Assy, Rear Kit		1
7	117990	Wldmnt, Brace		1
8	140234	Wldmnt, Right Rear Support		1
9	140237	Wldmnt, Left Rear Support		2
10	F05011-134	Washer, M10 Flat		6
11	F05022-22	Bolt, M10-1.5x90 HH Class 8		2
12	F05022-18	Bolt, M10-1.50 x 35MM HH Gr 8.8		4
13	F05027-47	Nut, M10-1.5 Flanged Nylon Lock		6
14	118120	Bracket, SLR Brace		4

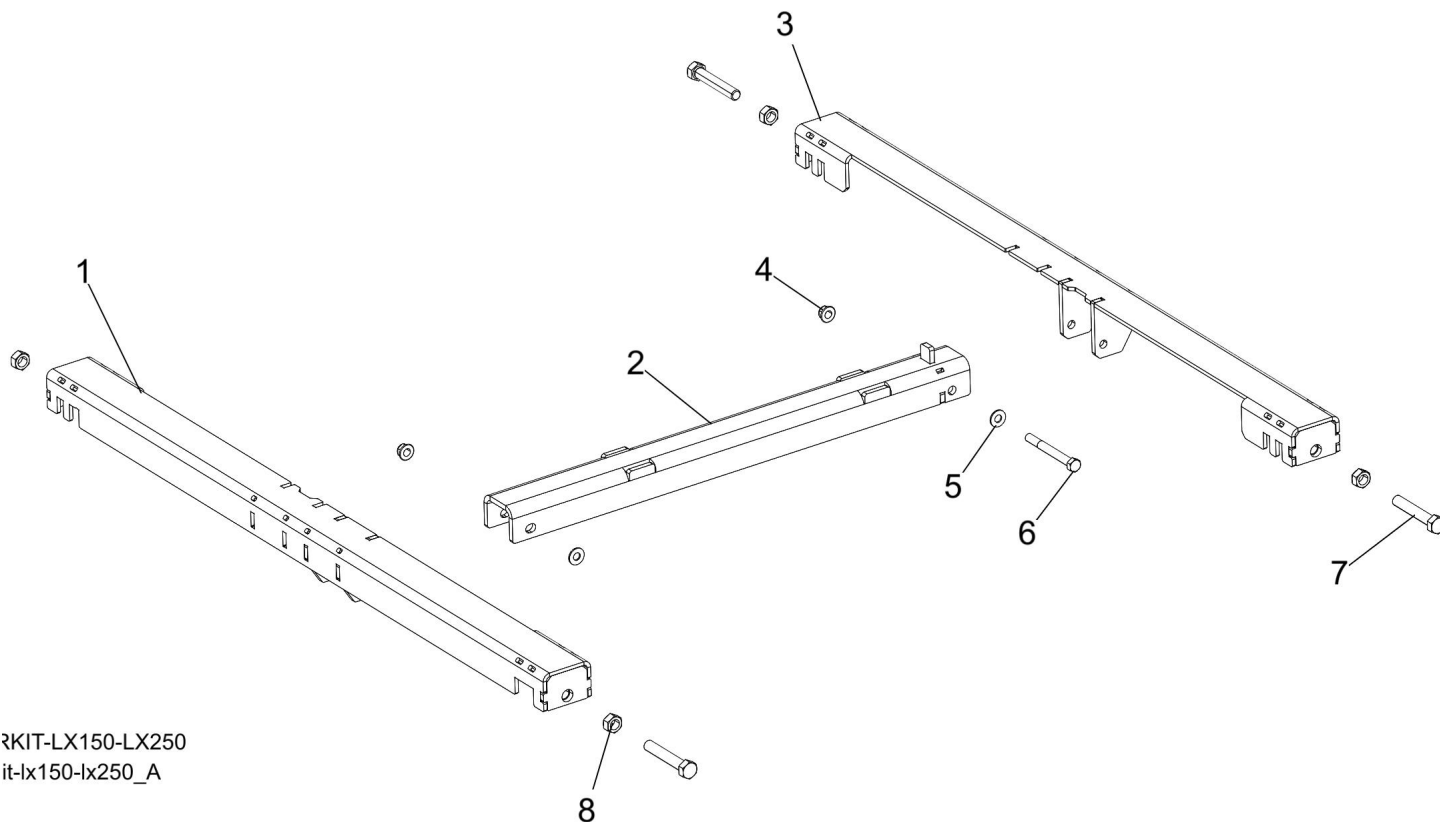
7.6 LX 150/250 Adapter



REF	PART #	DESCRIPTION	COMMENTS	QTY.
	SLRKIT-LX150-LX250	Assy, SLR LX150/250 Install. Kit		1
1	118119	Wldmnt, Left Support		1
2	117990	Wldmnt, Brace		1
3	118115	Wldmnt, Right Support		1
4	F05010-222	Nut, 3/8-16 Flanged Hex Nylock		2
5	F05011-61	Washer, 3/8 SAE Flat		2
6	F05004-123	Bolt, 3/8-16X3 1/2 HH Gr5		2
7	F05008-113	Bolt, 1/2-13x3 HH FT G8		4
8	F05010-35	NUT, 1/2-13 FREE HEX, ZINC		4


7.7 LT15 Auxiliary Bed Rail

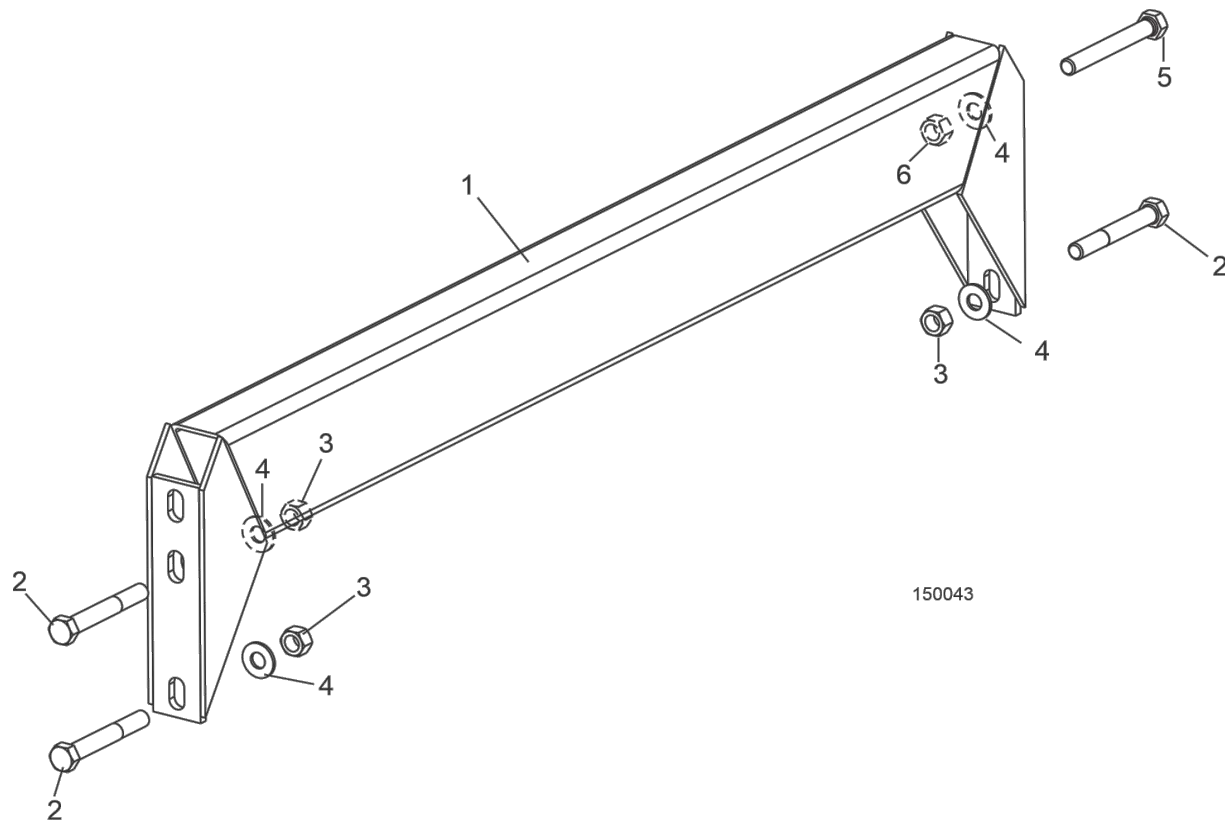Used for LT15 bed sections revisions A.00 through E.3.03.



REF	PART #	DESCRIPTION	COMMENTS	QTY.
	016037	Rail Kit, LT15 SLR Aux Bed Railw/Blk		1
1	016036	Rail Weldment, LT15 Aux Bed W/Block		1
2	F05007-29	Screw, 3/8-16x2 3/4 HHC		3
3	F05007-1	Bolt, 3/8-16x3 FT HH		1
4	F05011-3	Washer, 3/8 Flat SAE		4
5	F05010-25	Nut, 3/8-16 Swaged Lock		4
	016037-829	Instr. Sheet, Aux Bed Rail W/Block		1

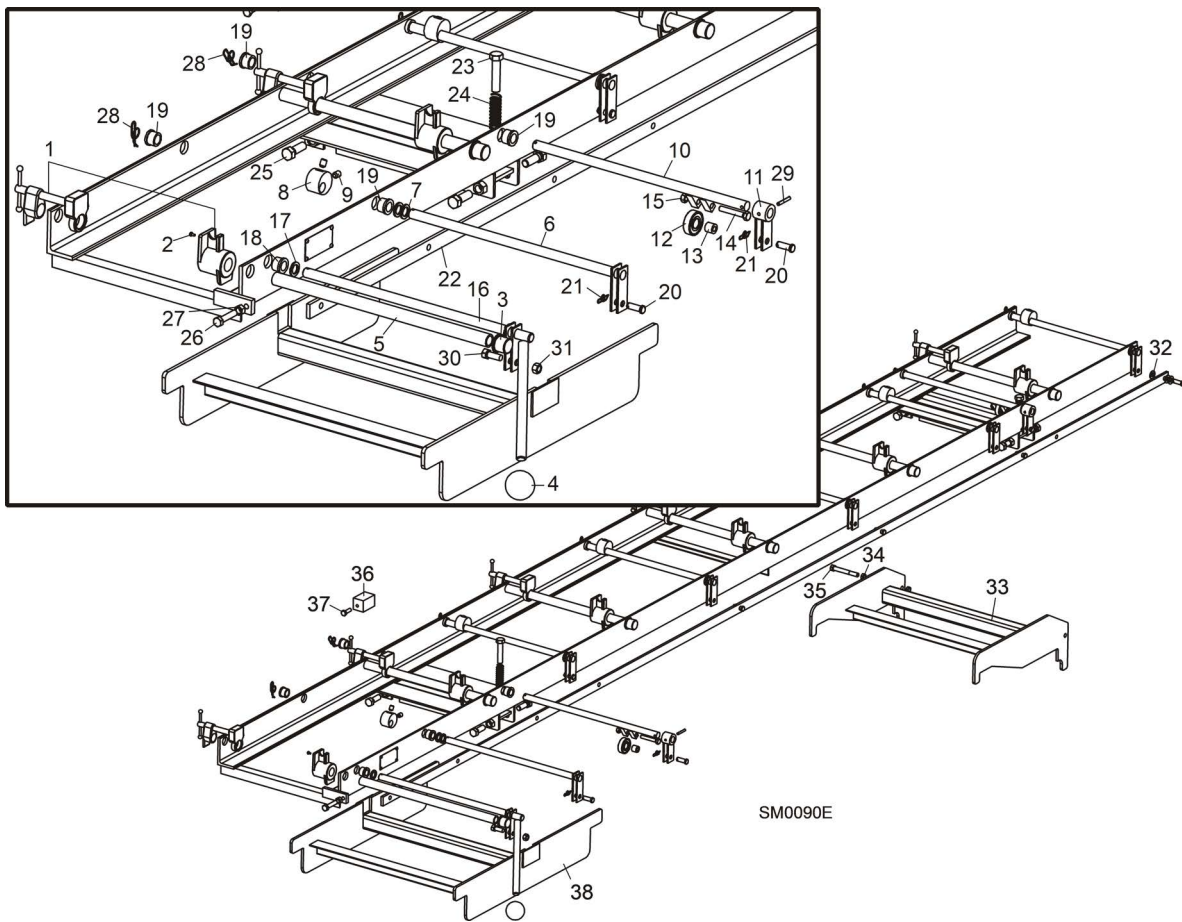7.8 Shingle Lap Siding Resaw (revision A.00-F.01)



SM0090E

REF	PART #	DESCRIPTION	COMMENTS	QTY.
	SLR	SHINGLE/LAP SIDING OPTION, COMPLETE		1
	A05157	Clamp Assembly, SLR Pony		6
1	P05144	Clamp, SLR Pony	Available in assemblies only.	1
2	F05015-6	Screw, #6 X 1/4" Drive		1
3	P05146	Cap, 1/2" Pipe End		6
4	P04211	Knob, Plastic Round		1
5	P05120	Shaft, Pony Clamp		6
	A07324	Frame, Shingle/lap Siding Option	Available in assemblies only.	1
	A07329	Cam Shaft Assembly		6
6	W05138	Shaft, SLR Cam	Available in assemblies only.	1
7	F05011-19	Washer, 5/8 I.d. X .100 Thick Nylon		1
	A07327	Cam Roller Assembly		6
8	S05129	Roller, SLR Cam	Available in assemblies only.	1
9	F05007-12	Screw, 3/8-16 X 1/2" Socket Head Cup Point		2
	A07326	Roller Bearing Shaft Assembly		2
10	W05139	Shaft, SLR Roller Bearing	Available in assemblies only.	1
11	W05136	Sleeve, Roller Shaft Pivot		1
12	P06030-1	Bearing, 5/8" 6203-2NSL		1
13	S05142	Bushing, SLR Roller Bearing		1

REF	PART #	DESCRIPTION	COMMENTS	QTY.
14	F05006-13	Bolt, 5/16-18 X 2" Hex Head Full Thread		1
15	F05010-6	Nut, 5/16-18 Hex Lock		1
	016035	Handle Assembly, SLR Replacement		1
	A07328	Handle Shaft Assembly	Available in assemblies only.	1
16	W04977	Shaft, SLR Handle	Available in assemblies only.	1
17	F05011-19	Washer, 5/8" X .100 Thick Nylon		2
18	105908	Bushing, .635x7/8x1/2 Bronz		1
19	105908	Bushing, .635x7/8x1/2 Bronz		17
20	F05012-8	Pin, 3/8" X 1 3/32" Clevis		8
21	F05012-136	Pin, 3/8" Clevis Retaining	Replaced F05012-9 (11/10)	8
22	S05140	Link Arm, SLR		1
23	F05008-2	Bolt, 1/2-13 X 2 1/4" Hex Head Full Thread		2
24	P05155	Spring, SLR Adjustment		2
25	F05008-3	Bolt, 1/2-13 X 1 1/2" Hex Head		8
26	F05007-19	Bolt, 3/8-16 X 1 3/4" Hex Head Full Thread		1
27	F05010-1	Nut, 3/8-16 Hex		1
28	F05012-1	Pin, 1/8" X 1" Cotter		9
29	F05012-135	Pin, 5/8" Clevis Retaining	Replaced F05012-16 (11/10)	2
30	F05007-7	Bolt, 3/8-16 x 1" Hex Head		2
31	F05010-25	Nut, 3/8-16 2-way Self-locking		2
32	F05011-3	Washer, 3/8" Flat		3
	SLRKIT-LT15	INSTALL KIT, LT15 SLR (Required for LT15 Rev. E4.00 - E6.03, Bed Rev. E.00 - F.00)		1
33	047693	Mount Weldment, LT15 SLR	Mount Weldment 047693 modified 10/07 to allow SLR to mount to new Rev. F.00 bed assemblies (LT15 Rev. E6.03). Mount will still work on old-style bed assemblies.	1
34	F05010-29	Nut, 3/8-16 Hex Jam		2
35	F05007-73	Bolt, 3/8-16 x 3" Hex Head Grade 5		1
36	047694	Block, SLR Stop		1
37	F05006-27	Bolt, 5/16-18 x 1" Hex Head Grade 5		1
38	SLRKIT-LT15.1	INSTALL KIT, LT15 SLR	(Required for LT15 Rev. E6.04+, Bed Rev. G.00+)	1