



# WM4000 Decal Placement Guide

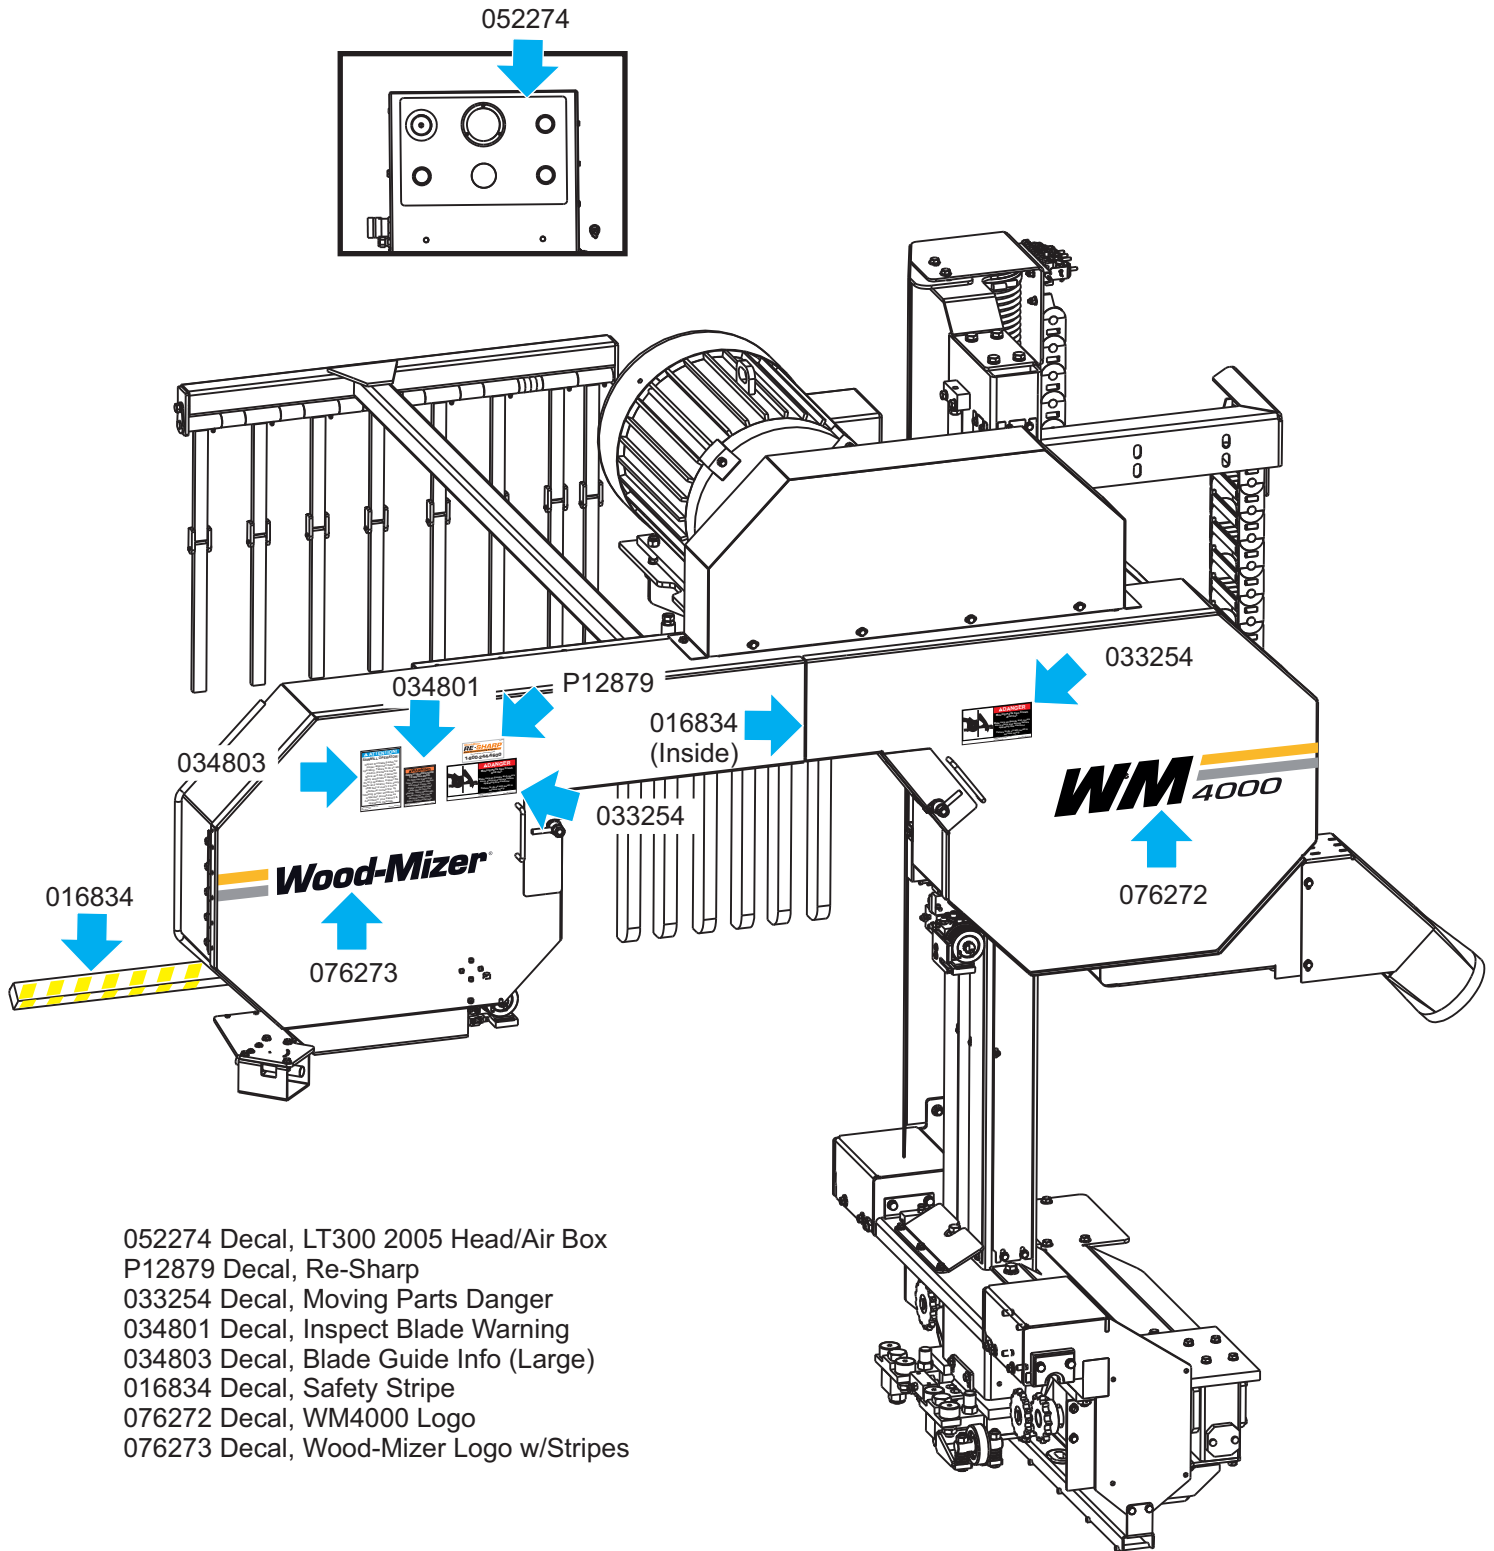


- 052274 Decal, LT300 2005 Head/Air Box
- P12879 Decal, Re-Sharp
- 033254 Decal, Moving Parts Danger
- 034801 Decal, Inspect Blade Warning
- 034803 Decal, Blade Guide Info (Large)
- 016834 Decal, Safety Stripe
- 076272 Decal, WM4000 Logo
- 076273 Decal, Wood-Mizer Logo w/Stripes

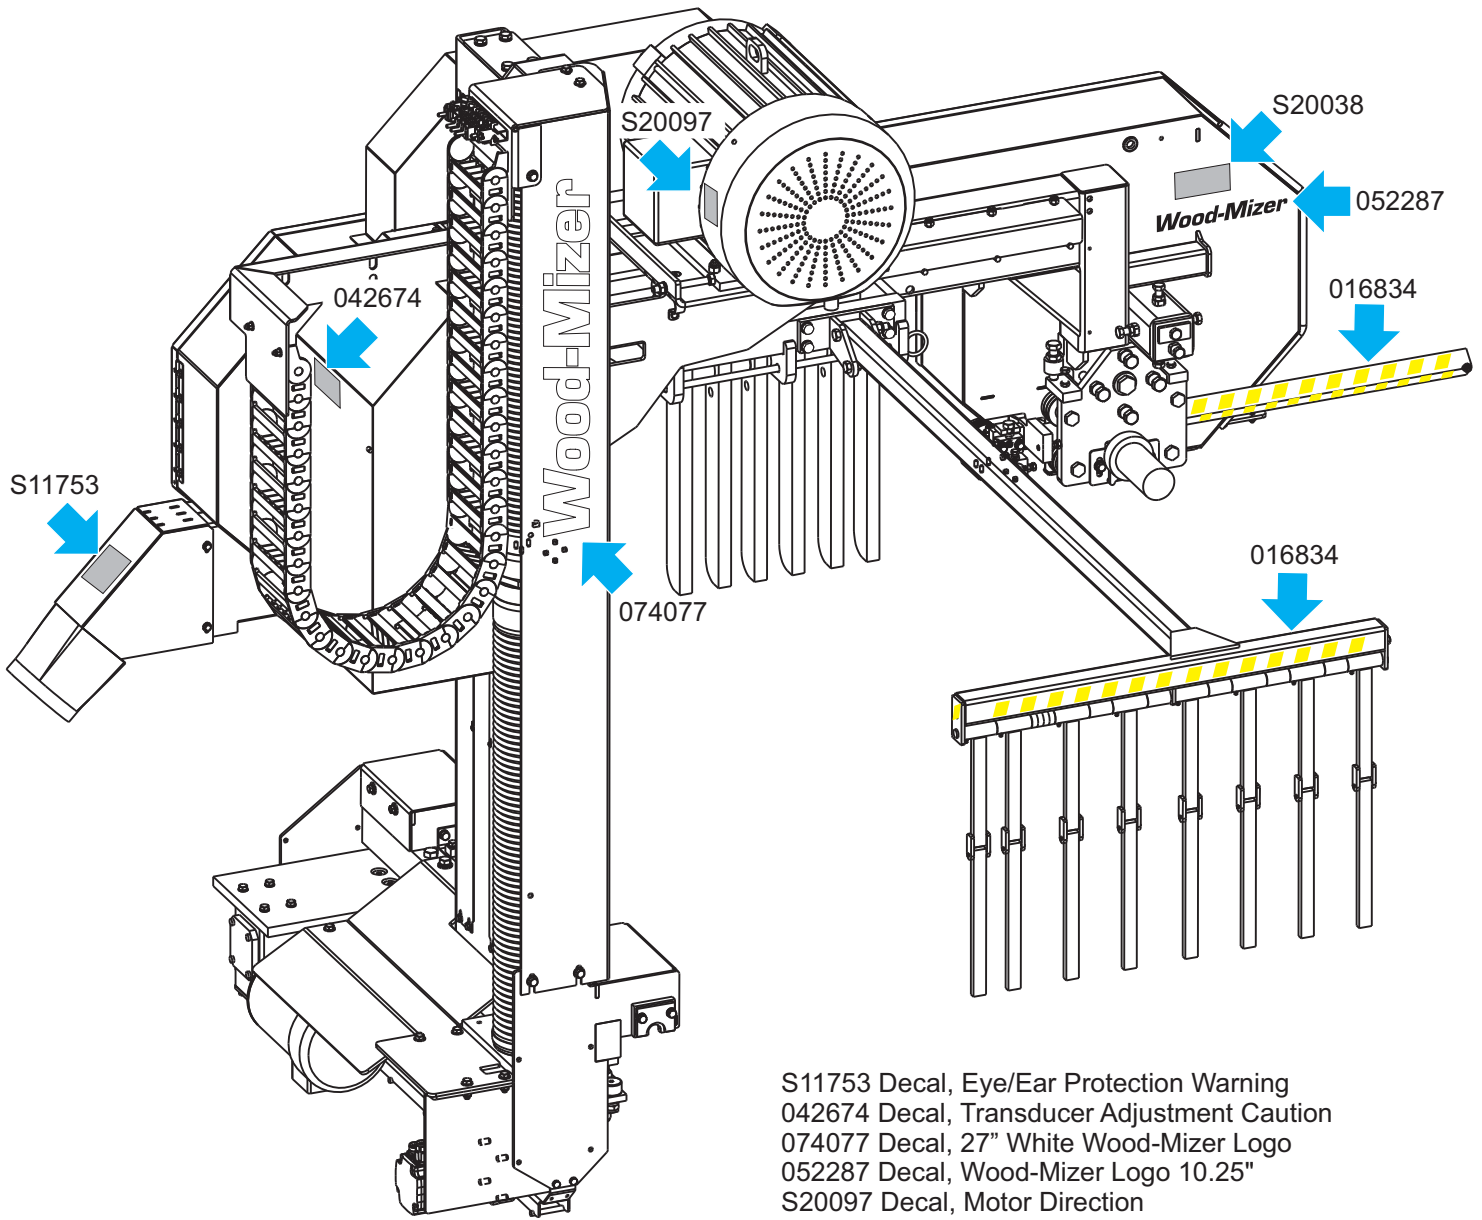


- S11753 Decal, Eye/Ear Protection Warning
- 042674 Decal, Transducer Adjustment Caution
- 074077 Decal, 27" White Wood-Mizer Logo
- 052287 Decal, Wood-Mizer Logo 10.25"
- S20097 Decal, Motor Direction
- S20038 Plate, Name
- 016834 Decal, Safety Stripe

## WM4000 Decal Placement Guide


S09851 Decal, Keep Away Danger  
S20038 Plate, Name

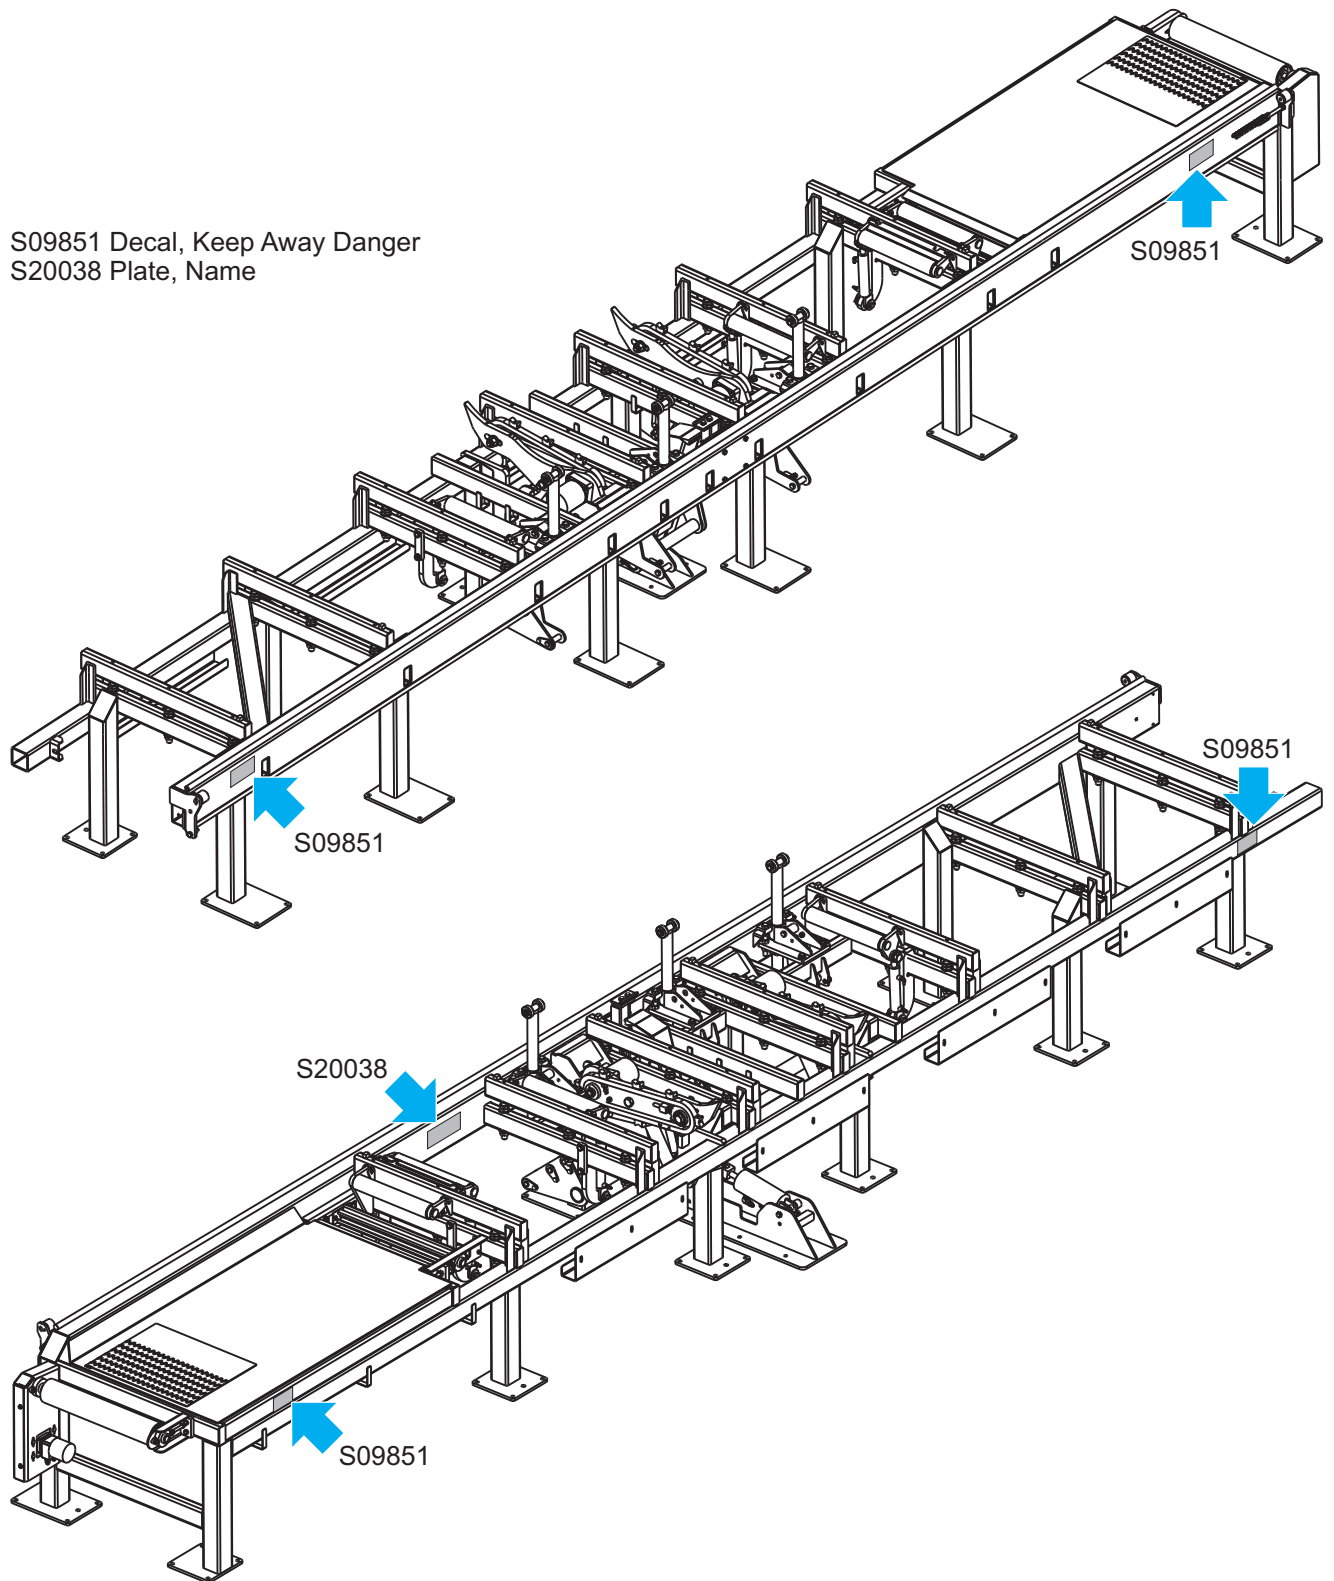

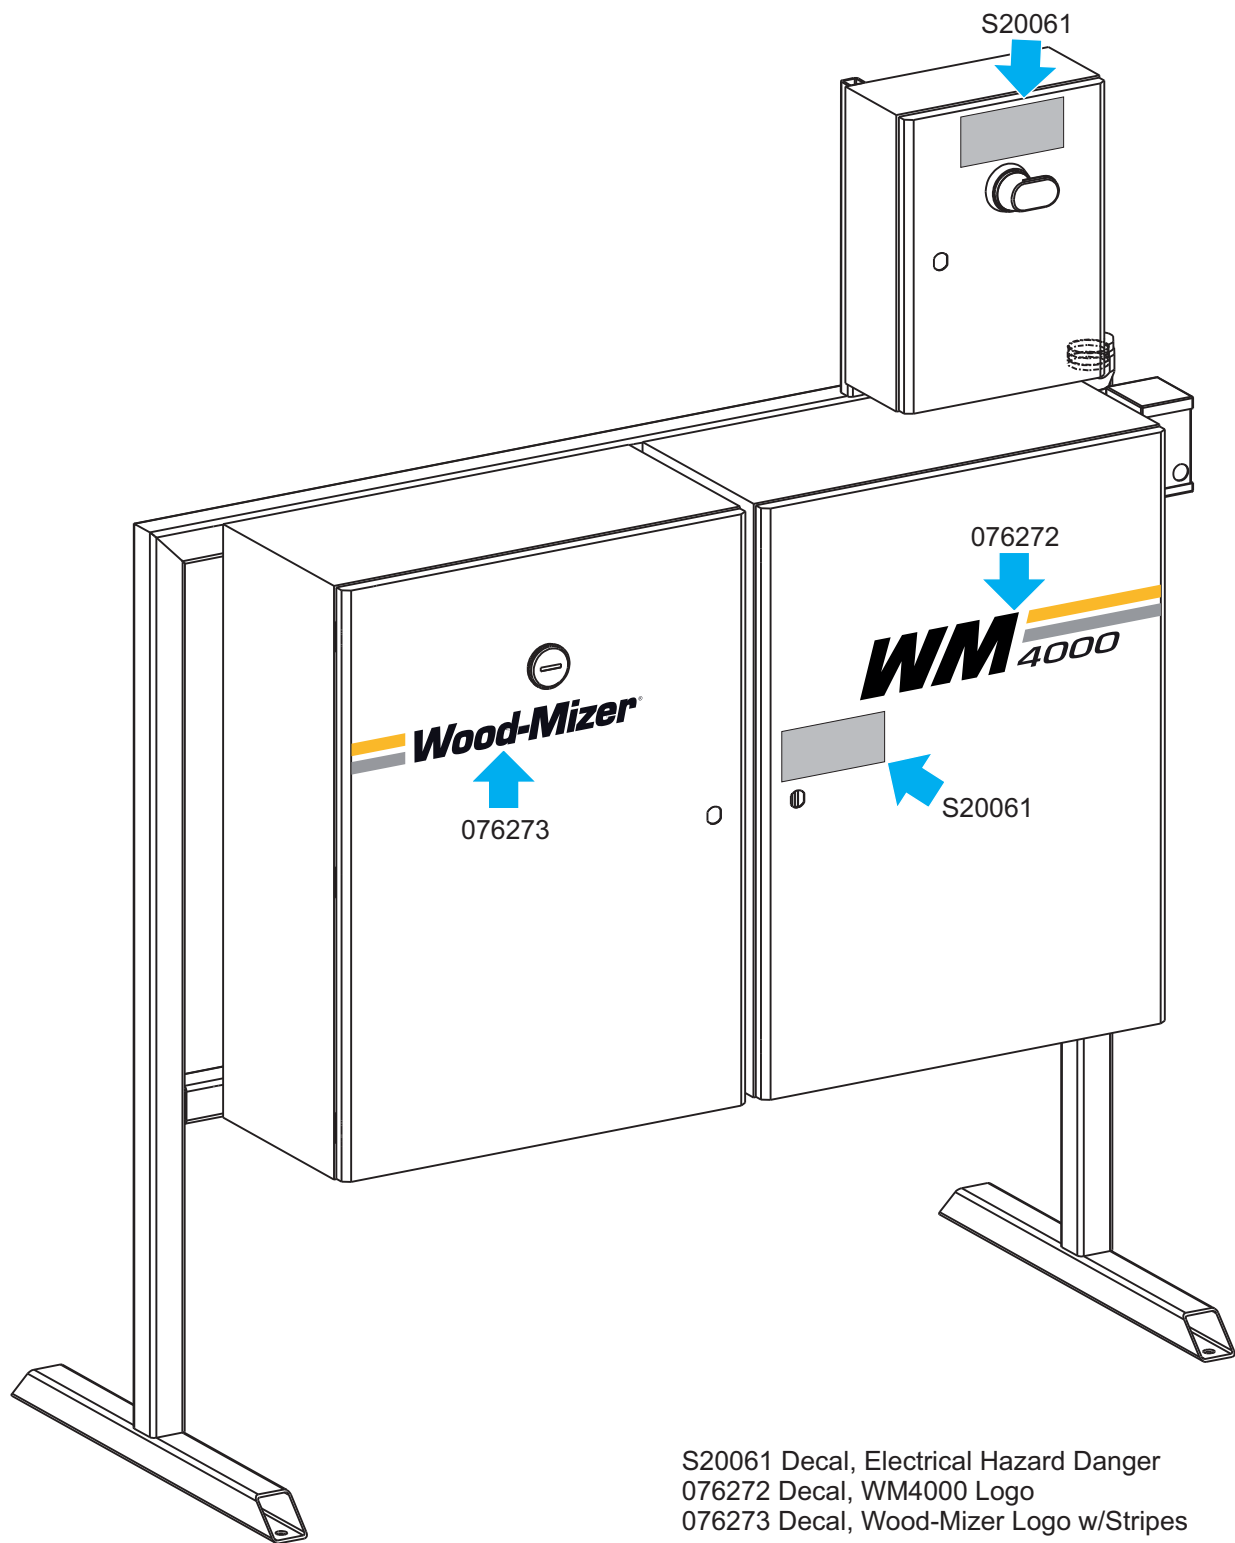


S20061 Decal, Electrical Hazard Danger  
076272 Decal, WM4000 Logo  
076273 Decal, Wood-Mizer Logo w/Stripes

## WM4000 Decal Placement Guide

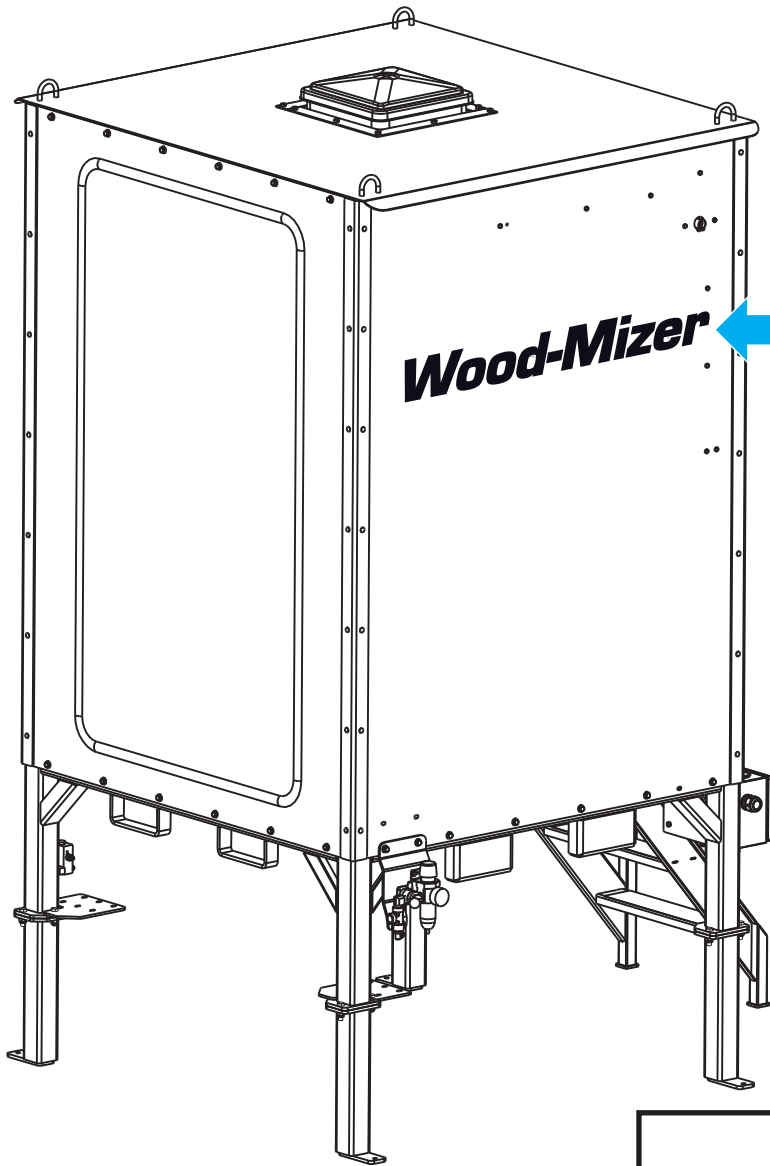

**Wood-Mizer** ← 076274

076274 Decal, 40" Black Wood-Mizer Logo

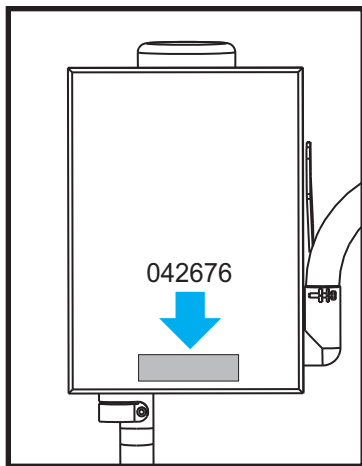


042676  
↓

042676 Decal, Cab Voltage  
(Located on Disconnect Switch inside Cab)



068208

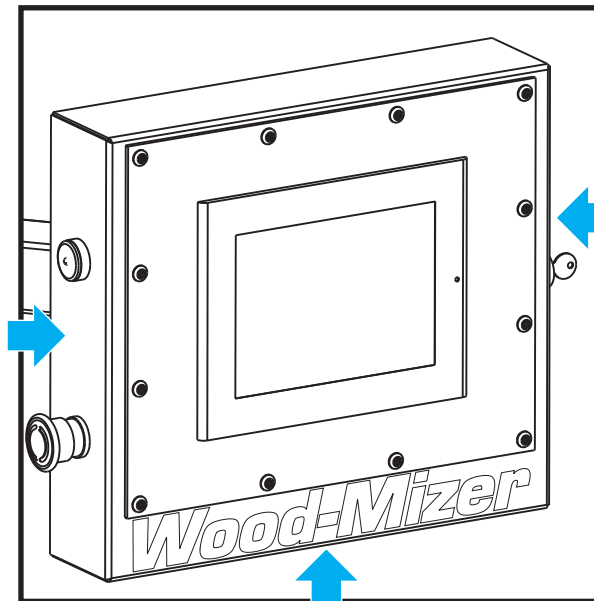

065037



068209

068208 Decal, Ind. Mill Power Estop  
068209 Decal, Ind. Mill Key Switch  
065037 Decal, Wood-Mizer Logo White HLTK (13")

## WM4000 Decal Placement Guide