

# Wood-Mizer<sup>®</sup> Sawmill

Safety, Setup, Operation  
& Maintenance Manual

---

LT40HD Super Wireless

rev. K4.02

---

**Safety is our #1 concern!**

*Form #1541*

## MODELS AFFECTED:

LT40HDSD35W-WR

LT40HD SG38-WR

LT40HD SG38W-WR



**WARNING! Read and understand this manual before using this machine.**

## California

### Proposition 65 Warning



**WARNING:** Breathing gas/diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Always start and operate the engine in a well-ventilated area.  
If in an enclosed area, vent the exhaust to the outside.  
Do not modify or tamper with the exhaust system.  
Do not idle the engine except as necessary.

For more information go to [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov).



**WARNING:** Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to [www.P65Warnings.ca.gov/wood](http://www.P65Warnings.ca.gov/wood).

### Active Patents assigned to Wood-Mizer, LLC

Wood-Mizer, LLC has received patents that protect our inventions which are a result of a dedication to research, innovation, development, and design. Learn more at: [woodmizer.com/patents](http://woodmizer.com/patents)

### ©2023 Wood-Mizer LLC

Printed in the United States of America, all rights reserved. No part of this manual may be reproduced in any form by any photographic, electronic, mechanical or other means or used in any information storage and retrieval system without written permission from

**Wood-Mizer, LLC**  
**8180 West 10th Street**  
**Indianapolis, Indiana 46214**

**SECTION 1 INTRODUCTION**

1.1 About This Manual ..... 1-1  
 1.2 Getting Service..... 1-1  
 1.3 Specifications ..... 1-1

**SECTION 2 GENERAL SAFETY**

2.1 Safety Symbols ..... 2-1  
 2.2 Safety Instructions..... 2-1  
 2.3 Electrical Lockout Procedures ..... 2-3

**SECTION 3 SAWMILL SETUP**

3.1 Stationary Sawmill Setup..... 3-5  
 3.2 Portable Sawmill Setup..... 3-6  
 3.3 Installing The Blade ..... 3-8  
 3.4 Tensioning The Blade ..... 3-8  
 3.5 Tracking The Blade..... 3-9  
 3.6 ..... 3-9  
 3.7 Starting The Engine or Motor ..... 3-9  
 3.8 Wireless System..... 3-10  
 3.9 Board Return ..... 3-10

**SECTION 4 SAWMILL OPERATION**

4.1 Hydraulic Control Operation ..... 4-1  
 4.2 Loading, Turning And Clamping Logs..... 4-2  
 4.3 Up/Down Operation..... 4-3  
 4.4 Up/Down Operation..... 4-4  
 4.5 Autoclutch Operation..... 4-5  
 4.6 Power Feed Operation..... 4-6  
 4.7 Cutting The Log ..... 4-8  
 4.8 Edging ..... 4-8  
 4.9 Optional Cutting Procedure for Super Series Mills ..... 4-10  
 4.10 Blade Height Scale..... 4-10  
 4.11 Water Lube Operation..... 4-11  
 4.12 Optional Lube-Mizer (LMS-HP) ..... 4-12  
 4.13 Preparing The Sawmill For Towing..... 4-12

**SECTION 5 ACCUSET SETUP AND OPERATION**

5.1 Control Setup ..... 5-1  
     *Contrast Adjustment* ..... 5-1  
     *Startup Configuration* ..... 5-2  
     *Setting the Kerf*..... 5-4  
     *Language, Units, PID Values, and Diagnostic* ..... 5-5  
     *Restore Factory Defaults* ..... 5-7  
 5.2 Mode Selection ..... 5-7  
 5.3 Using Auto-Down Mode..... 5-9  
 5.4 Using Auto-Up Mode..... 5-10  
 5.5 Using Pattern Mode ..... 5-10  
 5.6 Using Reference Mode..... 5-12

**SECTION 6 MAINTENANCE**

6.1 Wear Life.....6-1

6.2 Blade Guides .....6-1

6.3 Sawdust Removal .....6-2

6.4 Carriage Track, Wiper, & Scraper.....6-3

6.5 Vertical Mast Rails .....6-3

6.6 Drum Switches .....6-4

6.7 Miscellaneous .....6-4

6.8 Blade Tensioner.....6-4

6.9 Blade Wheel Belts .....6-6

6.10 Brake Strap Adjustment .....6-6

6.11 Drive Belt Adjustment.....6-6

6.12 Autoclutch .....6-8

6.13 Hydraulic System .....6-9

6.14 Drive Bearing .....6-11

6.15 Up/Down System.....6-12

6.16 Power Feed .....6-13

6.17 Charging the Battery.....6-13

6.18 Maintenance Chart.....6-15

**SECTION 7 TROUBLESHOOTING**

7.1 Sawing Problems .....7-8

7.2 Electrical Problems.....7-9

7.3 Circuit Breaker Operation .....7-11

7.4 Accuset 2 Troubleshooting.....7-12

7.5 Autoclutch Troubleshooting.....7-15

7.6 Power Feed Problems .....7-16

7.7 Power Feed Circuit Troubleshooting.....7-17

7.8 Power Feed Variable Feed Rate Switch Test .....7-18

7.9 Power Feed Preliminary Test .....7-18

7.10 Power Feed Mechanical Test.....7-18

7.11 Hydraulic Problems .....7-19

7.12 Hydraulic Pressure Test.....7-21

7.13 Engine/Motor and Drive Pulleys Alignment.....7-22

**SECTION 8 SAWMILL ALIGNMENT**

8.1	Routine Alignment Procedure.....	8-1
	<i>Blade Installation</i> .....	8-1
	<i>Saw Head Tilt</i> .....	8-1
	<i>Blade Guide Arm Alignment</i> .....	8-2
	<i>Blade Guide Vertical Tilt Alignment</i> .....	8-4
	<i>Blade Guide Horizontal Tilt Adjustment</i> .....	8-5
	<i>Blade Guide Flange Spacing</i> .....	8-5
	<i>Side Support Alignment</i> .....	8-6
	<i>Blade Height Scale Adjustment</i> .....	8-7
8.2	Complete Alignment Procedure.....	8-8
	<i>Frame Setup</i> .....	8-8
	<i>Blade Installation</i> .....	8-8
	<i>Saw Head Slide Pad Adjustment</i> .....	8-8
	<i>Blade Wheel Alignment</i> .....	8-9
	<i>Track Roller Adjustment</i> .....	8-11
	<i>Bed Rail Adjustment</i> .....	8-13
	<i>Blade Guide Installation</i> .....	8-13
	<i>Blade guides equipped with High-Performance blocks:</i> .....	8-14
	<i>Blade guides not equipped with High-Performance blocks:</i>	8-14
	<i>Blade Guide Arm Alignment</i> .....	8-14
	<i>Blade Guide Deflection</i> .....	8-15
	<i>Blade Guide Vertical Tilt Alignment</i> .....	8-15
	<i>Blade Guide Horizontal Tilt Adjustment</i> .....	8-15
	<i>Blade Guide Flange Spacing</i> .....	8-15
	<i>Blade Guide Level</i> .....	8-15
	<i>Blade Block Adjustment</i> .....	8-16
	<i>Side Support Alignment</i> .....	8-16
	<i>Clamp Stop/Stop Bolt Adjustment</i> .....	8-16
	<i>Saw Head Tilt</i> .....	8-16
	<i>Blade Height Scale Adjustment</i> .....	8-16
	<i>Optional Board Return Bracket</i> .....	8-17

# Wood-Mizer® LLC Limited Product Warranty



Wood-Mizer LLC ("Warrantor"), an Indiana corporation with its principal place of business at 8180 West Tenth Street, Indianapolis, IN 46214-2400 USA, warrants to the purchaser ("Purchaser") that for the time periods specifically stated herein and subject to the terms, conditions and limitations stated herein, the equipment manufactured by the Warrantor will be free from defects in material and workmanship attributable to Warrantor so long as, during the warranty periods stated herein, the equipment is installed, operated and maintained in accordance with the instructions provided by Warrantor.

PRODUCT	MODEL CLASS	LENGTH OF WARRANTY		EFFECTIVE DATE
		USA & CANADA	NON USA & CANADA	
Portable Sawmills, Resaws, Edgers	LT, LX, HR, EG	Two years	One year	Date of purchase
Portable Sawmills with Chassis	LT28, LT35, LT40, LT50, LT70, LX450	Two years, excluding the chassis, which chassis shall have a five year warranty	One year	
Industrial Sawmills, Resaws, Edgers	WM, HR, EG, TVS, SVS	One year	One year	Date of purchase or date of installation / training (if applicable), whichever occurs first, not to exceed 6 months from date of purchase
TITAN Industrial	WB, TV, HR, EG, EA, MR	One year	One year	
Material Handling	TWC, IC, TD, LD, GC, CR, CB, CC	One year	One year	
Blade Maintenance Equipment	BMS, BMT, BMST	One year	One year	Date of purchase
Options and Accessories	Various	One year*	One year*	
Moulders, Extractors	MP, MD	Two years	One year	
Kilns	KS, KD	One year	One year	
Slab Flatteners	MB	Two years	One year	
Pallet Equipment	PD, PC	One year	One year	
Log Splitters	FS	One year	One year	
Replacement Parts	Various	90 days	90 days	

\* Warranty on Options will match the warranty on the primary equipment when purchased on same invoice.

### Exclusions from 90 Day, Limited One Year and Two Year Warranty

Warrantor shall have no responsibility under this warranty for any wear components, including, but not limited to: belts, blade guides, blades, electric motor brushes, drum switches, filters, fuses, hoses, bearings (excluding cylindrical drive bearings), bushings, cable carriers, and spark plugs. All wear components are furnished "as is", without any warranty from Warrantor. This limited warranty does not cover any defects caused by misuse, negligence, alterations, damage due to overload, abnormal conditions, excessive operation, accident, or lack of performance of normal maintenance services.

Several components which are used in the manufacture of the equipment but not manufactured by Warrantor such as cant hooks, power plants, laser sights, batteries, tires, and trailer axles have warranties provided by the original equipment manufacturer (written copies available upon request). Warrantor does not separately warrant such items. Components or equipment manufactured by third parties are not covered by this warranty. Warrantor, however, will provide reasonable assistance to the Purchaser to make claims against any warranties applicable to such component parts as provided by such original equipment manufacturers. Components or equipment manufactured by third parties are not covered by this Warranty.

### Five Year Limited Chassis Warranty

The limited five year chassis warranty described above, DOES NOT extend to (a) any damage stemming from accident, improper towing, overload, abuse, misuse, abnormal conditions, negligence, excessive operation, or lack of maintenance, (b) rust caused by exposure to corrosive atmospheric conditions, or (c) the sawmill head, carriage, axle, brakes, or any hydraulic or electrical components attached to the chassis.

### Warrantor's Obligations as To Defects

In the event that the equipment fails to perform due to defective materials or workmanship attributable to Warrantor under normal use and service within the established warranty period, Purchaser's sole and exclusive remedy and Warrantor's sole liability shall be to replace or repair, in Warrantor's sole and subjective discretion, any defective part at Warrantor's principal place of business without cost to the Purchaser if such defect exists. The determination of whether a product is defective shall be made by Warrantor in Warrantor's sole and subjective discretion. The Purchaser must notify Warrantor prior to shipping any defective part. Warrantor, at its sole discretion, may cover expenses incurred in shipping the defective part to Warrantor for evaluation; provided, however, that Warrantor will not be responsible for labor, travel time, mileage, removal, installation or incidental or consequential damages. However, any part in excess of 140 pounds must be returned by the Purchaser, to the Warrantor's nearest authorized facility at the Purchaser's expense, if return is requested by Warrantor. Warrantor shall have a reasonable time within which to replace or repair the defective part. If Warrantor determines that the product is not defective under the terms of this warranty in Warrantor's sole and subjective discretion, then Purchaser shall be responsible for any expenses incurred by Warrantor in returning the equipment to the Purchaser.

### Limitations and Disclaimers of Other Warranties

EXCEPT FOR THE EXPRESS WARRANTY PROVISIONS STATED ABOVE, WARRANTOR DISCLAIMS ALL WARRANTIES, EXPRESS AND/OR IMPLIED, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT AND TITLE. No representation or other affirmation of fact by representatives of Warrantor, whether verbal or in writing, including photographs, brochures, samples, models, or other sales aids, shall constitute a warranty or other basis for any legal action against Warrantor. There are no other representations, promises, agreements, covenants, warranties, guarantees, stipulations or conditions, express or implied, by Warrantor except as expressly set forth herein. THE ORIGINAL PURCHASER AND ANY INTENDED USER OR BENEFICIARY OF THIS EQUIPMENT, SHALL NOT BE ENTITLED TO RECOVER ANY INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES OR LOSSES, INCLUDING BUT NOT LIMITED TO, DAMAGES OF LOST PRODUCTION, LOST REVENUE, LOST PRODUCT, LOST PROFITS, LOST BUSINESS, LOSS OF USE, LOSS OF GOODWILL, OR BUSINESS INTERRUPTION, FROM WARRANTOR FOR ANY REASON WHATSOEVER INCLUDING WITHOUT LIMITATION WARRANTY OR DEFECT IN THE PRODUCT REGARDLESS OF THE SOLE, JOINT AND/OR CONCURRENT NEGLIGENCE, BREACH OF CONTRACT, BREACH OF WARRANTY, STRICT LIABILITY IN TORT OR STATUTORY CLAIMS OR OTHER LEGAL FAULT OR RESPONSIBILITY OF EITHER WARRANTOR OR PURCHASER OR ITS EMPLOYEES OR AGENTS. Warrantor does not warrant that its equipment meets or complies with the requirements of any particular safety code or governmental requirements.

Defective items replaced under the terms of this warranty become the property of Warrantor.

### Design Changes

Warrantor reserves the right to change the design of its products from time to time without notice and without obligation to make corresponding changes in or to its products previously manufactured.

### Rights of Purchasers

The validity and effect of this limited warranty as well as its interpretation, operation and effect, shall be determined exclusively by the principles of law and equity of the State of Indiana, USA. This limited warranty gives Purchaser specific legal rights. Purchaser may also have other rights, which may vary from state to state. Some states may not allow limitations as to the duration of implied warranties or to the exclusion or limitation of incidental or consequential damages, so some of the limitations and exclusions detailed set forth above may not apply. In the event that any one or more of the provisions of this warranty shall be or become invalid, illegal or unenforceable in any respect, the validity, legality and enforceability of the remaining provisions of this warranty shall not be affected thereby.

### Interpretations

This Warranty constitutes the entire warranty agreement between Warrantor and Purchaser and supersedes any prior understandings or agreements pertaining to the same subject matter. This warranty cannot be amended except in writing which refers to this warranty which is signed by both Warrantor and Purchaser.

## SECTION 1 INTRODUCTION

### 1.1 About This Manual

This manual replaces any previous information received on your Wood-Mizer® equipment.

The information and instructions in this manual do not amend or extend the limited warranties for the equipment given at the time of purchase.

### 1.2 Getting Service

For contact information, sales, service, parts, and additional manuals, sign into your account on <https://woodmizer.com>, or call inside the USA: 1-800-553-0182 or from outside the USA: 317-271-1542


### 1.3 Specifications


Equipment specification are included in the Online Manuals, which are found at <https://apps.woodmizer.com/Manuals/Manuals.aspx?parent=0>.


## SECTION 2 GENERAL SAFETY

### 2.1 Safety Symbols

The following symbols and signal words call your attention to instructions concerning your personal safety. Be sure to observe and follow these instructions.

 **DANGER!** indicates an imminently hazardous situation which, if not avoided, will result in serious injury or death.

 **WARNING!** suggests a potentially hazardous situation which, if not avoided, could result in serious injury or death.

 **CAUTION!** refers to potentially hazardous situations which, if not avoided, may result in minor or moderate injury or damage to equipment.

**NOTICE** indicates vital information.

### 2.2 Safety Instructions

#### OWNER/OPERATOR'S RESPONSIBILITY

The procedures listed in this manual may not include all ANSI, OSHA, or locally required safety procedures. **It is the owner/operator's responsibility and not Wood-Mizer LLC to ensure all operators are properly trained and informed of all safety protocols.** Owner/Operators are responsible for following all safety procedures when operating and performing maintenance to the equipment.

#### OBSERVE ALL SAFETY INSTRUCTIONS

**NOTICE** Read the entire Operator's Manual before operating this equipment.

Note all safety warnings throughout this manual and those posted on the machine.

Be able to access this manual at all times while operating this equipment.


Read additional manufacturer's manuals and observe their applicable safety instructions.

Only persons who have read and understood the entire operator's manual should operate this equipment.

This equipment is not intended for use by or around children.

**It is the owner/operator's responsibility to comply with all applicable federal, state, and local laws, rules, and regulations regarding the ownership, operation, and transporting your equipment.**

Operators should become thoroughly familiar with and comply with these applicable laws for operating and transporting equipment.

 **WARNING!** Clean sawdust from all guards, vents, control boxes, or any area where sawdust may gather **after every shift**. Failure to

do so may result in fire, causing death or serious injury.

#### WEAR SAFETY CLOTHING


 **WARNING!** Secure all loose clothing and jewelry before operating the equipment.

Always wear eye, ear, and foot protection when operating or servicing the equipment.

Wear hand protection while servicing the equipment blades.

Wear respiratory protection when sawing woods that require it. (It is up to the sawyer to know which woods require respiratory protection.)

#### HANDLE FUEL/LUBRICANTS SAFELY


 **DANGER!** Due to the flammable nature of fuel and oil, never smoke, weld, grind or allow sparks near your engine or storage tanks, especially during times of fueling.


Do not allow fuel to spill on a hot engine during fueling operations or otherwise.

 **WARNING!** Store gasoline away from sawdust and other flammable materials.

Do not use flammable fuels or liquids such as diesel fuel. Use **ONLY** water and Wood-Mizer Lube Additive with the water lube accessory.


#### EQUIPMENT SETUP

 **DANGER!** Do not operate the equipment without **all** covers and guards in place.


 **WARNING!** Set up the equipment on solid, level ground.

Keep all persons out of the area between the frame rails while loading and unloading the equipment.

#### CHECK EQUIPMENT BEFORE OPERATION


 **DANGER!** Ensure all guards and covers are in place and secured before operating or towing the equipment.

Use the safety retainer pin and cable to fasten blade housing covers.

 **WARNING!** Do not operate the equipment without the bed end retaining brackets properly installed; the saw head may fall from the log bed.




## KEEP PERSONS AWAY


 **DANGER!** Keep all persons out of the path of moving equipment and logs when operating equipment or loading and turning logs.

Ensure the blade is disengaged and all persons are out of the path of the blade before starting the engine or motor.

## KEEP HANDS AWAY

 **DANGER!** Remove power before clearing debris or any other maintenance activity.

Disengage the blade and shut off the equipment engine before changing the blade.

 **WARNING!** Avoid contact with any hot parts (motors).

**Allow the system to cool sufficiently before beginning any service function, including debris removal.**

Avoid contact with sharp edges of the cutting blades.

Stay a safe distance from rotating members (shafts, pulleys, fans, etc.) and ensure loose clothing or long hair does not engage rotating members


Do not spin the blade wheels by hand. Spinning the blade wheels by hand may result in serious injury.

Disengage the clutch/brake mechanism whenever the equipment is not cutting.

Do not adjust the engine drive belt with the engine running.

Keep hands, feet, etc., clear of exiting sawdust chute when operating equipment.

## UP/DOWN SYSTEM SAFETY

 **WARNING!** Secure the saw head with a chain with a minimum of 1900 lbs. working load capacity before adjusting the up/down chain.

Release pressure from the up/down assist prior to performing any service to the assembly. Parts are under tension and may fly apart.

Do not disassemble the pressurized cylinder. Parts are under pressure and may fly apart or damage the cylinder.


## KEEP SAFETY LABELS IN GOOD CONDITION

**NOTICE** Ensure that all safety decals are clean and readable. Replace all damaged safety decals to prevent personal injury or damage to the equipment. Contact your local

distributor, or call your Customer Service Representative to order more decals.


**NOTICE** If replacing a component that has a safety decal affixed to it, ensure the new component also has the safety decal affixed in the same place.

## KEEP MILL AND AREA AROUND MILL CLEAN


 **WARNING!** Maintain a clean and clear path for all necessary movement around the mill and material stacking areas.

Do not allow children in the area of the mill.

## GAS OR DIESEL ENGINE OPERATION

 **DANGER!** Operate your engine/machine only in well ventilated areas.


Do not operate an engine with a fuel or oil leak.


 **WARNING!** Do not operate engine without proper and operational spark arrester/muffler.

## DISPOSE OF WOOD BY-PRODUCTS PROPERLY

**NOTICE** Properly dispose of all wood by-products, including sawdust, chips, and other debris, including operation waste such as oil, filters, etc.

## WORKING WITH BATTERIES


 **DANGER!** Batteries expel explosive gases; keep sparks, flames, burning cigarettes, or other ignition sources away at all times.

 **WARNING!** Always wear safety goggles and a face shield when working near batteries.

Wash hands after handling batteries to remove possible lead, acid, or other contaminants.

Charge the battery in a well ventilated area.

Do not attempt to charge a frozen battery.

 **CAUTION!** Do not overcharge the battery. Overcharging may reduce the overall service life of the battery.

Ensure the battery is fully charged before transporting the equipment. If the battery is not fully charged, excessive vibration could reduce the overall service life of the battery.

**NOTICE** When working with batteries, use extreme care to avoid spilling or splashing electrolyte (dilute sulfuric acid) as it can destroy clothing and burn the skin.

**EMERGENCY TREATMENT FOR CONTACT WITH BATTERY COMPONENTS (LEAD/SULFURIC ACID) per SDS (Safety Data Sheet):**

<b>EYE CONTACT</b>	<b>Sulfuric Acid and Lead:</b> Flush eyes immediately with large amounts of water for at least 15 minutes while lifting lids. Seek immediate medical attention.
<b>SKIN CONTACT</b>	<b>Sulfuric Acid:</b> Flush affected area(s) with large amounts of water using deluge emergency shower, if available, shower for at least 15 minutes. Remove contaminated clothing, including shoes. If symptoms persist, seek medical attention. Wash contaminated clothing before reuse. Discard contaminated shoes. <b>Lead:</b> Wash immediately with soap and water.
<b>INGESTION</b>	<b>Sulfuric Acid:</b> Administer large amounts of water. Do NOT induce vomiting or aspiration into the lungs may occur and can cause permanent injury or death; consult physician.
<b>INHALATION</b>	<b>Sulfuric Acid:</b> Remove to fresh air immediately. If not breathing, give artificial respiration. If breathing is difficult, give oxygen. Consult a physician. <b>Lead:</b> Remove from exposure, gargle, wash nose and lips; consult physician.

**2.3 Electrical Lockout Procedures**

**RULES FOR USING LOCKOUT PROCEDURE**

The equipment shall be locked out to protect against accidental or inadvertent operation when such operation could cause injury to personnel. Do not attempt to operate any switch or valve bearing a lock.

**LOCKOUT PROCEDURES MUST BE USED DURING, BUT NOT LIMITED TO:**

- Changing or adjusting blades
- Unjamming operations
- Cleaning
- Mechanical repair
- Electrical maintenance
- Retrieval of tools/parts from work area
- Activities where guards or electrical panel guard is open or removed

**MAINTENANCE HAZARDS INCLUDE, BUT NOT LIMITED TO:**

- Blade contact
- Pinch points
- Kickbacks
- Missiles (thrown blades/wood chips)
- Electrical

**FAILURE TO LOCKOUT MAY RESULT IN, BUT NOT LIMITED TO:**

- Cut
- Crush

- Blindness
- Puncture
- Electrocutation
- Serious injury and death
- Amputation
- Burn
- Shock

**TO CONTROL MAINTENANCE DANGERS:**

- Lockout procedures must be followed (see **OSHA regulation 1910.147**).
- Never rely on machine stop control for maintenance safety (emergency stops, on/off buttons, interlocks).
- Do not reach into moving blades or feed systems. Allow all coasting parts to come to a complete stop.
- Electrical power supply and air supply must both be locked out.
- Where established lockout procedures cannot be used (electrical troubleshooting or mechanical dynamic troubleshooting), alternative effective protective techniques shall be employed which may require special skills and planning.
- Always follow safe operations practices in the workplace.

**EQUIPMENT LOCKOUT PROCEDURE**

Lockout procedures per OSHA regulation 1910.147, appendix A:

**GENERAL**

The following simple lockout procedure is provided to assist owner/operators in developing their procedures so they meet the requirements of **OSHA regulation 1910.147**. When the energy isolating devices are not lockable, tagout may be used, provided the owner/operator complies with the provisions of the standard which require additional training and more rigorous periodic inspections. When tagout is used and the energy isolating devices are lockable, the owner/operator must provide full operator protection (see OSHA regulation 1910.147, paragraph (c)(3)) and additional training and more rigorous periodic inspections are required. For more complex systems, more comprehensive procedures may need to be developed, documented, and utilized.

**PURPOSE**

This procedure establishes the minimum requirements for the lockout of energy isolating devices whenever maintenance or servicing is done on machines or equipment. It shall be used to ensure that the machine or equipment is stopped, isolated from all potentially hazardous energy sources and locked out before personnel perform any servicing or maintenance where the unexpected energization or start-up of the machine or equipment or release of stored energy could cause injury.

**COMPLIANCE WITH THIS PROGRAM**

All personnel are required to comply with the restrictions and limitations imposed upon them during the use of lockout. The authorized personnel are required to perform the lockout in accordance with this procedure. All operators,

upon observing a machine or piece of equipment which is locked out to perform servicing or maintenance shall not attempt to start, energize, or use that machine or equipment.

## SEQUENCE OF LOCKOUT

1. Notify all affected personnel that servicing or maintenance is required on a machine or equipment and that the machine or equipment must be shut down and locked out to perform the servicing or maintenance.
2. The authorized employee shall refer to the company procedure to identify the type and magnitude of the energy that the machine or equipment utilizes, shall understand the hazards of the energy, and shall know the methods to control the energy.
3. If the machine or equipment is operating, shut it down by the normal stopping procedure (depress the stop button, open switch, close valve, etc.).
4. De-activate the energy isolating device(s) so that the machine or equipment is isolated from the energy source(s).
5. Lock out the energy isolating device(s) with assigned individual lock(s).
6. Stored or residual energy (such as that in capacitors, springs, elevated machine members, rotating flywheels, hydraulic systems, and air, gas, steam, or water pressure, etc.) must be dissipated or restrained by methods such as grounding, repositioning, blocking, bleeding down, etc.
7. Ensure that the equipment is disconnected from the energy source(s) by first checking that no personnel are exposed, then verify the isolation of the equipment by operating the push button or other normal operating control(s) or by testing to make certain the equipment will not operate.

 **CAUTION!** Return operating control(s) to neutral or "off" position after verifying the isolation of the equipment.

8. The machine or equipment is now locked out.

## RESTORING EQUIPMENT TO SERVICE

When the servicing or maintenance is completed and the machine or equipment is ready to return to normal operating condition, the following steps shall be taken.

1. Check the machine or equipment and the immediate area around the machine to ensure that nonessential items have been removed and that the machine or equipment components are operationally intact.
2. Check the work area to ensure that all personnel have been safely positioned or removed from the area.
3. Verify that the controls are in neutral.
4. Remove the lockout devices and re-energize the machine or equipment.

**NOTE:** The removal of some forms of blocking may require re-energization of the machine before safe removal.

5. Notify affected personnel that the servicing or maintenance is completed and the machine or equipment is ready for use.

## PROCEDURE INVOLVING MORE THAN ONE PERSON

In the preceding steps, if more than one individual is required to lock out the equipment, **each shall place his own personal lock on the energy isolating devices.**

## SECTION 3 SAWMILL SETUP

### 3.1 Stationary Sawmill Setup

Prepare the site:

- Area must be firm and level.
- The cement pad should be rated to support 6350 lbs./sq.ft.
- Use 5/8" diameter anchor bolts to secure feet.
- Allow maneuvering room for operators, sawdust removal, log loading, and board removal.
- Check the specification online for foot anchor placement.


**NOTE:** The unit must be level before securing. It **IS POSSIBLE** to twist the mill frame by jacking one foot higher than the others.



**WARNING!** Securely fasten the feet of a stationary sawmill to the floor before operating the sawmill.

1. Unhook the carriage safety chain, located at the bottom of the vertical mast.
2. Release the fenders and lift up to remove the fenders. **See Fig. 3-1.**
3. Stow until needed for transport.
4. Start the engine to enable the battery-operated accessories (*See Section 3.7*).

**NOTE:** Operating the controls without the engine running will result in power drainage from the battery.

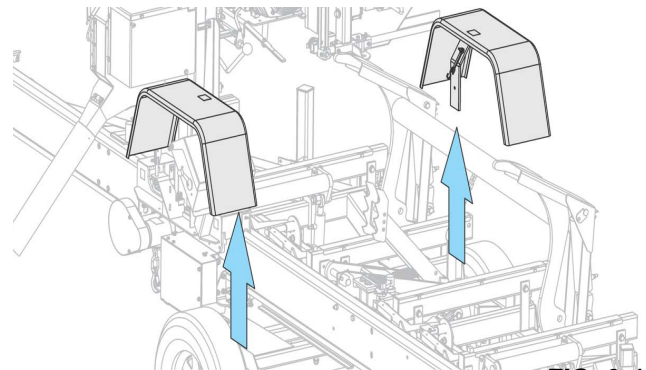


**FIG. 3-1**

5. Use the up/down switch on the control panel to raise the cutting head from the carriage rest pin. **See Fig. 3-2.**
6. Remove the locking pin and swing the rest pin down below bed level.

**NOTE:** Operating the controls without the engine running will result in power drainage from the battery.

7. Use the carriage forward/reverse switch (left side of control box) to move the cutting head toward the front (hitch end) of the mill. **See Fig. 3-3.**

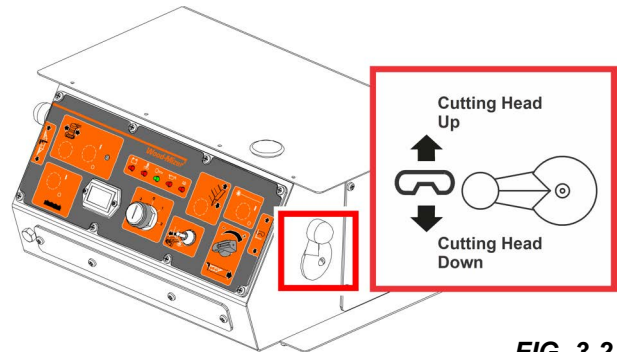

**FIG. 3-2**

**NOTE:** Not all control panels are the same as depicted.

8. Raise the side supports to prevent a log from falling off the side of the mill when loaded.

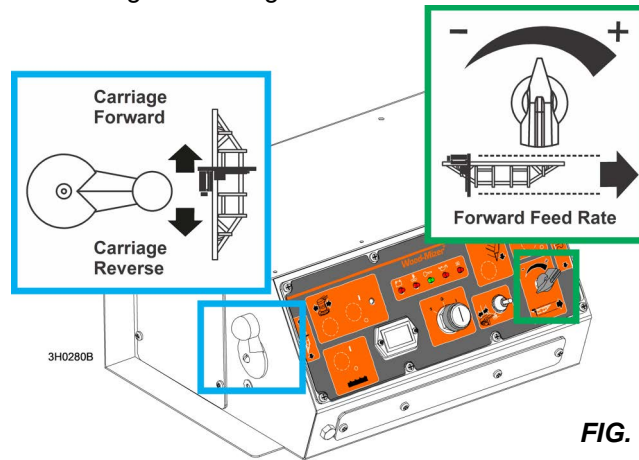


FIG. 3-3

## 3.2 Portable Sawmill Setup



**WARNING!** Do not set up the mill on ground with more than a 10 degree incline.

If setup on an incline is necessary, put blocks under one side of the mill or dig out areas for outrigger legs to keep mill level. Setting up the mill on an incline could cause it to tip over, resulting in serious personal injury.

Chock the trailer wheels to prevent movement before unhitching it from the towing vehicle.

Ensure the trailer is supporting the sawmill frame when operating a sawmill with adjustable outriggers. The adjustable outriggers are intended to support the saw frame with assistance from the trailer.

The adjustable outriggers supplied with portable sawmills are not intended for setup on concrete or other hard surfaces. Long-term use of the adjustable outriggers on hard surfaces may cause the outriggers to fail, causing the sawmill to drop.

If setting the sawmill up on concrete or other hard surface, replace the adjustable outrigger legs with stationary legs.

1. Unhitch the mill from the vehicle.
2. Lower and set the front three outriggers. **See Fig. 3-4.**
  - 1). Use the provided jack handle to lift the weight from the locking pin.
  - 2). Rotate the locking pin counterclockwise so that the inner roll pin is free from the outrigger channel notch, then pull the locking pin out to release the outrigger.
  - 3). Lower the outrigger as necessary.
  - 4). Push the locking pin back in and turn clockwise until the inner roll pin is behind the outrigger channel notch to "lock" the outrigger in place.



**WARNING!** Put front outrigger down before moving cutting head from the rest position.

If sawmill is equipped with optional Fine Adjust Outriggers (FAO), see the option manual for outrigger operation.

3. Unhook the carriage safety chain, located at the bottom of the vertical mast.
4. Start the engine to enable the battery-operated accessories ([See Section 3.7](#)).

**NOTE:** Operating the controls without the engine running will result in power drainage from the battery.

5. Use the up/down switch on the control panel to raise the cutting head from the carriage rest pin. **See Fig. 3-2.**
6. Remove the locking pin and swing the rest pin down below bed level.
7. Remove the fenders by lifting them out of the slots. **See Fig. 3-1.**




**CAUTION!** To prevent fender damage, remove fenders before operating sawmill or loading logs.

8. Use the feed control switch (left side of control box) to move the cutting head toward the front end of the mill. **See Fig. 3-3.**
9. Lower and set the remaining rear outriggers.
10. Level the sawmill by adjusting the outriggers to raise or lower each end of the sawmill.
11. Adjust all outriggers evenly to avoid twisting the mill frame by jacking one outrigger higher than the others.

For FAO(s), fine tune the outrigger base height as necessary. Move the cutting head to the opposite end of the mill from the outrigger. Raise the entire outrigger (to remove the sawmill weight from it) and adjust the outrigger base as necessary. Lower the entire outrigger and use the locking pin to secure in position.




**CAUTION!** Do not adjust the FAO outrigger base height while there is weight on the FAO. Damage to the FAO may result.

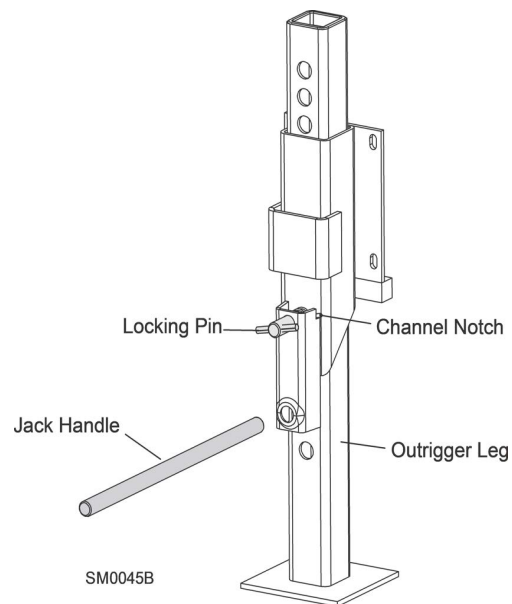

**FIG. 3-4**

11. Adjust all outriggers evenly to avoid twisting the mill frame by jacking one outrigger higher than the others.

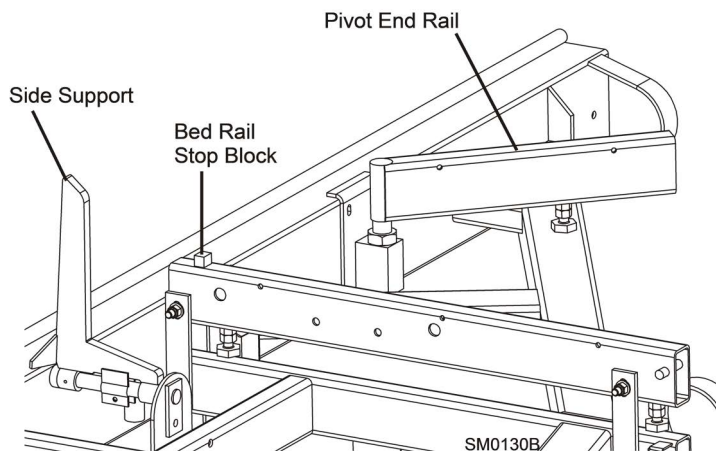

**FIG. 3-5**

12. Raise the two side supports to prevent the log from falling off the side of the mill when loaded. **See Fig. 3-5.**

### 3.3 Installing The Blade



**DANGER!** Always disengage the blade and shut off the sawmill engine before changing the blade.



**WARNING!** Always wear gloves and eye protection when handling bandsaw blades.

Changing blades is safest when done by one person! Keep all other persons away from area when coiling, carrying or changing a blade.


1. Open all the blade housing covers.
2. Turn the blade tension handle to release the blade tension until the wheel is pulled in and the blade is lying loose in the blade housing.
3. Lift the blade out of the blade housing.
4. Make sure the teeth are pointing the correct direction.

The cutting teeth should be pointing toward sawdust chute.

5. Install the blade so it is lying around the wheels.



**CAUTION!** Be careful when placing the blade between the guide rollers and inserts. If the blade hits one of the inserts hard enough, it could damage the insert.

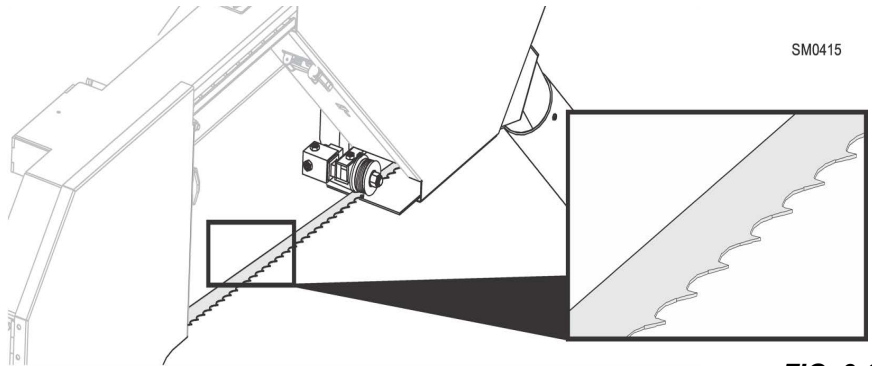

SM0415

6. Position 1 1/4" wide blades on the wheels so the gullet is 1/8" (3.0 mm) out from the edge of the wheel. Position 1 1/2" wide blades on the wheels so the gullet is 3/16" (4.5 mm) out from the edge of the wheel.
7. Close the middle blade housing cover.
8. Use the tension handle to tension the blade correctly.

FIG. 3-6


### 3.4 Tensioning The Blade

Tension the blade by turning the hydraulic tensioning handle clockwise until the tension gauge indicates the recommended tension.

**The recommended tension for all blades is 2800-3000psi.**

The tension gauge should be checked occasionally when adjusting the cant control or while cutting. Ambient temperature changes will cause tension to change.

Adjust the tension handle as necessary to maintain the recommended tension level.

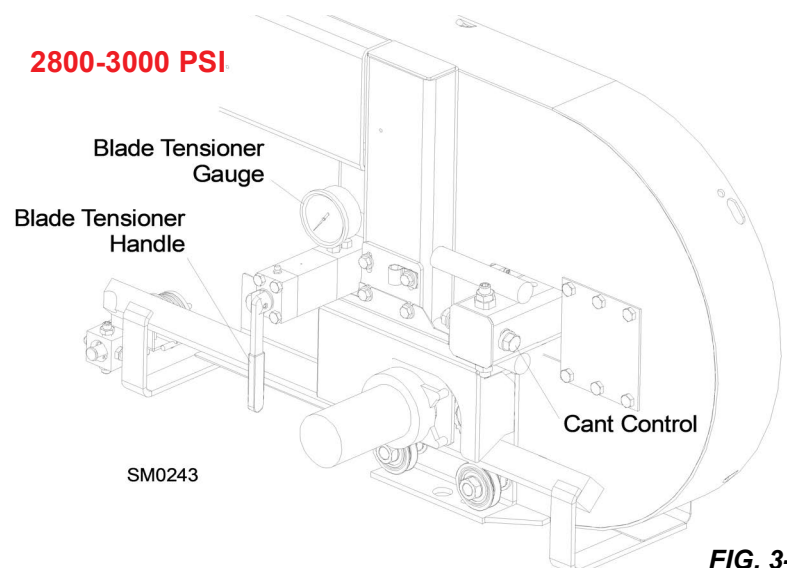

SM0243

FIG. 3-7



**CAUTION!** Release the blade tension when the mill is not in use to avoid damage to the tensioner.

Changes in temperature could cause increased pressure in the blade tensioner and loss of fluid from the gauge.

### 3.5 Tracking The Blade

1. Make sure the blade housing covers are secured and all persons are clear of the saw head.
2. Start the engine.
3. Engage the blade, rotating the blade until the blade positions itself on the wheels.



**WARNING!** Do not spin the blade wheels by hand.

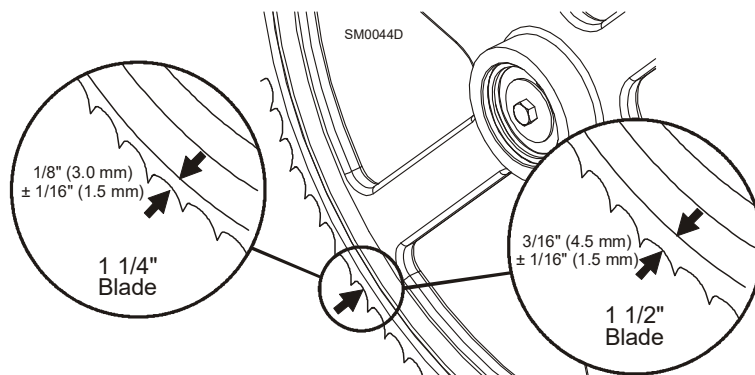


FIG. 3-8

4. Disengage the blade.
5. Turn off the engine, remove the key, and check the position of the blade on the blade wheels.
6. Position 1 1/4" blades so that the gullet is 1/8" (3.0 mm) out from the edge of the blade wheel  $\pm 1/16$  (1.5 mm). Position 1 1/2" blades so that the gullet is 3/16" (4.5 mm) out from the edge of the blade wheel  $\pm 1/16$  (1.5 mm).
7. Use the cant control to adjust where the blade travels on the blade wheels as shown above in **Figure** .
8. Adjust the wheel by turning the cant control until the gullet of the blade is the correct distance from the front edge of the wheel. **See Fig. 3-8.**
9. Adjust the blade tension if necessary to compensate for any changes that occurred while adjusting the cant control.
10. Close the blade housing covers.



**DANGER!** Ensure all guards, covers, blade housings, and pulley covers are in place and secured before operating or towing the sawmill.

**NOTICE** After aligning the blade on the wheels, double-check the blade guide spacing and location. ([See Section SECTION 8](#) for more information.)

### 3.6

### 3.7 Starting The Engine or Motor

See the appropriate manual supplied with your specific engine/motor configuration for starting and operating instructions.



**DANGER!** Make sure all guards and covers (including the blade housing and pulley covers) are in place and secured before operating or towing the sawmill.

Always be sure the blade is disengaged and all persons are out of the path of the blade before starting the engine or motor.



**WARNING!** Always wear eye, ear, respiration, and foot protection when operating the sawmill.

Be sure the power feed switch (if equipped) is in the neutral position before turning the key switch to the on (#1) or accessory(#3) position to prevent accidental carriage movement .



### 3.8 Wireless System

1. Unpack the transmitter unit from the shipping container.
2. Unscrew the four (4) battery cover screws on the bottom of the transmitter unit.
3. Remove the battery cover and install four (4) "C" alkaline batteries, if necessary.
4. Replace the battery cover and secure in place with the cover screws.

Check the wireless transmitter for operation..



FIG. 3-9

5. Turn the key switch on the control panel to the accessory (#3) or start (#1) position.
6. Make sure that all transmitter switches and joysticks are in the neutral or OFF position.
7. To turn on the transmitter, press the E-Stop switch.
8. Push the Power-On toggle switch up or down and release.

The red STOP light on the transmitter will flash quickly.

9. Within 10 seconds release the E-Stop switch by turning it clockwise.

The red STOP light will go off and the yellow ACTIVE light on the transmitter should begin to flash indicating the correct transmission connection with the receiver located in the control box

See the manufacturer's transmitter/receiver installation and configuration manual supplied for diagnostics and troubleshooting instructions.

### 3.9 Board Return



**WARNING!** The automatic board return is intended to assist a second operator in removing boards quickly. Do not use the board return when operating the sawmill alone. Serious injury, death or damage to the equipment may result.

Never use the board return table as a platform to stand on. This table is designed and intended to assist in the removal of boards only. Standing on the table may result in serious injury.

The sawmill is equipped with a board return system. This system consists of an arm on the saw head controlled by a toggle switch on the control panel or on the wireless transmitter. A board return table is also provided to catch the board as it is removed from the log. Use of the board return not recommended with material shorter than 8 feet.

1. To activate the board return when operating the sawmill with the control box, turn the key switch to the accessory (#3) or start (#1) position.
2. Push the toggle switch on the control panel down. The board return arm located in the middle of the saw head will drop into position.
3. To activate the board return when using the wireless transmitter, turn the key switch to the accessory (#3) or start (#1) position on the control panel.
4. Push the toggle switch on the transmitter down. The board return arm located in the middle of the saw head will drop into position.

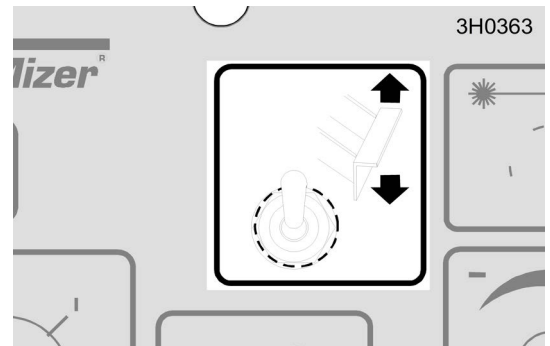


FIG. 3-10

When the blade reaches the end of the log, the arm will drop down to catch the board and drag it back toward the operator as the saw head is returned.

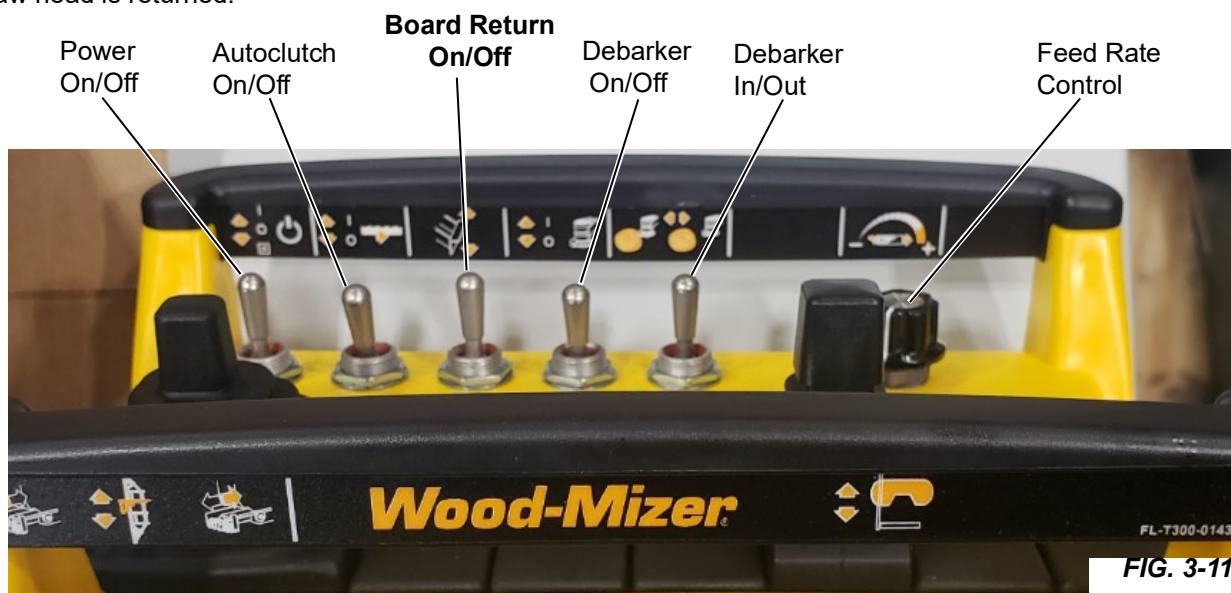


FIG. 3-11



**DANGER!** Keep all persons out of the path of returning boards. Failure to do so will result in serious injury.

Boards may not always return in the same path or location. If a board returns in a manner that does not allow the sawyer or off-bearer to maintain control, it may be necessary to stop the reverse motion of the saw head.

When the board return is to be used, a second person is required to remove the board as it is returned. **DO NOT** attempt to use the board return feature when sawing alone.

5. To bypass the board return feature, push the toggle switch on the control panel or on the wireless transmitter up.

## SECTION 4 SAWMILL OPERATION

### 4.1 Hydraulic Control Operation

The hydraulic control levers become operational when the contacts at the bottom of the carriage touch the power strip on the frame tube. The hydraulic control levers will only work when the cutting head is close enough to the front end of the mill to touch the power strip.

Hydraulic units have six control levers to load, clamp, turn and level logs.

Use the hydraulic control levers to get the mill ready to load a log.



**DANGER!** Keep all persons out of the path of moving equipment and logs when operating sawmill or loading and turning logs.



**CAUTION!** Ensure the engine is running before operating the hydraulic controls.

Operating the controls without the engine running drains the battery.

Holding the hydraulic switches halfway up or down also drains the battery.


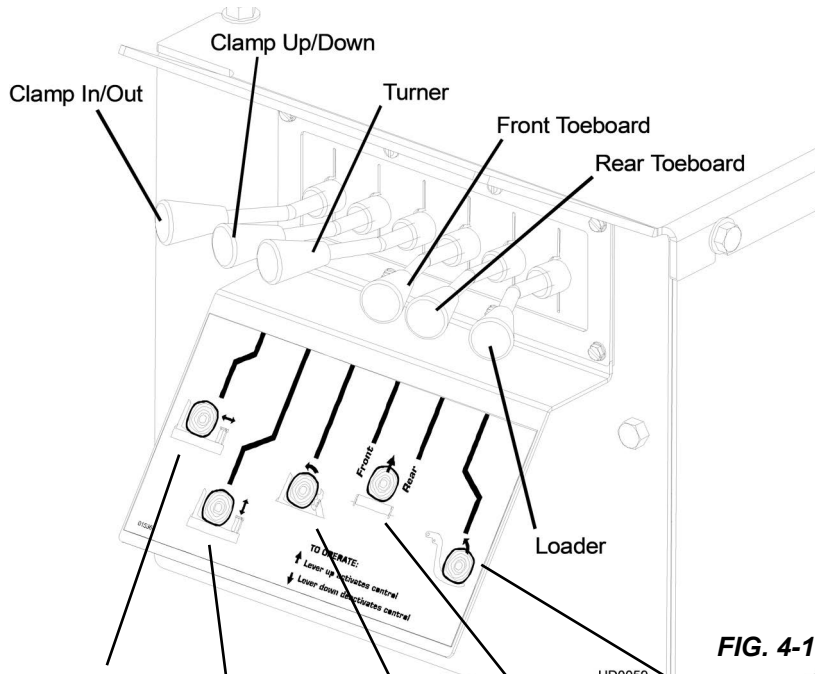



FIG. 4-1

REFER TO FIG. 4-1 FOR LEVER LOCATIONS.


1. Move the clamp out and down so it will not get in the way of logs being loaded onto the bed.

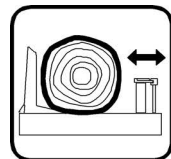


Clamp In/Out

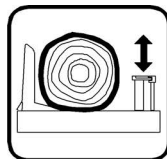

Clamp Up/Down

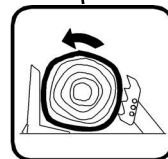

Log Turner

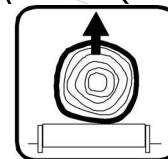

Toe Boards  
Front and Rear



Log Loader

- 1). Lower the **CLAMP IN/OUT** lever to move the clamp out toward the loading side of the sawmill.
- 2). Lower the **CLAMP UP/DOWN** lever to lower the clamp below bed level.
2. Raise the **LOG LOADER** lever to extend the legs of the log loader out as far as they will go.  
The chain securing the log loading arm to the log turner arm will be tight.
3. Raise the **LOG TURNER** lever to raise the turner arm until there is slack in the chain.
4. Unchain the loading arm from the turner arm.
5. Lower the **LOG TURNER** lever to completely lower the turner arm.

**NOTE:** After the turner arm is all the way down, the side support braces will begin to lower. Release the **LOG TURNER** lever after the turner arm is lowered, but before the side supports begin to lower. This stops the log being loaded from damaging the turner and/or falling off the side of the sawmill.

When raising the turner lever, the side supports rise first. After reaching a fully vertical position, the turner arm will engage and start to rise.

6. **Manually** lower the log loader arm so it rests on the ground.



**CAUTION!** Use care when manually lowering the log loader arm. Do not damage the velocity fuse valves at the base of the loader cylinders.

7. Lower the **LOG LOADER** lever to lower the loading arm as far as it will go.

8. Roll logs onto loading arm one at a time.
9. Ensure the front and rear toe boards are below bed level.

If a tapered log has been loaded, the front or rear end of the log may be lifted to parallel the heart of the log to the path of the blade.

10. Lift the **FRONT TOE BOARD** lever up for the front toe boards and/or the **REAR TOE BOARD** for the rear toe board.

Once a flat has been made and the log is ready to be turned, push the appropriate toe board lever down to lower either toe board until it falls below the level of the bed.

## 4.2 Loading, Turning And Clamping Logs

### TO LOAD LOGS

1. Start the engine and move the saw carriage to the front end of the frame.



**CAUTION!** Before loading a log, be sure the cutting head is moved far enough forward so the log does not hit it.

Be sure the log clamp, pivot rails, turning arm and toe boards are adjusted out of the path of the log before loading a log onto the bed.

2. Raise the side supports on the sawmill bed to prevent the log from falling off the side of the bed.
3. Use cant hooks or loading equipment to move the log to the foot of the loading arms.
4. Roll the log onto the loader so that it is approximately centered with the sawmill bed. The log turner will operate much easier if the log is centered on the sawmill bed.



**DANGER!** Keep all persons out of the path of moving equipment and logs when operating sawmill or loading and turning logs.

5. Raise the loader to lift the log onto the sawmill bed. Simply let the loader rise until the log rolls onto the mill bed.
6. Raise the clamp up to prevent the log from rolling off the bed.
7. Clamp the log and lower the loading arm. Leave the loading arm about halfway up while squaring the log. This will stop the log from rolling off the side of the mill.



**WARNING!** Always leave loading arm halfway up while log is on sawmill bed.

**NOTE:** Logs also may be loaded onto the mill with a tractor or other equipment specifically designed for that purpose.



**CAUTION!** Do not drop the log on the bed. Damage to the frame may occur.

### TO TURN LOGS

1. Raise the log turner arm until it touches the log and starts to turn it.
2. Spin the log against the side supports until it is turned the way you want it for the first cut.
3. To turn the log more, clamp the log against the side supports and lower the turner arm below the log.
4. Raise the turner arm to get a new bite on the log.
5. Disengage the clamp and continue turning the log.
6. Repeat steps 3 through 5 until the log is turned as desired.

### TO TURN LOGS (OPTIONAL PROCEDURE)

If you are turning a small cant, you may opt to use the clamp to turn the cant.

1. Lower the clamp below bed level.
2. Move the clamp in, beneath the edge of the cant.

3. Raise the clamp and flip the cant.

### TO CLAMP LOGS

1. Clamp the log against the side supports.
2. Lower the turner until the arm falls below the bed.

When the turner arm is lowered all the way, the side supports will begin to lower.

3. Back the clamp off slightly, and let the side supports come down until they are positioned below the level of your first few cuts.

### TO LEVEL A TAPERED LOG

1. Use the **TOE BOARD** lever(s) to raise either end of a tapered log as desired.
2. Raise the front (or rear) toe board until the heart of the log is parallel to the log bed.

## 4.3 Up/Down Operation


This section describes operation of the up/down system with the standard and wireless controls. See the operation section of the Accuset manual for operation of the up/down system using these options.

### OPERATOR ASSEMBLY

1. Install a blade, if needed, and check for correct blade tension. ([See Section 3.3](#)).
2. Set the cutting head to the desired height. (The blade height scale shows the height of the blade above the bed rails.)

The up/down switch is located on the far right side of the control panel.

3. Push the switch up to raise the cutting head.
4. Push the switch down to lower the cutting head.
5. Hold the switch in position until the cutting head reaches the desired height, then release.

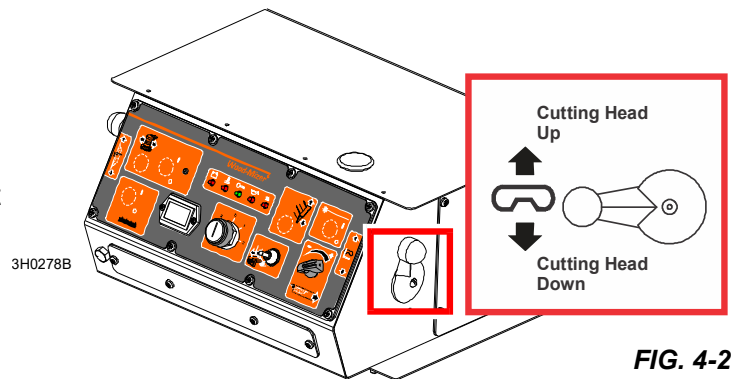

### WIRELESS TRANSMITTER

The up/down switch is designed to return to the neutral or "off" position when released. If the switch remains engaged, manually move the switch to the neutral or "off" position. Repair the up/down drum switch ([See Section 7.2](#)).

1. When using the wireless transmitter, push the up/down joystick up to raise the saw head.
2. Push the joystick down to lower the cutting head.
3. Hold the joystick in position until the cutting head reaches the desired height, then release.

The up/down joystick is designed to return to the neutral or "off" position when released.

If the joystick remains engaged, manually move the joystick to the neutral or "off" position. Replace the up/down joystick, if necessary.



**CAUTION!** Always make sure the up/down switch or joystick moves to the neutral or "off" position when released to ensure that the saw head stops moving. Failure to do so may result in machine damage.

DO NOT try to force the carriage above the 35" (88 cm) mark or below the 1" (2.54 cm) mark. Damage to the up/down system may result.

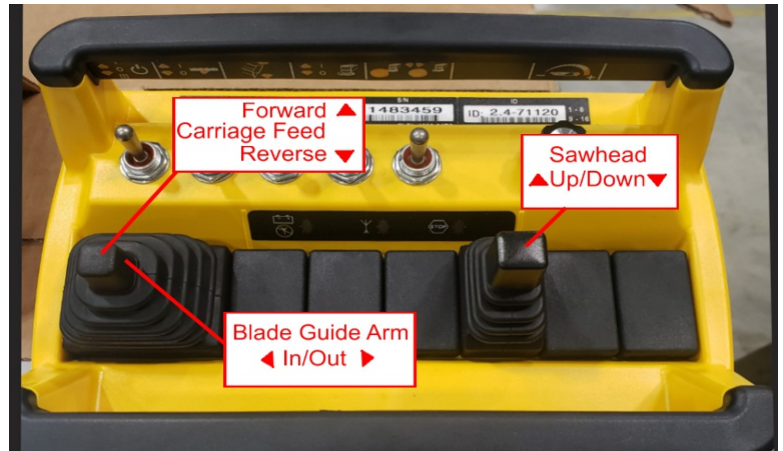


FIG. 4-3

## 4.4 Up/Down Operation

This section describes operation of the up/down system with the standard and wireless controls. See the operation section of the Accuset manual for operation of the up/down system using these options.

### OPERATOR ASSEMBLY

1. Install a blade, if needed, and check for correct blade tension. ([See Section 3.3](#)).
2. Set the cutting head to the desired height. (The blade height scale shows the height of the blade above the bed rails.)

The up/down switch is located on the far right side of the control panel.

3. Push the switch up to raise the cutting head.
4. Push the switch down to lower the cutting head.
5. Hold the switch in position until the cutting head reaches the desired height, then release.

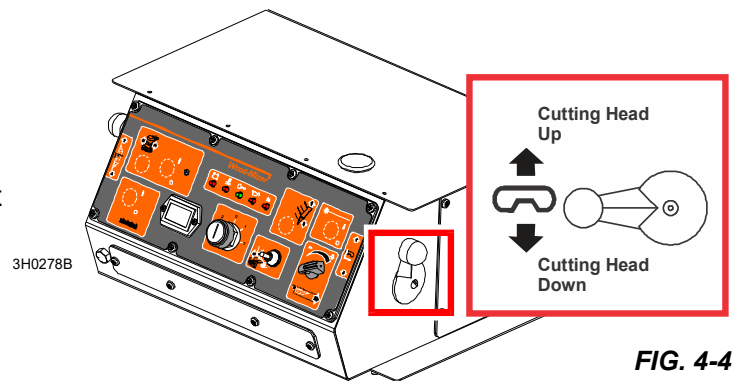


FIG. 4-4

### WIRELESS TRANSMITTER

The up/down switch is designed to return to the neutral or "off" position when released. If the switch remains engaged, manually move the switch to the neutral or "off" position. Repair the up/down drum switch ([See Section 7.2](#)).

1. When using the wireless transmitter, push the up/down joystick up to raise the saw head.
2. Push the joystick down to lower the cutting head.
3. Hold the joystick in position until the cutting head reaches the desired height, then release.

The up/down joystick is designed to return to the neutral or "off" position when released.

If the joystick remains engaged, manually move the joystick to the neutral or "off" position. Replace the up/down joystick, if necessary.



**CAUTION!** Always make sure the up/down switch or joystick moves to the neutral or "off" position when released to ensure that the saw head stops moving. Failure to do so may result in machine damage.

DO NOT try to force the carriage above the 35" (88 cm) mark or below the 1" (2.54 cm) mark. Damage to the up/down system may result.

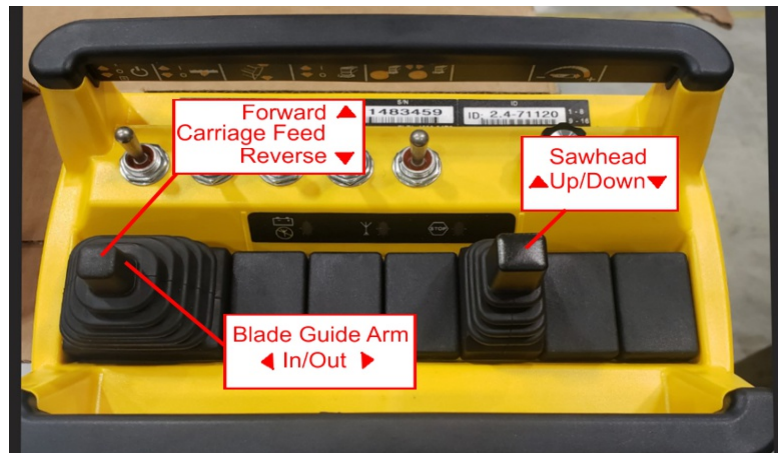


FIG. 4-5

## 4.5 Autoclutch Operation

The sawmill is equipped with an automatic clutch mechanism that remotely engages/disengages the blade using a switch on the control box or on the wireless transmitter.

### OPERATOR ASSEMBLY

1. To engage the blade using the control box, push the toggle switch on the control panel up.
2. Hold the switch up until the clutch motor stops completely.

The autoclutch mechanism will disengage the brake.

3. Rev the motor to full throttle, and start the blade spinning.



**DANGER!** Keep all persons out of the path of moving equipment and logs when operating sawmill or loading and turning logs. Failure to do so will result in serious injury.

4. To stop the blade and engage the blade brake, push the toggle switch down. This will also return the engine to idle.

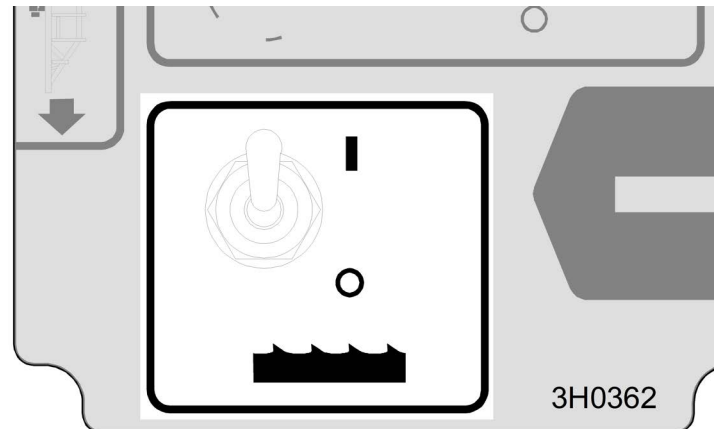


FIG. 4-6

**NOTE:** Be sure the toggle switch stays in the up or down position. The boot on the switch may spring the switch back to neutral. You may need to hold the switch in position until the remote clutch motor completes its cycle.

### WIRELESS TRANSMITTER

1. To engage the blade using the wireless transmitter, push the autoclutch toggle switch up.
2. Hold the switch up until the clutch motor stops completely.
3. The autoclutch mechanism will disengage the brake.
4. Rev the motor to full throttle, and start the blade spinning.
5. To stop the blade and engage the blade brake, push the toggle switch down. This will also return the engine to idle.



FIG. 4-7

## 4.6 Power Feed Operation

### OPERATOR ASSEMBLY

#### Carriage Feed Rate

The carriage feed rate switch controls the speed at which the carriage travels forward.

1. Turn the switch clockwise to increase speed.
2. Turn it counterclockwise to reduce speed.

#### Carriage Forward and Reverse

The carriage forward/reverse switch controls the direction in which the carriage travels.

1. Turn the forward/reverse switch upward to move the carriage forward.
2. Turn the switch down to move the carriage backward.

The middle position (as shown) is the neutral position. The power feed switch is designed to return to the neutral or "off" position when released from operating in the reverse position. If the switch remains engaged, manually move the switch to the neutral or "off" position. Repair the drum switch ([See Section 7.2](#)).

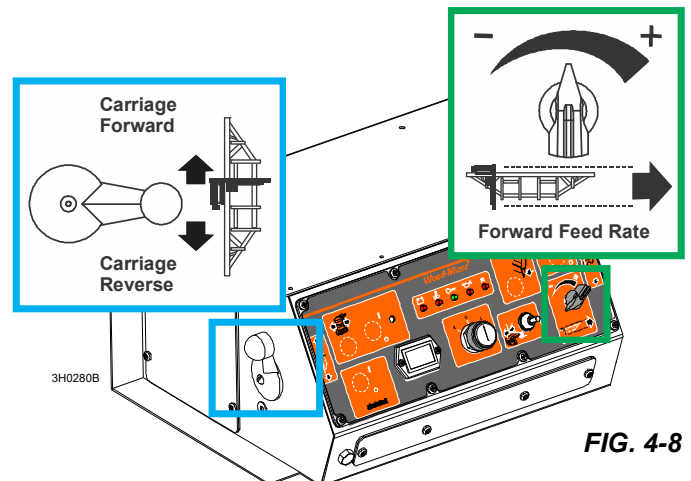


FIG. 4-8



## WIRELESS TRANSMITTER

### Carriage Feed Rate

1. The carriage feed rate switch controls the speed at which the carriage travels forward.
2. Turn the switch clockwise to increase speed. Turn it counterclockwise to reduce speed.

### Carriage Forward and Reverse

The carriage forward/reverse joystick controls the direction in which the carriage travels.

1. Turn the forward/reverse joystick upward to move the carriage forward.
2. Turn the joystick down to move the carriage backward.

The middle position (as shown) is the neutral position. The power feed joystick is designed to return to the neutral or "off" position when released from operating in the reverse position.

If the joystick remains engaged, manually move the joystick to the neutral or "off" position. Replace the joystick.

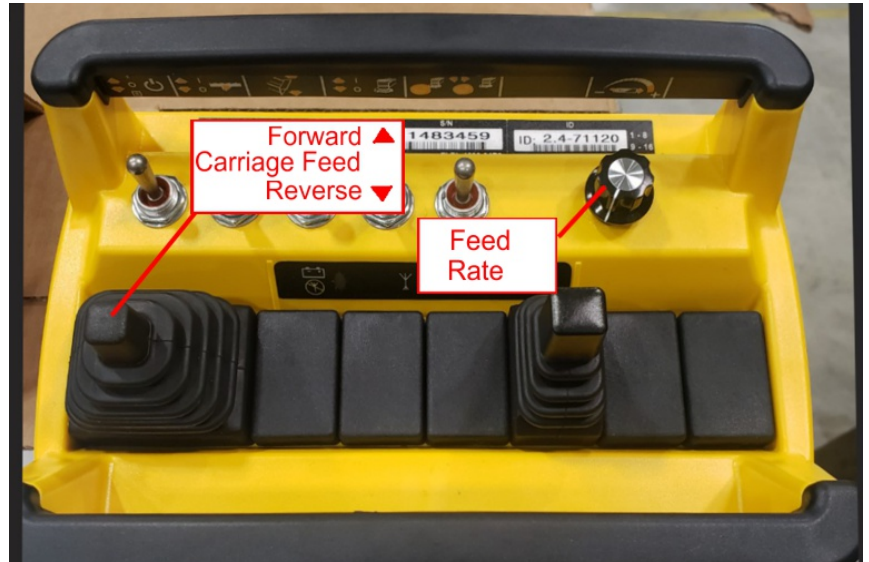


FIG. 4-9

**WARNING!** Be sure the power feed switch or wireless transmitter joystick is in the neutral position before turning the key switch to the on (#1) or accessory (#3) position. This prevents accidental carriage movement which may cause serious injury or death.

### Using The Power Feed

1. To move the carriage forward, push the drum switch handle or wireless transmitter joystick forward and turn the feed rate switch clockwise.

**TIP:** To get a straight cut in the first part of the board, feed the blade into the log at a slow speed. This stops the blade from flexing and dipping up or down. Turn the carriage feed rate switch to a slow speed until the whole width of the blade has entered the cut. Then use the carriage feed rate switch to increase the feed rate as desired. Maximum feed rate varies with width and hardness of the wood. Over-feeding results in engine and blade wear, and also produces a wavy cut.

2. Stop the carriage at the end of the cut by turning the carriage feed rate switch counterclockwise until the carriage stops moving. Throw the autoclutch toggle switch down to stop the blade and drop the engine to idle. Remove the board from the top of the log. **Always disengage the blade before returning the carriage for the next cut.**

**CAUTION!** Be sure to stop the blade when returning the carriage. This will not only prevent the blade from being pulled off and ruined by a wood sliver, but also will increase the life of the blade. [See Section 4.9](#) for optional sawing procedure for Super series mills.

3. Make sure that the blade does not catch on the end of the log. Raise the carriage slightly to make sure the blade clears the log when returned.
4. Return the carriage to the front of the mill by pushing the drum switch handle or wireless transmitter joystick down. The power feed motor will bypass the carriage feed rate switch and the carriage will automatically return at the fastest speed available. [See Section 4.9](#) for optional sawing procedure for Super series mills.

**TIP:** Try to stop the blade while the heel of the blade is still on the log. Then bring the carriage back without adjusting the blade up. This lets you keep the blade at the current height setting so you can make the next blade height adjustment more quickly.

**DANGER!** Stay clear of the area between the trailer axle and saw carriage. Failure to do so will result in serious injury.

## 4.7 Cutting The Log

**NOTE:** If the optional board return function is available, install the board return table and move the board return arm from its storage position. [See Section 3.9.](#)

1. Ensure the log is properly placed and firmly clamped.
2. Move the saw head to position the blade close to the end of the log.
3. Use the blade height scale to determine where to make your first cut. [See Section 4.10.](#)
4. Set the blade to the desired height with the up/down switch.
5. Make sure that the blade will clear all side supports and the clamp.
6. Adjust the outer blade guide to clear the widest section of the log by moving the blade guide toggle switch.

**NOTE:** An optional laser sight is available to help determine where the blade will travel through the log. See the laser sight manual for more information.

7. Engage the autoclutch blade switch to start the blade spinning.
8. Start the water lube if necessary to prevent sap buildup on the blade. [See Section 4.11.](#)
9. Feed the blade into the log **slowly**. [See Section 4.6](#)
10. Increase the feed rate as desired after the blade completely enters the log.

**NOTE:** Always try to cut at the fastest speed you can while keeping an accurate cut. Cutting too slowly reduces blade life and lowers production!

11. Slow down the feed rate as the blade nears the end of the log.
12. Stop the carriage when the teeth exit the end of the log.
13. Disengage the autoclutch blade switch.
14. Remove the slab that has just been cut from the log.
15. Use the carriage forward/reverse switch to return the carriage to the front of the mill.
16. Repeat until the first side of the log is cut as desired.
17. Set aside the usable flitches (boards with bark on one or both sides) to be edged later.
18. Lower the toe boards, if they were used.
19. Use the hydraulic levers to release the clamp and engage the log turner.
20. Turn the log 90 or 180 degrees.

**NOTE:** Make sure the flat on the log is placed flat against side supports if turned 90 degrees. Make sure it is placed on bed rails if turned 180 degrees. If the log was turned 90 degrees and toe boards are being used to compensate for taper in the log, raise the front or rear toe board again on the second side of the log until the heart is parallel with the bed.

21. Repeat the steps used to cut the first side of the log until the log is square.
22. Cut boards from the remaining cant by adjusting the blade height for the thickness of boards desired.

**Example:** The blade cuts a 1/16-1/8" (1.6-3.2 mm) wide kerf. If 1" (25.4 mm) thick boards are desired, lower the carriage 1 1/16-1 1/8" (27-28.6 mm) for each board.

## 4.8 Edging

1. Raise the side supports to 1/2 the height of the flitches, or the boards that need to be edged.
2. Stack the flitches on edge against the side supports.
3. Clamp the flitches against the side supports halfway up the flitch height.

**TIP:** Wider flitches should be placed to the clamp side. When they are edged, flip them over to edge the second side without disturbing the other flitches or without having to pull them from the middle of the stack.

4. Adjust the blade height to edge a few of the widest boards.
5. Loosen the clamp and turn the edged boards over to edge the other side.
6. Repeat steps 2-4.
7. Loosen the clamp and remove the boards that have good clean edges on both sides.
8. Clamp the remaining flitches and repeat steps 2-5.

## 4.9 Optional Cutting Procedure for Super Series Mills

In order to achieve maximum production rates with Super Series mills, it may be desirable to leave the blade engaged when returning the carriage. (Normal operation procedures recommend disengaging the blade before returning the carriage for maximum blade life and fuel economy.)



**DANGER!** If leaving the blade engaged for maximum production rates, make sure the off-bearer stays out of the path of the blade. Failure to do so will result in serious injury or death.



**CAUTION!** If you choose to leave the blade engaged; raise the blade to clear the log before returning the carriage. Failure to do so may cause damage to the blade and/or sawmill.

## 4.10 Blade Height Scale

The blade height scale is attached to the carriage head frame. It includes:

- a blade height indicator
- an inch scale
- a quarter scale

The scales are attached to the frame and move up and down with the saw head. The blade indicator, used to read the inch and quarter scales, remains stationary.

### THE INCH SCALE

The horizontal line on the blade height indicator shows how many inches the bottom of the blade is above the bed of the mill. Knowing the height of the blade at each cut, the thickness of lumber being sawed can be determine.

**Example:** 1" (25 mm) thick boards are wanted from random width boards from a log.

1. Position the blade for the first cut.
2. Move the carriage to an even measurement on the inch scale.
3. Make a trim cut.
4. Return the carriage for the second cut and lower it 1 1/8" (29 mm) below the original measurement.

The extra 1/8" (3 mm) allows for saw kerf and shrinkage of the lumber.

**NOTE:** The yellow area at the bottom of the scale identifies where the blade could encounter a side support or log clamp.

5. Check that all parts of the mill are below the blade level before sawing.

### THE QUARTER SCALE

Two quarter scales are provided with four sets of marks. Each set represents a specific lumber thickness. Saw kerf and shrinkage allowance are included, but actual board thickness will vary slightly depending on blade thickness and tooth set.

To choose which scale to use, determine what finished thickness you want to end up with. The Grade Hardwood Quarter Scale provides thicker finished boards usually required by commercial buyers. The Standard Quarter Scale allows for kerf and shrinkage of finished boards suitable for most custom applications. Always check with your customer before you saw to determine what actual finished thickness is required.

To use the quarter scale, look at the blade height indicator.

1. Loosen the wing studs (located near the center of the scale) holding the quarter scale to the mast.
2. Align the nearest mark on the scale you want to use with the blade height indicator.

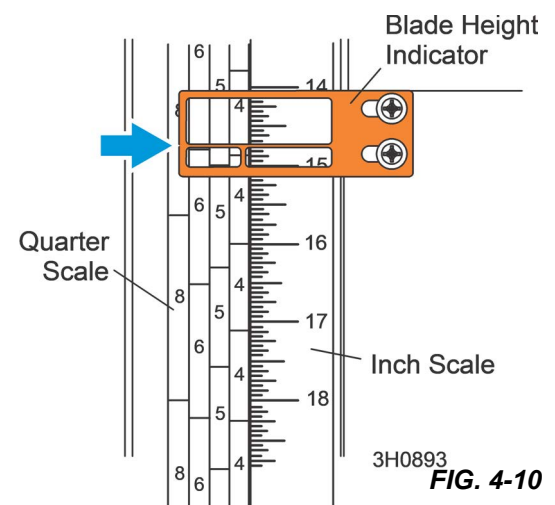


FIG. 4-10

Grade Hardwood Quarter Scale	
Scale	Actual Board Thickness
4/4	1 1/8" (29 mm)
5/4	1 3/8" (35 mm)
6/4	1 5/8" (41 mm)
8/4	2 1/8" (54 mm)

TABLE 4-1

- Tighten the wing studs.



**CAUTION!** Be sure to leave the wing studs in the vertical orientation to avoid interference with the blade height indicator. Failure to do so may result in damage to the indicator.

- Make a trim cut and return.
- Lower the carriage to the next mark on the scale.

This mark shows where the blade should be positioned to cut a certain thickness of lumber, without having to measure on the inch scale.

**Example:** 1" (25 mm) (4/4) thick boards are wanted from random width boards from a log.

- Position the blade for the first cut.
- Adjust the quarter scale so a 4/4 mark is aligned with the line on the indicator.
- Make a trim cut.
- Return the carriage for the second cut.
- Now, instead of having to measure down 1 1/8" (29 mm) on the inch scale, lower the blade so the indicator is aligned with the next 4/4 mark on the quarter scale.
- Turn the log 90 degrees and repeat.

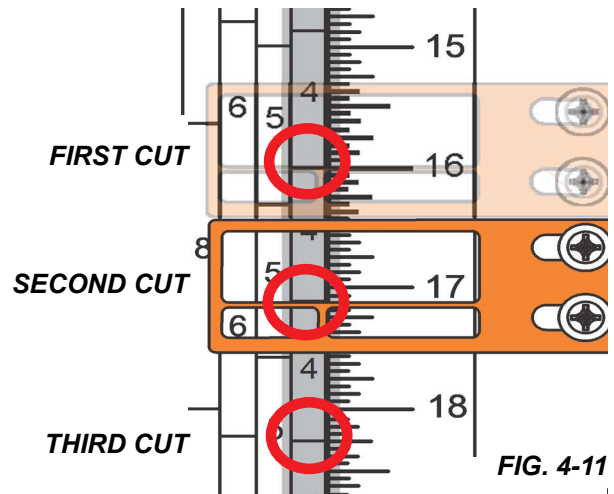


FIG. 4-11

## 4.11 Water Lube Operation

The Water Lube System keeps the blade clean. Water flows from a 5-gallon (18.9 liter) bottle through a hose to the blade guide where the blade enters the log. A valve in the bottle cap controls the amount of water flow.

A solenoid valve that will automatically start the water flow when the power feed is activated in the forward direction. The solenoid will stop the water flow when the feed switch is returned to the neutral position.

Not all types of wood require the use of the Water Lube System.

When it is needed, use just enough water to keep the blade clean. This saves water, and lowers the risk of staining the boards with water. Usual flow will be 1-2 gallons (3.8-7.6 liters) per hour.

Before removing the blade, engage the blade. Let the blade spin with water running on it for about 15 seconds. This will clean the blade of sap buildup. Wipe the blade dry with a rag before storing or sharpening.


For further lubrication benefits, add one 12oz. (0.35L) bottle of Wood-Mizer Lube Additive to 5 gallons (18.9 liters) of water. Wood-Mizer Lube Additive enables some previously impossible timbers to be cut by significantly reducing resin buildup on the blade. It helps to reduce heat buildup, wavy cuts, and blade noise. This biodegradable and environmentally friendly pre-mix includes a water softener additive, so it works with hard water.



**WARNING!** Use ONLY water and Wood-Mizer Lube Additive with the water lube accessory. Never use flammable fuels or liquids such as diesel fuel. If these types of liquids are necessary to clean the blade, remove it and clean with a rag. Failure to do so can damage the equipment and may result in serious injury or death.



**CAUTION!** Add windshield washer fluid to the water tank and prime as recommended when sawing or storing the sawmill in below-freezing temperatures. Use windshield washer fluid with a freezing point of at least -20°F (-29°C). Failure to do so will cause damage to the LubeMizer system may result.

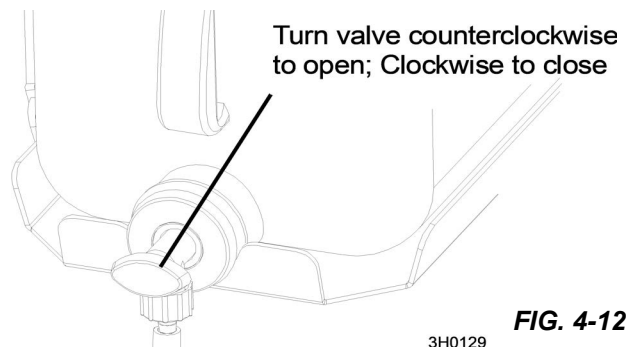

3H0129

FIG. 4-12

## 4.12 Optional Lube-Mizer (LMS-HP)

This option is used in place of the standard Water Lube system to lubricate the blade during sawing.

- The Lube-Mizer option applies lubricant to both sides of the blade as you are sawing to reduce resin buildup on the blade.
- The system utilizes an automatic valve which activates the lubricant flow only when the saw carriage is moving forward.
- You can adjust the volume of lubricant for various wood types.
- The Lube-Mizer option uses less volume than the standard Water Lube, helping to reduce lubricant/sawdust mess and waste, and to prevent stained boards.

1. Start the self-priming system,
2. Open the water lube bottle valve all the way.
3. Turn the sawmill control box key to the ACC or ON position.
4. Turn the lube control switch to PULSE and set the lube dial to the desired flow rate. Use the lowest setting that successfully eliminates pitch buildup.

**NOTE:** Pulse is suitable for most cutting applications. CONTINUOUS delivers a steady stream of lubricant and should be used only for heavy pitch buildup or occasional blade cleaning.

**NOTE:** Softwood applications will usually require more lubricant than hardwood applications.

5. Cut the log as normal.
6. Shut off the lube,
  - 1). Turn the lube control switch to OFF.
  - 2). Close the lube bottle valve all the way.



**WARNING!** Use ONLY water and Wood-Mizer Lube Additive with the water lube accessory. Never use flammable fuels or liquids such as diesel fuel. If these types of liquids are necessary to clean the blade, remove it and clean with a rag. Failure to do so can damage the equipment and may result in serious injury or death.



**CAUTION!** Add windshield washer fluid to the water tank and prime as recommended when sawing or storing the sawmill in below-freezing temperatures. Use windshield washer fluid with a freezing point of at least -20°F (-29°C). Failure to do so will cause damage to the LubeMizer system may result.

## 4.13 Preparing The Sawmill For Towing

**NOTE:** If you your sawmill is equipped with an optional board return, return the board return arm to its storage position before towing the sawmill.

1. Move the saw carriage to the front end of the sawmill. Raise the rear outriggers.



**CAUTION!** Be sure the outrigger base is adjusted properly before securing the FAO in position with the lock pin. Failure to do so will cause damage to the outrigger grease fitting.

Do not adjust the FAO outrigger base height while there is weight on the FAO. Damage to the FAO may result.

2. Move the clamp all the way in toward the main bed frame tube.



FIG. 4-13

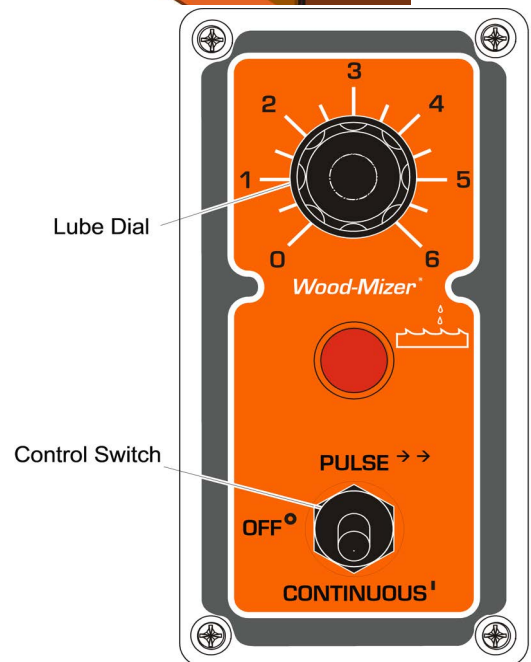


FIG. 4-14

**CAUTION!** Move the hydraulic clamp and turner to provide maximum ground clearance before towing. Failure to do so may result in damage to the sawmill.

3. Use the hydraulic controls to raise the log turner and loader as high as they will go.
4. Manually lift the loader and hook the loader chain to the elbow of the turner.
5. Use the hydraulic turner lever to lower the turner until the chain is tight.
6. Push the loader lever down to bring the loader arm channels up to the loader.
7. Release the blade tension.

**CAUTION!** Changes in temperature could cause increased pressure in the blade tensioner and loss of fluid from the gauge. Release the blade tension when the mill is not in use to avoid damage to the tensioner.

8. Move the carriage forward to the travel position over the rear bed rail.
9. Position the hole in the saw head over the travel rest pin.
10. Lower the saw head until it is seated firmly on the rest pin (shown in red on FIG.4-15).
11. Secure the rest pin in the vertical position with the locking pin.
12. Continue lowering the head 3/4" (19mm) until it contacts the stop blocks on the mast rails.

**CAUTION!** It is important that the lower stop bolts are properly adjusted to secure the carriage on the track rail. Failure to properly adjust the stop bolts can cause saw head damage, especially during mill transportation. **See FIG 4-16.**

13. **If necessary**, adjust the stops located at the bottom of the mast so the saw head contacts them after it is lowered 3/4" (19mm) past where it contacts the rest pin. See FIG. 4-16.

- 1). Loosen jam nut.
- 2). Adjust bolt as needed.
- 3). Tighten jam nut.

14. Engage the clutch/brake lever or autoclutch blade switch to keep the drive belt tight and the motor from bouncing while traveling.

**NOTICE:** Be sure to disengage the clutch/brake lever or autoclutch blade switch after reaching the destination to avoid deformation of the drive belt.

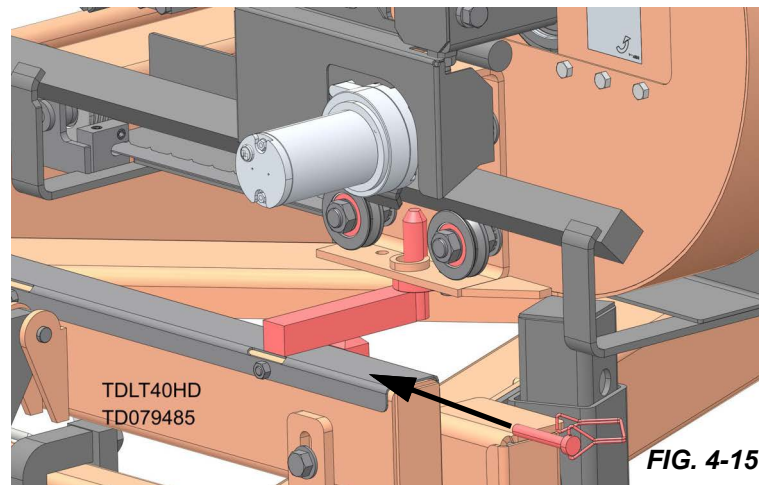


FIG. 4-15

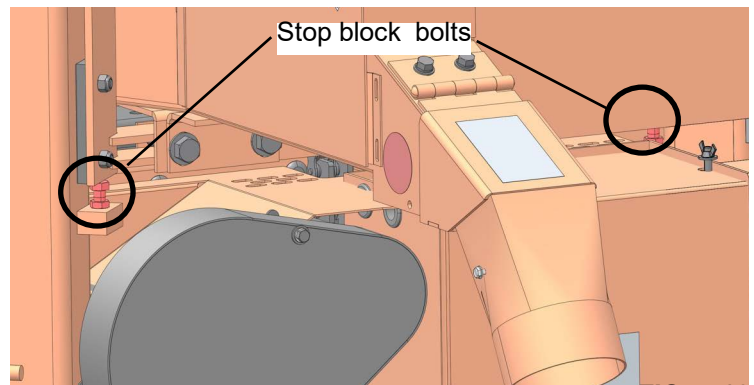



FIG. 4-16

15. Hook the carriage safety chain (shown in red) located at the bottom of the carriage to the bracket at the bottom of the mast. See FIG. 4-17.



**CAUTION!** Check to be sure the saw head safety chain is secured before towing the sawmill. Failure to properly secure the saw head can result in severe machine damage.

Be sure the blade housing and pulley covers are in place and secure. Use the safety retainer pin and cable to fasten blade housing covers.

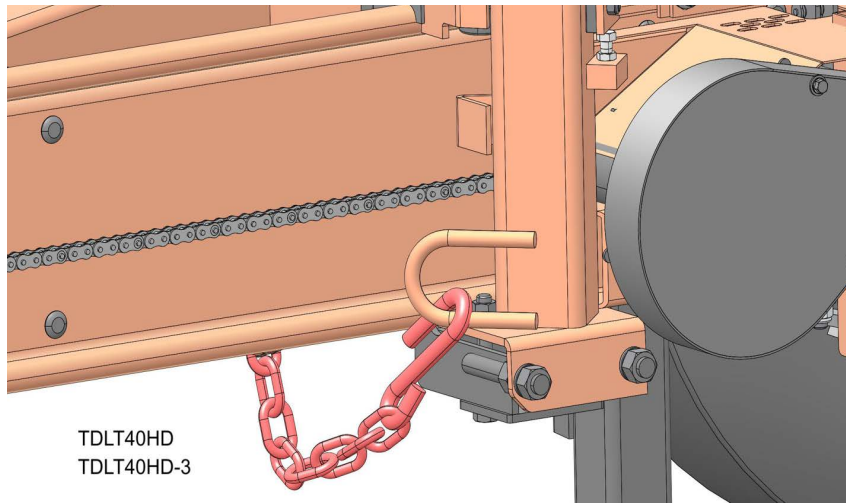

16. Remove all loose objects from the bed of the mill.

17. Store the outrigger jack handle in the bracket provided on the rear/loading-side outrigger guide.

18. Place both fenders in the slots located behind the trailer tires and secure with rubber straps.

19. Raise all but the very front outrigger.

For Fine Adjust Outriggers (FAOs), adjust the outrigger base height so that the grease fitting is just below the lowest outrigger hole before securing the FAO in position with the lock pin.



**CAUTION!** Be sure the outrigger base is adjusted properly before securing the FAO in position with the lock pin. Failure to do so will cause damage to the outrigger grease fitting.

Do not adjust the FAO outrigger base height while there is weight on the FAO. Damage to the FAO may result.

**FIG. 4-17**


See the trailer operator's manual for specific information regarding hitch operation and towing the sawmill.



## SECTION 5 ACCUSET SETUP AND OPERATION

### 5.1 Control Setup

Turn the key switch to the accessory (#3) position. The Accuset control starts in Manual Mode by default. See the figure below for identification of the control buttons and display.

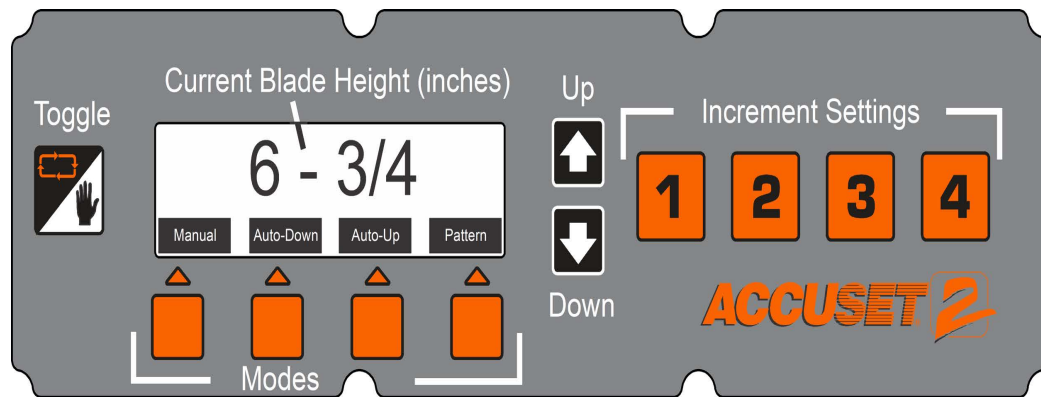

3H0989  
FIG. 5-1

**About using the Up/Down Adjustment Buttons:** To make adjustments to a setting, push the Up or Down arrow buttons to scroll to the desired setting. As you push and hold the up or down buttons, the setting scrolling speed will automatically increase.

In Manual Mode, the up and down arrow buttons have special functions. You can enter configuration menus by pushing the Up button. Pushing the Down button moves the saw head to the nearest nominal inch (or centimeter).

**About the Toggle button:** Use the Toggle button to exit configuration menus and return to the main menu. Pressing and holding the Toggle button during startup will reset the Accuset programming to factory default settings. Pressing the Toggle button in Manual Mode will place Accuset in Reference Mode.


#### **Contrast Adjustment**

When the Accuset is first powered on, the Accuset 2 splash screen is displayed for a few seconds. Push and hold the Up or Down button to adjust the display contrast as desired for your lighting conditions.

## Startup Configuration

Accuset controls on new sawmills are configured at the factory. If you have installed or replaced the control, be sure to configure the control before operating the Accuset. Follow the procedures below *in the order they are listed*.


To enter Configuration Menu 1, push the Up button while in Manual Mode.

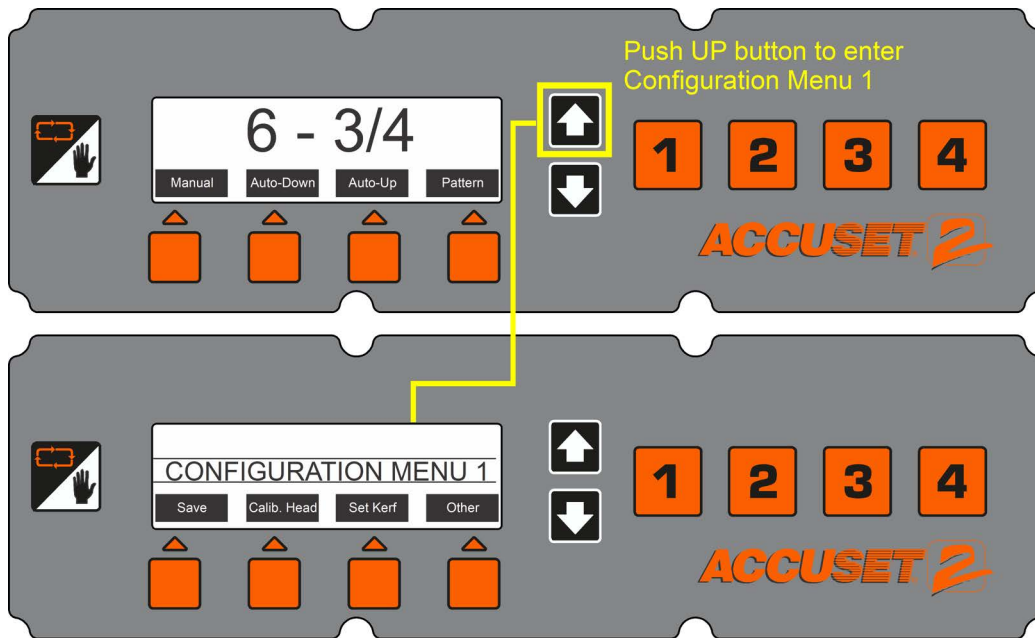

3H0989-2  
FIG. 5-2

- Adjust Gradient.** If the Accuset is factory-installed, the Gradient Setting is already set to match the gradient of the transducer sensor (labeled "GRD" on the sensor). If the Accuset has been installed in the field, the transducer replaced or the Accuset control has been reset to Factory Settings, the Gradient Setting should be adjusted.


To enter Configuration Menu 1, push the Up button while in Manual Mode. Push the button labeled "Calibrate Head", then the "Adjust Gradient" button to display the menu below.

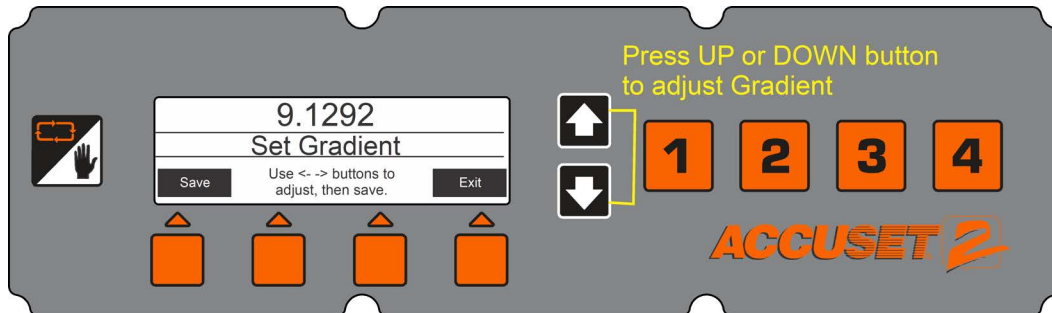

3H0989-3

FIG. 5-3

Push the Up or Down buttons until the Gradient Setting is the same as the sensor gradient shown on the sensor label (use the number labeled "us/in"). Push the Save button to store the new Gradient Setting. If you don't want to save the new setting and want to return to the previously stored Gradient Setting, push Exit and turn the key switch to the off (#0) position.

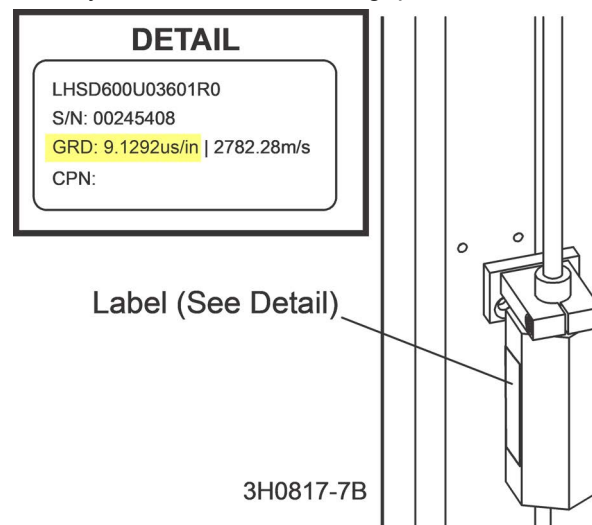

3H0817-7B


FIG. 5-4

- Press At 12 Inches (or 305mm in metric mode).** The Accuset control should indicate the actual position of the blade above the bed rails. To check this setting, move the saw carriage so the blade is positioned above a bed rail. Raise the saw head until the blade is positioned 12" (305mm) by actual measurement from the bed rail. Measure from the top of the bed rail to the bottom of a down-set tooth of the blade. While in Manual Mode, push the Up button to enter the Configuration Menu. Choose Calibrate Head and press the button labeled "Press at 12 inches" (or "Press at 305mm"). The display will change to "Head Calibrated". Push the Save Settings button to store the new 12-inches setting and exit the Configuration Menu.
- After recalibrating the Accuset control,** check and adjust the inch scale on the saw head to match the value displayed on the control. Adjust the bottom saw head stop bolt all the way down. Move the saw head down until Accuset displays 3/4" and adjust the bottom saw head stop bolt up until it just touches the saw head.

## Setting the Kerf

The Kerf setting is **optional**. The default kerf setting is '0'. You can use the kerf setting to automatically factor the blade thickness into the increment setting. Factoring the kerf into the program will allow you to saw boards that are the actual thickness of the programmed increment. For example, if kerf is set to '0' and you have programmed increments of 1 1/8", the resulting boards will be about 1 1/16" thick because Accuset did not factor the thickness of the blade. If you enter an accurate kerf value, the resulting boards will be 1 1/8". Whether or not to use the kerf setting is dependant on the sawing practices and application.

While in Manual Mode, push the Up button to enter the Configuration Menu. Press the "Set Kerf" button to display the menu below.

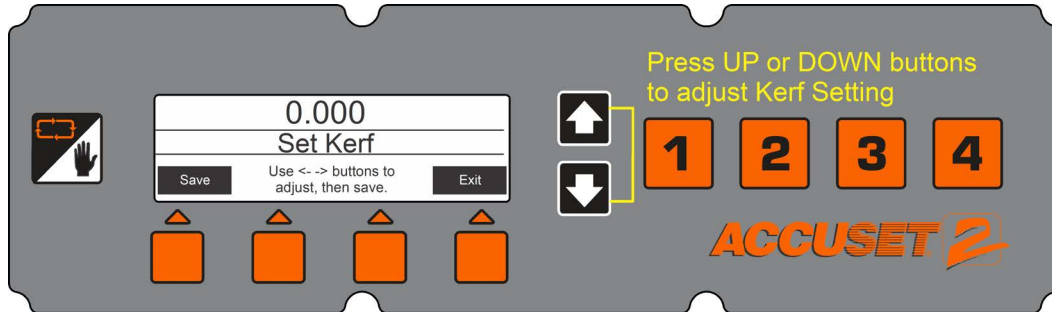

3H0989-4

FIG. 5-5

Recommended kerf settings for various blades are provided below. These kerf setting values assume the teeth of the blade are set per factory specifications. If you prefer, a nominal kerf value of .125 (3 mm) can be entered and should be accurate enough for most applications.


Blade Thickness	Blade Style	Kerf Setting
.042	10S	0.084 (2.2 mm)
.045	9S	0.090 (2.3 mm)
	10S	0.095 (2.5 mm)
.055	10S	0.111 (2.9 mm)

TABLE 5-1

Push the Set Kerf button and use the Up and Down buttons to adjust the kerf setting. Pushing the Up and Down buttons simultaneously will scroll the kerf faster. Push the Save button to store the new Kerf Setting. If you don't use the Kerf Setting, be sure to include the thickness of the blade in your increment settings as described in Section 4.2 Mode Selection.

## Language, Units, PID Values, and Diagnostic


Other settings can be changed for the Accuset including the language used on the display, the unit of measure, and PID values. These settings are found in Configuration Menu 2. To display Configuration Menu 2, push the Up button while in Manual Mode to display Configuration Menu 1. Select Other to display Configuration Menu 2.

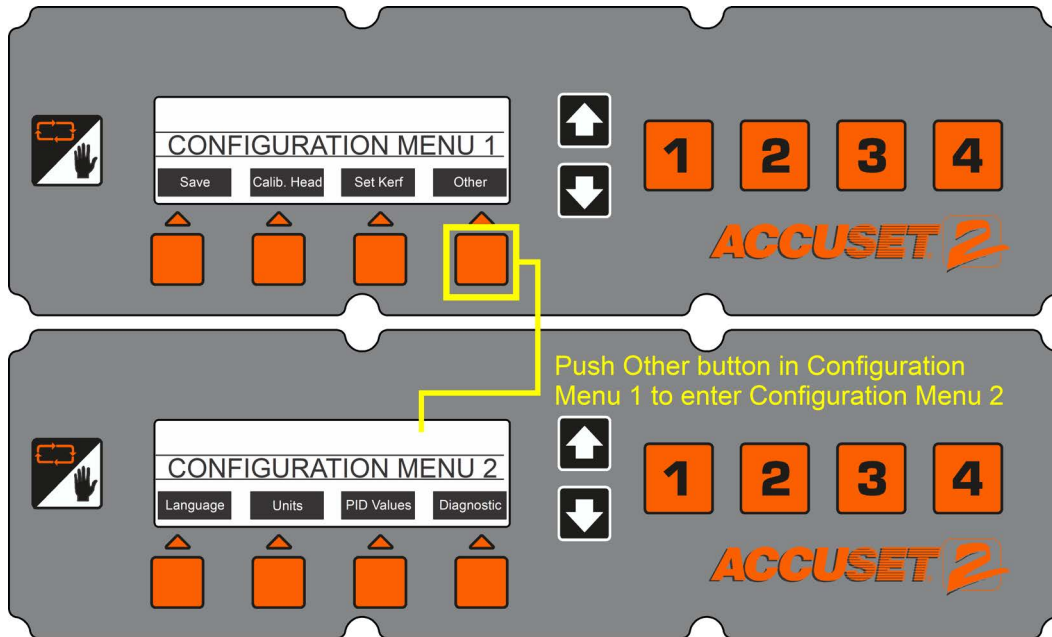

3H0989-5  
FIG. 5-6

## LANGUAGE


Push the Language button and choose the desired language. Push the Save (or language equivalent) button to permanently store the new Language setting. To return to the previously stored Language setting, push Exit and turn the key switch to the off (#0) position.

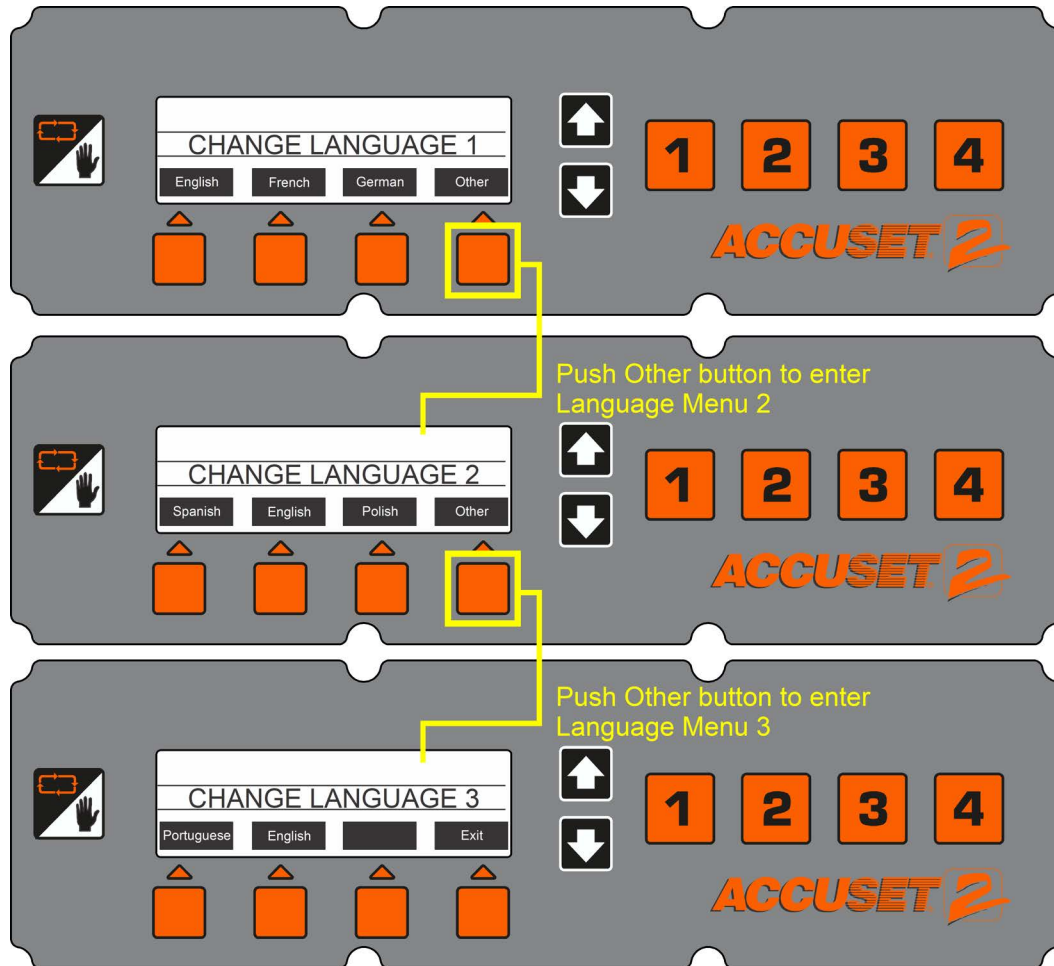

3H0989-7  
FIG. 5-7

## UNITS

This setting allows you to choose what unit of measure to use for your Blade Height and Increment Settings. The default value is Fractional Inches ( $1/32''$ ). You can change the Unit Of Measure to Decimal Inches ( $.0313''$ ) or Millimeters (1 mm). Push the Save button to store the new Unit Of Measure setting. To return to the previously stored Unit Of Measure, push Exit and turn the key switch to the off (#0) position.

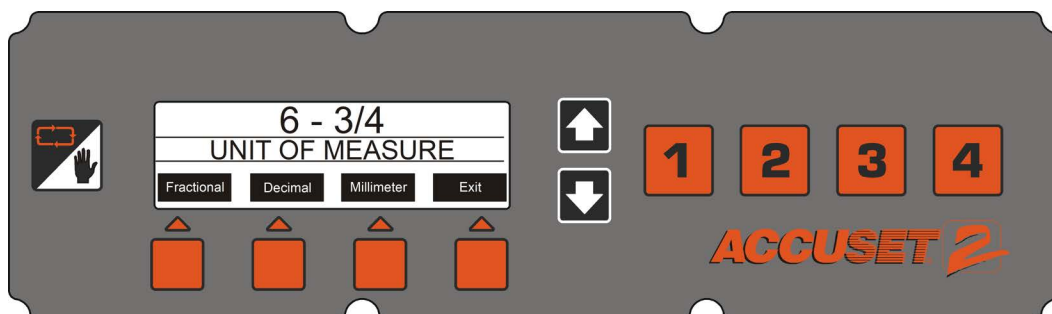

3H0989-6

FIG. 5-8

## PID (PROPORTIONAL - INTEGRAL - DIFFERENTIAL) VALUES

These settings allow a technician to diagnose and fine-tune the Accuset control for various environmental factors. These settings are made at the factory and should not normally need adjusting by the operator.

The factory default PID value settings are shown below.

Value	Factory Default LT40 Super	Alternate for Standard Mills	Alternate for LT50
Up Ticks	1	1	3
Up Distance	7500	1500	14000
Up Minimum	50	80	46
Down Ticks	1	1	2
Down Distance	5000	2600	0
Down Minimum	50	60	40

TABLE 5-2

After making the desired PID Value adjustments, push the Save button and go to the desired Accuset mode. Test how the changes affect Accuset performance. If the new settings cause undesirable results, reset Accuset to the factory defaults.

## DIAGNOSTIC

This menu provides diagnostic information regarding voltage, current and software revisions. This information can be useful for troubleshooting by a qualified Wood-Mizer service representative.

## Restore Factory Defaults


To return all Accuset settings to their factory default values, press and hold the Toggle button and turn the key switch on.

The Accuset settings are now returned to their factory default values, including:

- Calibration settings. [See Section](#) to recalibrate the Accuset control.
- PID values. See above for setting values.

## 5.2 Mode Selection

To select an Accuset mode, press the desired Mode Select button (Auto-Down, Auto-Up or Pattern) located under the display. Press the Manual Mode Select button to return the control to Manual Mode.

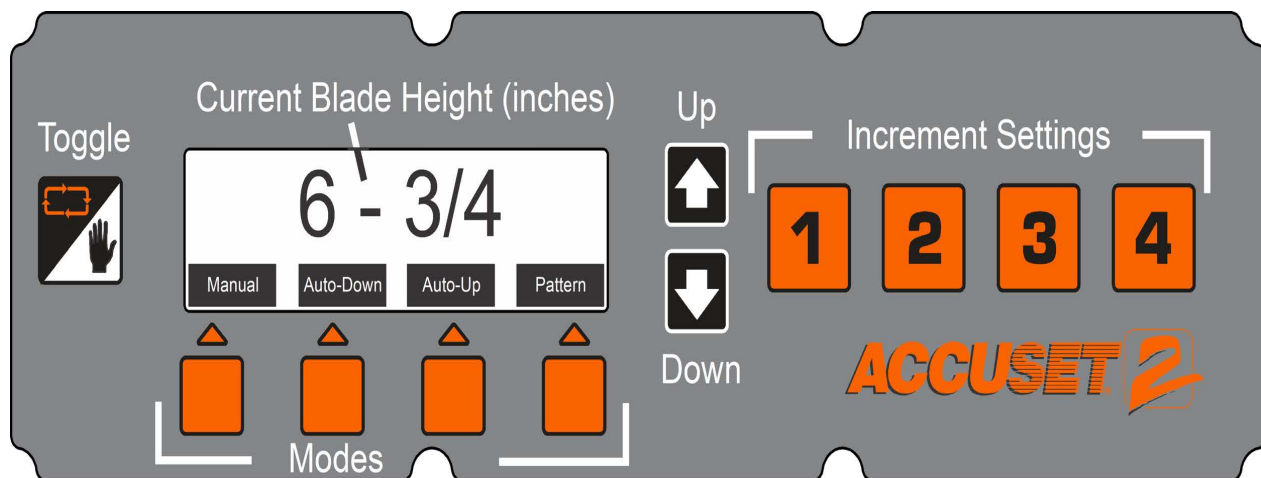

3H0989  
FIG. 5-9

**Manual Mode** - This mode allows you to use the up/down function of the sawmill as you normally would without the Accuset option. The Current Blade Height will continue to be displayed by the Accuset control.

**Auto-Down Mode** - This mode *references the current blade height* and allows you to choose an increment to move the blade *down*. The Accuset will automatically move the saw head down and stop at the next increment when you push the drum switch down. You can store sixteen different increment levels using the four numbered Increment Settings buttons. Each button stores four adjustable increment settings. Push button #1 once for setting #1. Push button #1 a second time for setting #5, etc...

**Auto-Up Mode** - This mode *references the current blade height* and allows you to choose an increment to move the blade *up*. The Accuset will automatically move the saw head up and stop at the next increment when you push the drum switch up. Auto-Up mode is primarily used to raise the saw head in large increments when preparing to cut a new log or log that has been turned. This allows the operator to raise the saw head without having to hold the drum switch up, freeing the operator to perform other functions while the saw head is being raised. The Increment Settings buttons work in the same manner as described in Auto-Down Mode.


**NOTE:** The sixteen increment settings apply to Auto-Down AND Auto-Up modes. If you change a setting in Auto-Down mode, it will also change when you are in Auto-Up mode.

**Pattern Mode** - This mode *references the bed surface* and allows you to program up to six different increments calculated up from the bed. The sixth (top) increment repeats itself up to the upper limit of the saw head travel. The bottom increment indicates the size of the remaining cant when the pattern is complete.

**Reference Mode** - This mode allows the operator to program up to four pre-set locations along the saw head travel. The factory default settings are at the bottom (1"), the location where the saw head is calibrated (12"), a location midway between the calibration and the top (24"), and the top (31").



### 5.3 Using Auto-Down Mode

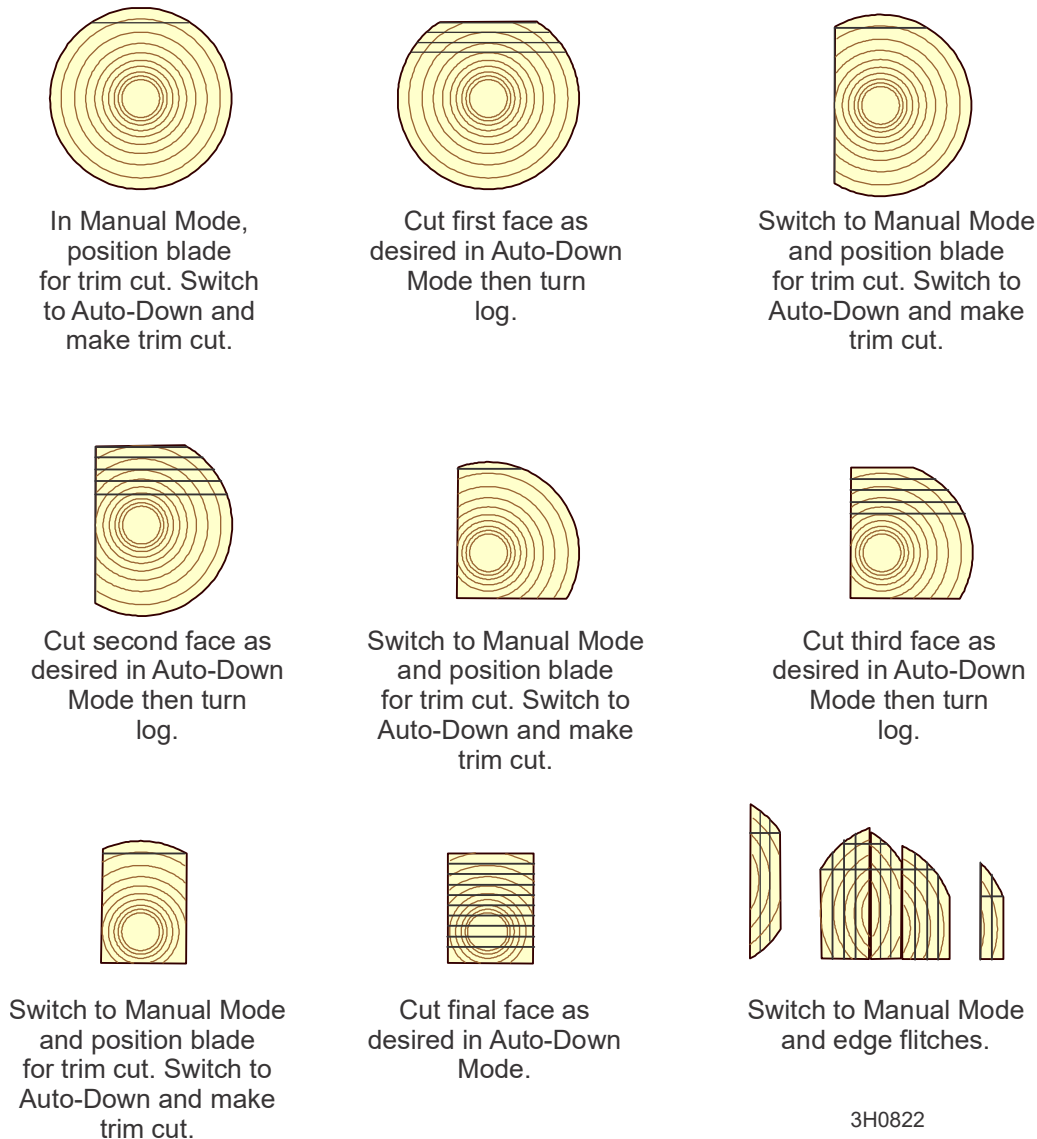

**FIG. 5-10**

1. Starting with a new log, position the saw head to make the first trim cut.
2. Push the Auto-Down button under the display. The first Increment Setting is displayed by default.
3. Choose the desired increment setting by pushing the appropriate Increment Setting button.

To change an Increment Setting:

- Select the desired setting number and push the Up or Down buttons until the desired Increment Setting is obtained.
- Remember to include blade kerf in your setting (i.e. If you want the finished boards to be 1" thick, set the increment to 1 1/8" to allow for typical blade kerf). The amount of kerf will depend on the thickness and tooth set of the blade you are using. The Accuset can be programmed with an automatic kerf setting if desired ([See Setting the Kerf](#)).

When increment value is changed, it is only temporarily stored. If the control is turned off, the settings will return to the factory defaults unless the new values are saved.

To save the new increment setting:

- Push the Manual Mode then push the Up button. The Configuration Menu will be displayed.
- Choose Save to enter the Save Settings menu.
- Push Save.

**Example:** Push Auto-down button. To store 1 1/2" increment to the #1 increment setting, push button #1. Push the Up or Down arrow button to raise or lower the increment on the screen to the desired setting. Push the Manual button, then the Up arrow to display the Configuration menu. Now push the Save button to enter the Save Settings menu. Push the Save Settings button. Multiple buttons can be programmed and saved all at one time.

4. Push the Auto-Down button to return to Auto-Down Mode if necessary. Make the trim cut, raise the saw head and return the carriage to the front of the log.
5. Push the up/down drum switch down and release. The saw head will automatically bypass the setting where the first cut was made and stop at the next setting determined by the increment you have chosen.
6. Make a cut, raise the saw head and return the carriage for the next cut. Push the up/down drum switch down and release. The saw head will stop at the setting for the next cut.
7. Repeat this procedure down this face of the log as desired.
8. Turn the log as you normally would and push the Manual Mode button to place the Accuset in Manual Mode.
9. Position the saw head for the trim cut and push the Auto-Down button to return to Auto-Down Mode. Make the trim cut, raise the saw head and return for the next cut.
10. Use the same procedure as described above to cut each side of the log until done.

**NOTE:** Anytime a trim cut is necessary, the Manual button can be pressed to enter Manual Mode. Position the saw head for the trim cut and push the Auto-Down button to return to Auto-Down Mode. Accuset will reference the new blade position and stop at the next setting determined by the increment you have chosen.

## 5.4 Using Auto-Up Mode

Auto-Up Mode works exactly the same as Auto-Down explained above except it controls the saw head movement in the up direction.

## 5.5 Using Pattern Mode

1. Starting with a new log, position the saw head at the front end of the log.
2. Push the Pattern button under the display. Pattern Setting #1 is the factory default. Choose the desired pattern setting (1 - 16) by pushing the appropriate Increment Setting button.

In Pattern mode, a list of six increments is shown on the display. These increments are referenced from the bed rail. The bottom increment represents the distance from the bed rail for the last cut. Each increment in the list can be adjusted as desired. The top increment repeats as necessary depending on how high you raise the saw head.

3. As the saw head is raised or lowered, symbols in the pattern increment list indicate where the blade is located in reference to the pattern. When the blade is above the top setting a ^ symbol appears next to the top increment to indicate you are in the repeating top increment. After the blade is lowered and the last top increment is reached, a + symbol will appear to indicate the next setting is close. When the blade reaches the increment setting, a - symbol will appear next to that setting.
4. To change any of the six pattern increments, push the +/- Drop button (below the pattern increment list) to scroll to the desired increment. The increment that is active is highlighted. Scrolling to each increment, the previous increment setting will automatically be copied to the remaining increments below. Push the Up or Down buttons until the desired increment is obtained. Remember to include blade kerf in your setting (i.e. If you want the finished boards to be 1" thick, set the increment to 1 1/8" to allow for typical blade kerf). The amount of kerf will depend on the thickness and tooth set of the blade being used. The Accuset can be programmed with an automatic kerf setting if desired [See Section .](#)
5. Push the +/- Drop button to move to the next pattern increment and adjust as desired. After the bottom increment setting is adjusted as desired, push the Manual Mode button then push the Up button. The Configuration Menu will be displayed. Choose Save to enter the Save Settings menu, then select Save.

**Example:** To edit the pattern increment settings for the #4 pattern setting, push Increment Selection button #4 once to display pattern setting #4 (the factory default value for pattern setting #4 is 1 3/4").

- Push the +/- Drop button to enter pattern edit mode. The top pattern increment is now highlighted.

- Push the Down button to adjust the setting to 1 1/8". While pushing the Down button, push the Up button to scroll faster. When you get close to 1 1/8", release both buttons.
  - Push the Down button to fine tune the setting to exactly 1 1/8".
  - Push the +/- Drop button again to move the next pattern increment. The setting will automatically be copied from the previous setting to 1 1/8" for all the remaining increments below.
  - Exit pattern edit mode by pushing the Manual button. Save the new pattern setting by pushing the Up arrow button to enter Configuration Menu #1.
  - Press the Save button to enter the Save Settings menu, then push the Save button.
  - Push the Pattern button to return to Pattern Mode and push Increment Selection button #4. All of the pattern settings should now be 1 1/8".
6. Push the Manual Mode button and raise the saw head so the blade is positioned near the top of the log.
  7. Push the Pattern button to return to Pattern Mode.
  8. Push the up/down drum switch down and release. The saw head will automatically stop at the first setting determined by the top pattern increment.
  9. Make a cut, raise the saw head and return the carriage for the next cut.
  10. Push the up/down drum switch down and release. The saw head will stop at the setting for the next cut. Repeat this procedure down this face of the log as desired.
  11. Turn the log as you normally would and push the Manual Mode button to place the Accuset in Manual Mode.
  12. Raise the saw head so the blade is positioned near the top of the log and push the Pattern button to return to Pattern Mode.
  13. Make the cut, raise the saw head and return for the next cut.
  14. Use the same procedure as described above to cut each side of the log until done.

## 5.6 Using Reference Mode

1. While in Manual Mode, push the Toggle button to enter Reference Mode.
2. Push one of the four Increment Setting buttons to select a reference. Factory defaults for buttons 1 through 4 are 1", 12", 24" and 31".
3. Push the up/down drum switch in the appropriate direction to start the saw head toward the reference position.

If the saw head is already above the position and the drum switch is pushed up, Accuset will return to Manual Mode. If the saw head is below the reference position and the drum switch is pushed down, Accuset returns to Manual Mode.

When the saw head reaches the target reference position, Accuset will return to Manual Mode.

4. To change the stored setting for any of the four buttons, move the saw head to the desired position.
5. Press the Toggle button to enter Reference Mode.
6. Push preferred button to store the setting and push "Store Here".
7. Push the Toggle button to return to Manual Mode.

Setting can be changed by selecting one of the four Increment Setting buttons and changing the setting by using the Up and Down arrow buttons.

8. Push the "Store Here" button to store the new setting.

**NOTE:** The new reference setting is only stored in temporary memory and will return to the default value when the Accuset is powered off and back on. To permanently store the new setting, enter Configuration Menu #1 and push the "Save", then the "Save" button from the Save Settings menu. Accuset will now keep the new setting until it is readjusted or the Accuset is reset to factory defaults.

## SECTION 6 MAINTENANCE

This section lists the maintenance procedures that need to be performed.

See the [Maintenance Chart](#) located after this section for a complete list of maintenance procedures and intervals. Keep a log of machine maintenance by recording in the machine hours and the date you perform each procedure.

Be sure to refer to option and engine manuals for other maintenance procedures.

### 6.1 Wear Life

This chart lists estimated life expectancy of common replacement parts if proper maintenance and operation procedures are followed. Due to the many variables which exist during sawmill operation, actual part life may vary significantly. This information is provided so that you may plan ahead in ordering replacement parts.

Part Description	Estimated Life
Up/Down Motor Brushes	1000 hours
B57 Blade Wheel Belts	400 hours
Up/Down Motor	2000 hours
Hydraulic Pump Solenoid	750 hours
Power Feed Motor Brushes	750 hours
Up/Down Drum Switch	1000 hours
Blade Guide Rollers	1000 hours
Hydraulic Pump Motor Brushes	750 hours
Power Feed Drum Switch	1200 hours
Power Feed Motor	1500 hours
Power Feed Belt	2000 hours
Up/Down Belt	2000 hours
Drive Belt	1250 hours

TABLE 6-1

### 6.2 Blade Guides



**WARNING!** Before performing service near moving parts such as blades, pulleys, motors, belts and chains, first turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

Blade guide alignment is essential for optimal cutting performance, blade life, and safety. Failure to check and maintain proper blade guide alignment will result in stress cracks forming in the blade. These cracks will lead to premature blade breakage. If the blade breaks during operation and the blade has multiple stress cracks, the blade could shatter into several pieces and escape from the protective guards of the sawmill. Small blade pieces projected into the area around the sawmill creates a safety hazard for the operator and any bystanders surrounding the mill

1. Check the rollers for performance and wear every blade change.
2. Make sure the rollers are clean and spinning freely -- if not, replace them.
3. Replace any rollers which have worn smooth or have become cone shaped.

#### BLADE GUIDES EQUIPPED WITH OPTIONAL HIGH-PERFORMANCE ROLLER/BLOCKS ONLY:

4. Inspect the blocks at every blade change for damage or wear.
5. If the block housing is bent or damaged, replace the block assembly.
6. Replace the block assemblies before the blocks are worn to a point the blade may contact the lower step or housing.
7. Check the guide blocks with the provided shim or a feeler gauge **every 25 hours** of operation to ensure they are properly spaced ( .008" - .010") from the blade.

**NOTE:** As the blocks wear, the front inside corner will wear more than the body of the block. When the corner wears far enough, sawing performance will be affected even if the body of the block is adjusted

properly to the blade. At this point, the block should be replaced. If you have access to the appropriate equipment, you can grind or mill the blocks to a new flat surface and reuse them. It is recommended you develop a routine schedule for replacing the blade guide blocks based on your sawing conditions and experience.

8. Loosen the clamp bolt and mounting bolt to adjust the top block down.
9. Turn the adjustment bolt clockwise.
10. Retighten the mounting bolt and clamp bolt.
11. To adjust the bottom block up, loosen the clamp bolt and mounting bolt.
12. Use the provided adjustment tool to turn the adjustment screw clockwise.
13. Retighten the mounting bolt and clamp bolt.

**NOTICE** The blocks should be parallel to the blade. See [Blade Guide Level](#) for instructions about checking and adjusting the assembly level with the blade.

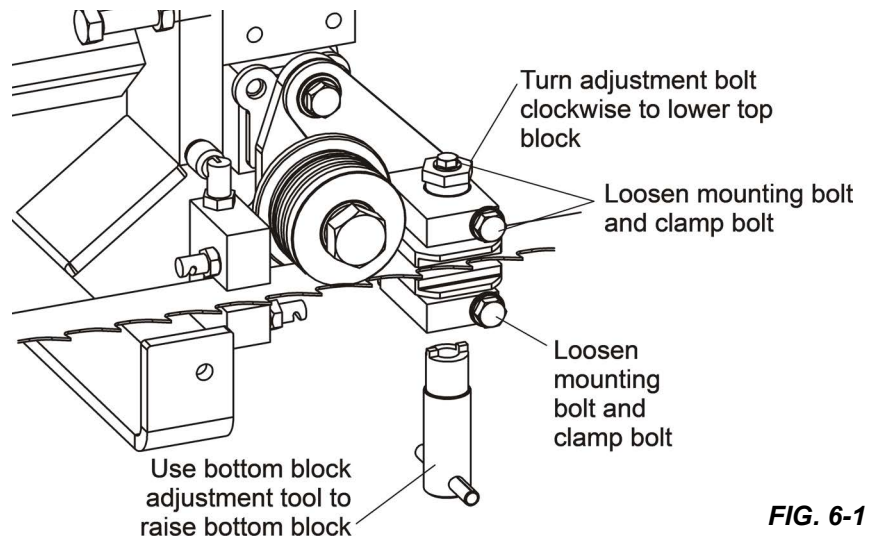


FIG. 6-1

Preventing sap buildup on the blade is critical when using the high-performance blade guide system. If the wood you are sawing leaves sap buildup using plain water in the blade lube system, use Wood-Mizer lube additive (4-Pak 60 oz. bottles part no. ADD-1).

14. Make sure the blade screw in the top center of the C-frame is 1/16" (1.5 mm) away from the blade; if not, loosen the nut and adjust the screw as necessary.
15. Check the screw **every 500 hours** of operation.

Failing to maintain this adjustment will lead to early blade breakage.

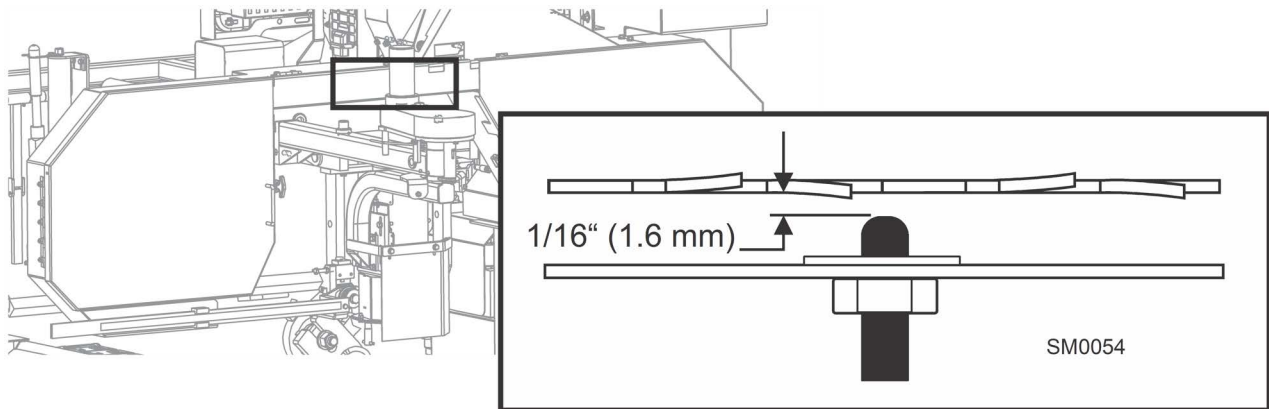


FIG. 6-2

### 6.3 Sawdust Removal



**WARNING!** Before performing service turn the key switch to the OFF (#0) position and remove the key.

Clean sawdust from all guards, vents, control boxes, or any area where sawdust may gather **after every shift**. Failure to do so **may result in fire**, causing death or serious injury.



1. Check the steel fingers inside the sawdust chute **before operating** the sawmill.

The steel fingers have been designed to help prevent a broken blade or some other object from becoming a projectile and exiting the sawdust chute.

2. Remove all sawdust and debris from around the velocity fuse valves (located at the bottom of the log loader cylinders) **every 8 hours** of operation.

- Remove sawdust buildup from the battery box lid and top rail cover **as necessary**.



**CAUTION!** Failure to remove sawdust buildup from the battery box lid and/or track rail cover could result in damage to these parts when the saw head is lowered to its lowest position.

- Remove sawdust and debris from grounding block along the bed rail and mast **every 50 hours** of operation.

## 6.4 Carriage Track, Wiper, & Scraper



**WARNING!** Before performing service near moving parts such as blades, pulleys, motors, belts and chains, first turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

Properly maintaining the sawmill carriage track is critical in preventing corrosion that can cause pitting and scaling on the rail surfaces. Pitted and scaled surfaces can, in turn, cause rough cuts or jerky feed movement.


- Clean carriage track rails to remove any sawdust and sap buildup **every eight hours** of operation.
- Use a light-grade sandpaper or emery cloth to sand off any rust or other adhering particles from the rails.



**CAUTION!** Keep track rails free of rust. Formation of rust on the track rail in the areas where the cam bearings roll can cause rapid deterioration of the track rail's surface.

Lubricate the rails by wiping them with Dexron III ATF transmission fluid. Lubrication will help protect the rails from corrosive elements such as acid rain and/or moisture from nearby bodies of saltwater (if applicable). This lubrication is essential to maintain the integrity of the track rails and track rollers and to achieve long service life.

- Remove sawdust from the track roller housings and lubricate the felt track wiper **every 25 hours** of operation.
- Remove the track roller housing covers and brush any sawdust buildup from the housings.
- Clean and lubricate the felt track wipers.
  - Unbolt the track covers, remove from the sawmill, and remove any sawdust buildup.
  - Soak the felt wiper with Dexron III transmission fluid.

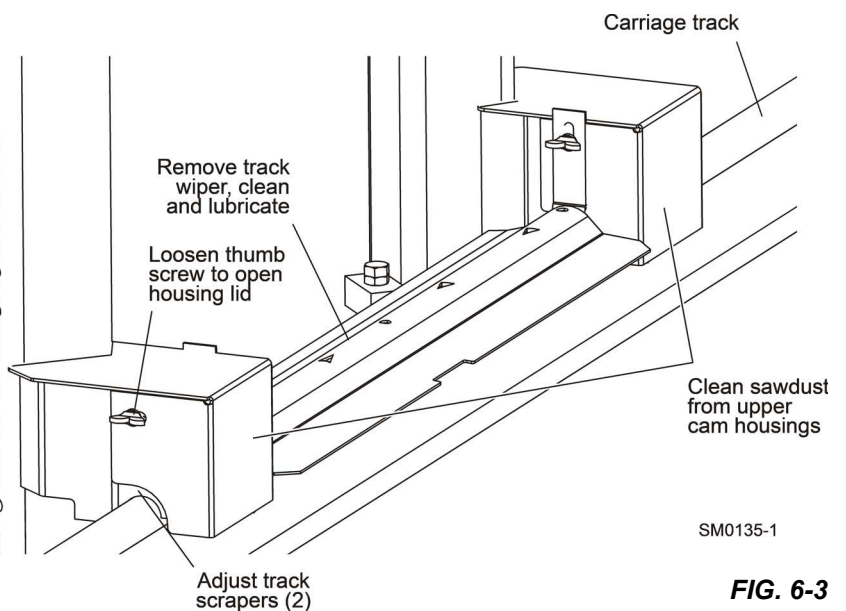

SM0135-1

FIG. 6-3



**CAUTION!** Reinstall the track wiper so that it lightly touches the track rail. If the wiper presses too firmly against the rail, it can cause the power feed to bind.

- Apply oil to both wipers through the access holes in the wiper housings.
- Check the track scrapers as needed.
- Make sure the scrapers fit firmly against the rail.
- Loosen the screw, push the scraper downward until it fits firmly against the rail, and retighten the screw.

## 6.5 Vertical Mast Rails



**WARNING!** Before performing service near moving parts such as blades, pulleys, motors, belts and chains, first turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

Clean the vertical mast rails **every 50 hours** of operation.



**CAUTION!** Never use grease on the mast rails as it will collect sawdust.

## 6.6 Drum Switches

**WARNING!** For battery-powered equipment, disconnect the negative battery terminal cable before performing any service to the electrical system. For AC-powered equipment, follow the lockout procedure provided in the safety section. Failure to do so may result in injury and/or electrical system damage.

1. Lubricate the drum switch contacts inside the control panel **every 50 hours** of operation.
2. Use only contact grease supplied by Wood-Mizer.
3. Remove the control panel cover.
4. Use a cotton swab to apply grease to the switch contact ends.

**WARNING!** Drum switch grease contains Petroleum Hydrocarbon Lubricant. Eye and skin irritant. If introduced into eyes, flush with water for at least 15 minutes. Seek medical attention. Wash skin with soap and water. If ingested, do not induce vomiting - contact a physician.

KEEP OUT OF THE REACH OF CHILDREN.

## 6.7 Miscellaneous

**WARNING!** Before performing service turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.


1. Oil all chains with Dexron III ATF **every 50 hours** of operation.

**CAUTION!** Do not use chain lube. It causes sawdust buildup in chain links.

2. Apply a thin film of a NLGI No. 2 grade lithium grease to the blade guide arm every 50 hours of operation to help prevent it from rusting.
3. Adjust the blade guide arm drive chain as necessary to prevent the arm from slipping. To adjust the chain, loosen the blade guide arm motor mounting plate bolts and slide the motor to take slack out of the chain.

Proper routing of the blade guide arm drive chain is shown in FIG. 6-4.

4. Grease the clamp mechanism, loading arm, clutch handle pivot and side support pivots with a NLGI No. 2 grade lithium grease every 50 hours of operation.
5. Lubricate the optional board return pivot every 50 hours of operation with a NLGI No. 2 grade lithium grease.
6. Apply grease to the grease fitting on the board return pivot tube.
7. Check the mill alignment every setup.
8. Remove sawdust and dirt from all safety warning decals; they must be readable.
9. Replace any damaged or unreadable decals immediately. Order decals from your Customer Service Representative.

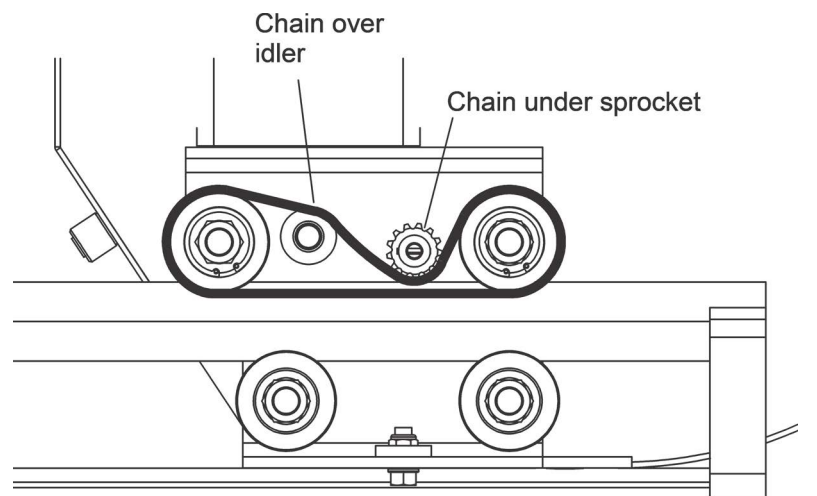


3H0538-3 **FIG. 6-4**

## 6.8 Blade Tensioner

**WARNING!** Before performing service turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.



1. Lubricate the chrome rods of the tensioner system with a heavy duty teflon spray lubricant, such as Gunk L508, **every 50 hours** of operation.
2. Lubricate the tensioner screw handle with a NLGI No. 2 grade lithium grease **as needed**.

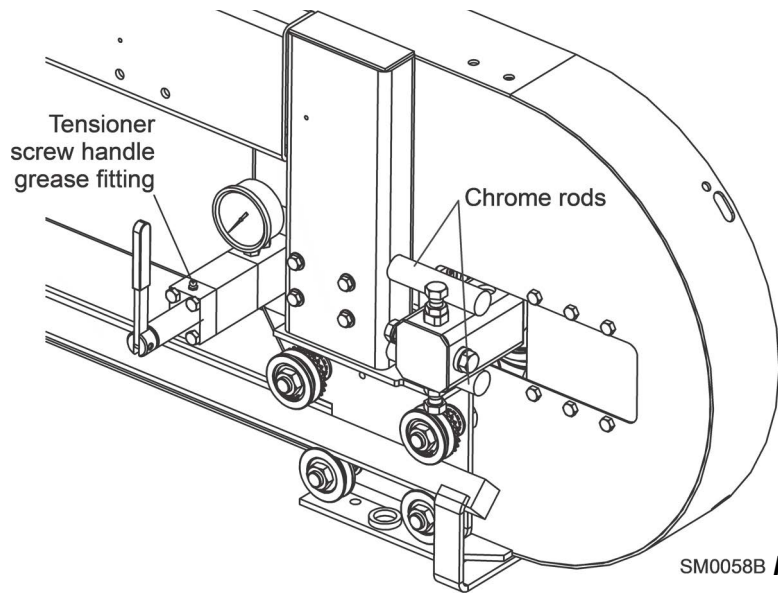


SM0058B FIG. 6-5

Add an Automatic Transmission Fluid (ATF) such as Dexron III ATF to the hydraulic blade tensioner **as needed**. To add enough fluid to completely fill the tensioner block.

1. Unscrew the tensioner handle to reveal 2" (50mm) of thread.
2. Remove the sawmill blade housing covers and blade.
3. Push the idle-side blade wheel/shaft housing all the way in to collapse the rear tensioner piston.
4. Pull the idle-side blade wheel/shaft housing away from the tensioner.
5. There are two fill plugs provided on the tensioner; use the hole behind the gauge to refill the tensioner.
6. Clean any dirt and debris from the plug area.

7. Use a 7/16" wrench to remove the plug, making sure to keep the plug o-ring with the plug.
8. Use a small funnel, cup, or squirt can to add hydraulic fluid through the fill plug hole until a puddle of fluid forms and is maintained over the fill hole.
9. As you maintain the puddle, manually extend the rear piston.
10. Be careful not to draw air into the tensioner.
11. Use pliers to pull the rear piston if necessary, but only grip the outer 1/4" (6mm) of the rear piston.

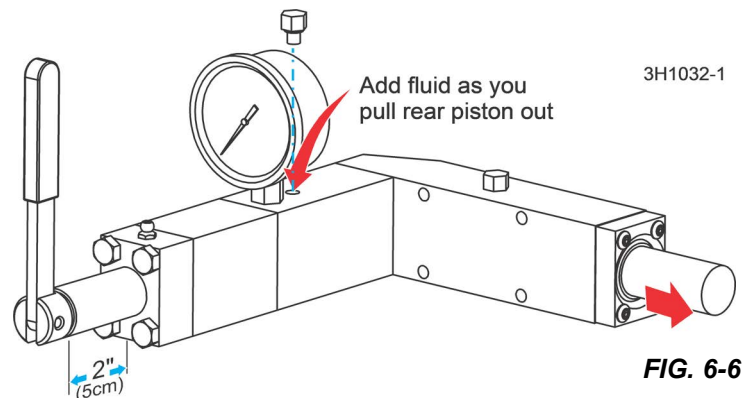

3H1032-1

FIG. 6-6



**CAUTION!** Gripping or marring the surface beyond this point could result in seal damage and prevent the system from holding tension.

12. Continue pulling out the piston as far as it will travel.
13. Reinsert the plug and thread 2-3 turns.
14. Turn the tension handle clockwise until 6 or 7 threads show beyond the front piston block.
15. Tighten the plug all the way.
16. Push the idle-side blade wheel/shaft housing all the way in to collapse the rear tensioner piston.
17. If the piston does not extend at least 2" from the end of the tensioner block, repeat Steps 1-16.
18. Reinstall the blade and blade housing covers.
19. If you have trouble installing a blade, it may be necessary to remove some fluid.
20. Open the plug one turn and turn the tension handle in until some fluid is pushed out.
21. Tighten the plug and retry.

## 6.9 Blade Wheel Belts



**WARNING!** Before performing service turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

1. Rotate the blade wheel belts **every 50 hours** and check them for wear.

**NOTE:** Rotating the belts will provide longer belt life.

2. Replace belts as necessary.
3. Use only belts supplied by Wood-Mizer.


## 6.10 Brake Strap Adjustment



**WARNING!** Before performing service turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

1. Check the brake strap for wear **every 200 hours** of operation. Replace if damaged or worn.
2. Check and adjust the brake strap after each drive belt adjustment, if the blade does not stop quickly, or unusual sounds occur when the brake is applied.
3. Adjust the brake strap if the drive belt jumps from the drive pulley when the autoclutch is disengaged.
4. Remove the belt cover located underneath the engine to access the brake strap.
5. Engage the autoclutch.
6. Loosen the two nuts on the upper brake strap bracket.
7. Slide the bracket and brake strap down 1/8" and retighten the bracket nuts.
8. Disengage the clutch.
9. Check the drive belt fit in the drive pulley.

You should just be able to pull the belt from the pulley. If the belt is still too loose, engage the clutch and repeat brake strap adjustments in 1/8" increments until the drive belt properly fits in the drive pulley with the clutch disengaged.

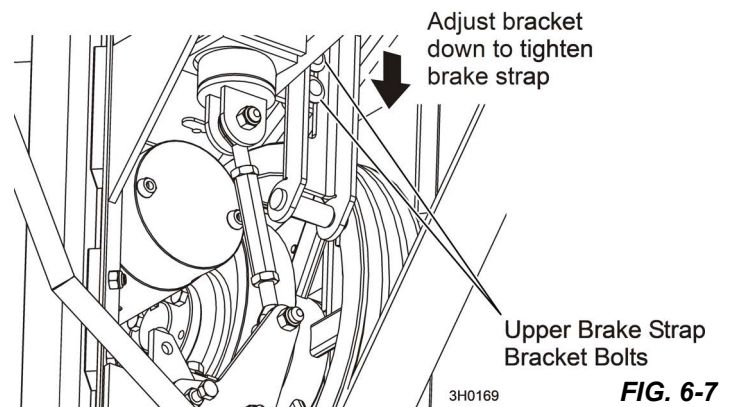

**NOTE:** Be careful to not overtighten. Overtightening will cause the drive belt to "grab" the pulley and can prevent the engine from starting properly.

10. Replace the belt cover.

## 6.11 Drive Belt Adjustment



**WARNING!** For battery-powered equipment, disconnect the negative battery terminal cable. For AC-powered equipment, follow the lockout procedure provided in the safety section.

Before performing service turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

Do not adjust the engine drive belts or belt support bracket with the engine running.



**CAUTION!** Do not over-tighten the drive belt. Damage to the engine may result

See the table below for drive belt tension specifications for your model sawmill. Measure the belt tension with a gauge.

**NOTE:** Wood-Mizer offers a belt tension gauge (Part No. 016309) that will let you accurately measure the belt tension.

Engine	New Belt Installation/New Sawmill Operation				Subsequent Adjustment		
	Deflection Inches (mm)	Installation Force lbs. (kg)	Check After First	Acceptable Force lbs. (kg)	Then Check Every	Deflection Inches (mm)	Force lbs. (kg)
G26	7/16" (11mm)	14 lbs. (6.35kg)	20 hrs	14-16 lbs. (6.35-7.26kg)	50 hrs	7/16 (11mm)	14 lbs. (6.35kg)
G38	7/16" (11mm)	18 lbs (8.16kg)	5 hrs	18-24 lbs. (8.16-10.89kg)	50 hrs	7/16 (11mm)	18 lbs (8.16kg)

TABLE 6-2

### CHECK BELT TENSION

1. Remove the belt guard.
2. Lay a straight edge over the belt pulleys.
3. Zero out the pounds indicator by sliding the belt tension gauge's small O-ring against the yellow flange.
4. Set the gauge's lower O-ring to 7/16" (11mm).
5. Center the gauge on the belt segment between the pulleys.
6. Press down on the rubber boot while the bottom of the gauge is against the drive belt.
7. Stop pressing when the large O-ring meets the straight edge.
8. Read the pounds indicated by the small O-ring.

It should read 14 lbs. or 18 lbs, depending on the engine. If the reading is too high or low, use the adjustment instructions below.

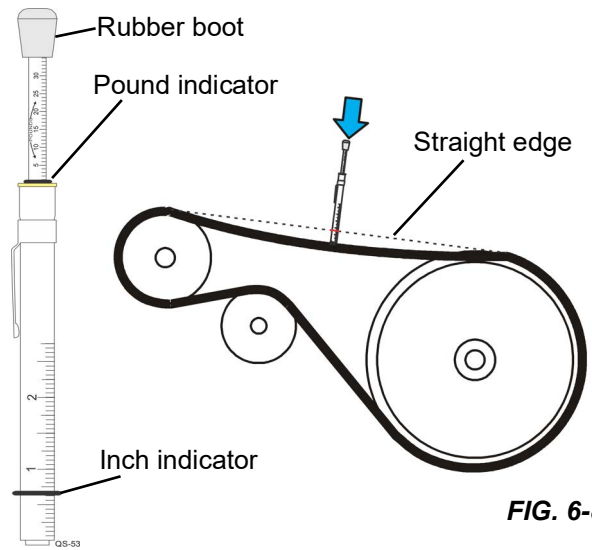


FIG. 6-8

### ADJUST BELT

1. Remove the two belt covers located underneath the engine.
2. Loosen the jam nut at the bottom of the turnbuckle.
3. Turn the hex on the inner link rod clockwise (as viewed from the bottom) to tighten the belt, counterclockwise to loosen the belt.
4. If you reach the maximum adjustment using the bottom jam nut/inner link rod, adjust the linkage by loosening the top jam nut and turning the turnbuckle clockwise as viewed from the top.

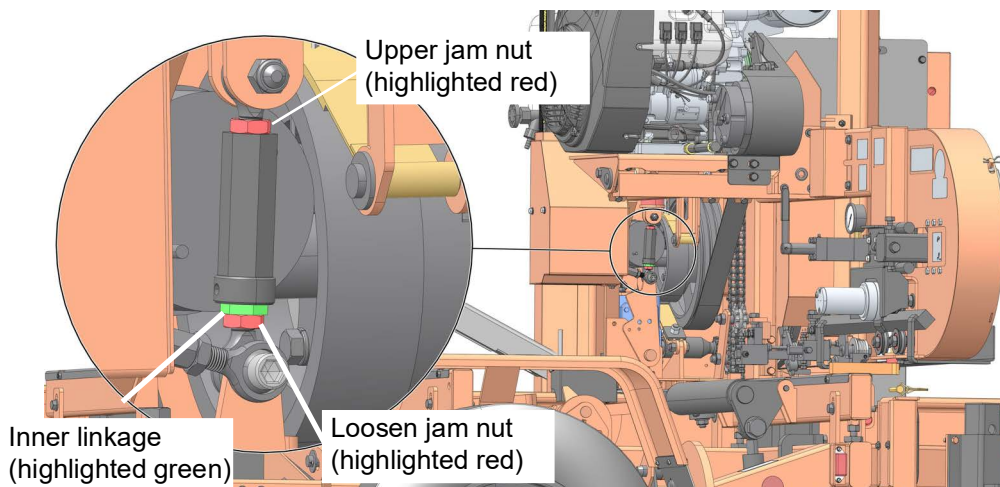


FIG. 6-9

5. Check all belts for wear; replace any damaged or worn belts **as needed**.
6. **Gas/Diesel Engines Only:** After tensioning the drive belt, check throttle cable tension and adjust if necessary.

The throttle cable should be tensioned just enough so that the engine revs as soon as the autoclutch is engaged. The throttle linkage should NOT affect engine RPM while the autoclutch is disengaged.


**NOTE:** A properly adjusted throttle will extend the cable spring 1/4" to 3/8" (6.4 - 9.5 mm) when running and have a slight amount of slack in the cable when idling. Check the drive belt support after adjusting drive belt tension.

**DRIVE BELT SUPPORT**


1. Adjust the drive belt support **as needed**.

The drive belt support is designed to extend belt life. The bracket should be adjusted to NOT touch the drive belt when the clutch is engaged, AND to hold the drive belt away from the engine pulley when the clutch handle is disengaged (up position).

- 1). Ensure the motor is not running.
- 2). Loosen the adjustment bolts.
- 3). Position the bracket so that the prong is close to, but does not touch, the drive belt with the clutch handle engaged (approximately 1/8-1/16" [3-1.5mm]).
- 4). Retighten the adjustment bolts to 25-27 foot pounds (34-37 newton meters).

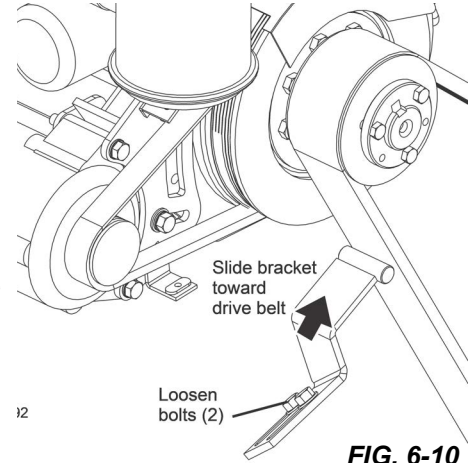

**FIG. 6-10**

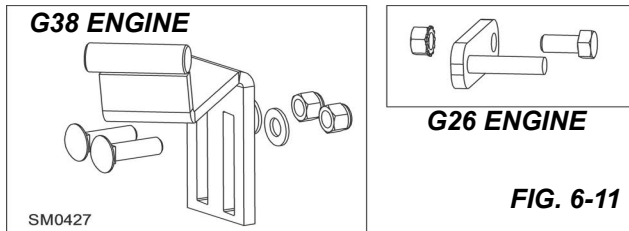

5). REPLACE ALL GUARDS!

**6.12 Autoclutch**



**WARNING!** Before performing service turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

Remove blade for maintenance.


**AUTO CLUTCH LINKAGE**

Check the clutch linkage after **every drive belt or brake strap adjustment**.

1. Remove the inside belt guard and push the autoclutch switch up to engage the drive belts.
2. Place a straight edge between the upper and lower clutch pivot centers.
3. Make sure the middle pivot is aligned to the straight edge.

If it is not, adjust the autoclutch link arm.  
To adjust,

4. Disassemble one end of the autoclutch link arm.
5. Adjust the rod end in or out as required.
6. Reassemble the link arm and repeat Step 3.

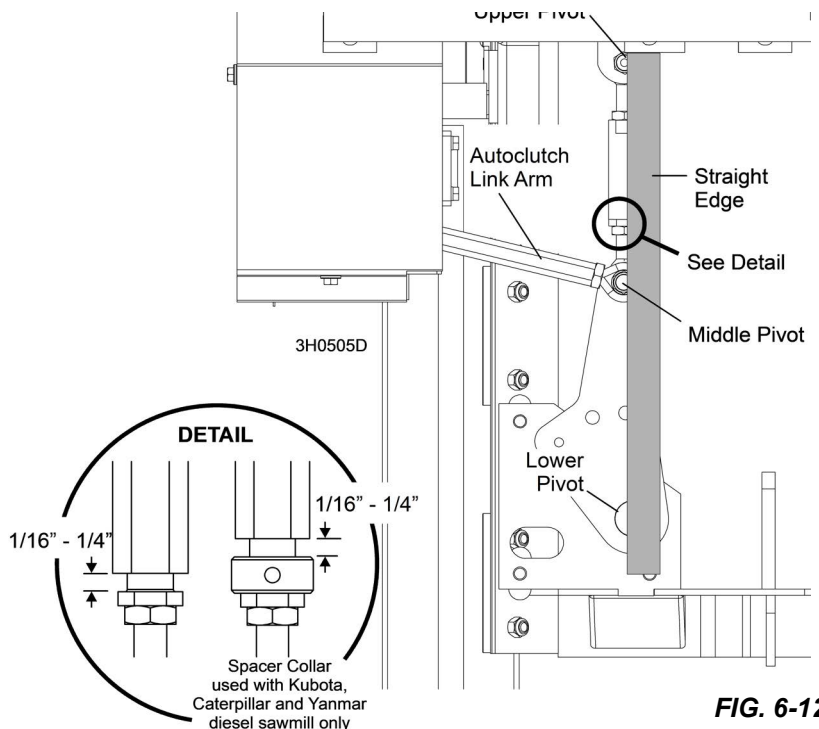

- Lower the autoclutch toggle switch until the autoclutch motor quits cycling.

The autoclutch should pivot the engine/motor mount down, disengaging the drive belt.

- With the drive belt disengaged, recheck the autoclutch turnbuckle.

## AUTOCLUTCH

- Measure the distance between the outer rod link the inner rod link (outer rod link and spacer collar for Kubota diesel sawmills).
- Adjust the brake strap as needed ([See Section 6.10](#)).

If the distance is less than 1/4", tighten the brake strap. If the distance is more than 1/4", loosen the brake strap.

- Tighten the clutch belt as necessary to prevent slippage.
- Remove the three cover bolts and washers and remove the cover.
- Loosen the clutch motor mounting bolts and slide the motor up to tighten the belt.
- Inspect the belt for wear or cracks and replace as necessary.

## LUBRICATION

- Check the clutch gear box oil level.
- Remove the level plug at the rear of the gear box.

The oil level should be right at the plug hole.

- Drain and refill the gearbox after the **first 100 hours** of sawmill operation.
- Repeat **every 5000 hours** or once a year, whichever comes first.
- Lubricate the autoclutch linkage **every 100 hours** of operation.
- Apply a NLGI No. 2 grade lithium grease to the fitting at each end of the clutch linkage connected to the gear box.

## 6.13 Hydraulic System

**WARNING!** For battery-powered equipment, disconnect the negative battery terminal cable. For AC-powered equipment, follow the lockout procedure provided in the safety section.

- Check the hydraulic fluid level **every 50 hours** of operation.
- Add fluid as necessary.

The level in the hydraulic pump should be 3/4" (19mm) from the top with all cylinders collapsed.

If humidity is a problem or the mill is used outside in humid weather, drain and replace two quarts (.95 liters) of fluid **every six months**. This will drain any accumulated water and help prevent pump failure due to water ingestion. It also will prevent excessive fluid wear and allow the fluid to maintain its hot end performance.

If humidity is not a problem, drain and replace one gallon (3.8 liters) of fluid **every year** to prevent fluid wear.

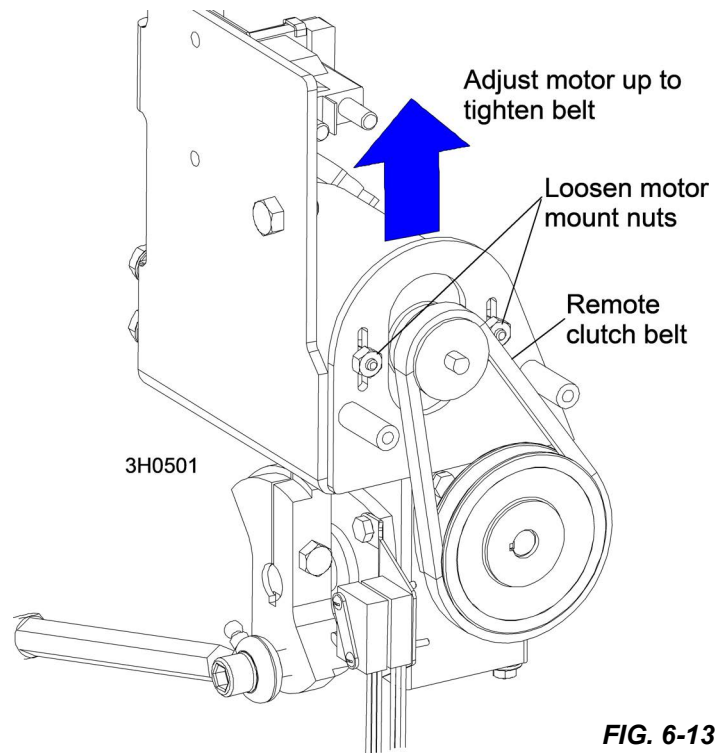


FIG. 6-13

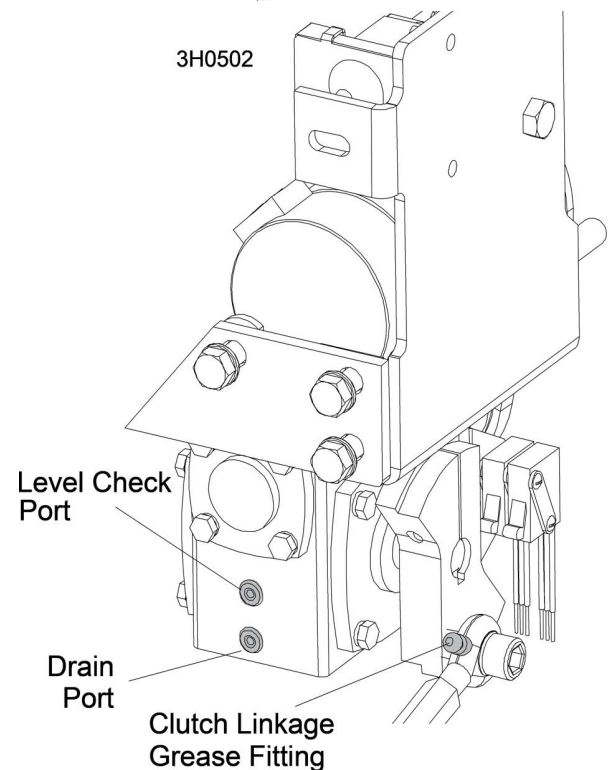



FIG. 6-14

If you are operating in temperatures -20° to 100° F (-29° to 38° C), use an all-weather hydraulic fluid such as Conoco MV32. For alternate fluids and/or other temperature ranges, refer to the chart below.



**CAUTION!** Operating above the recommended temperature range of a fluid could result in excessive pump wear. Operating below the recommended temperature range could result in reduced hydraulic cylinder speed.

To change fluid types, replace one gallon of the current fluid with one gallon of the alternate fluid.

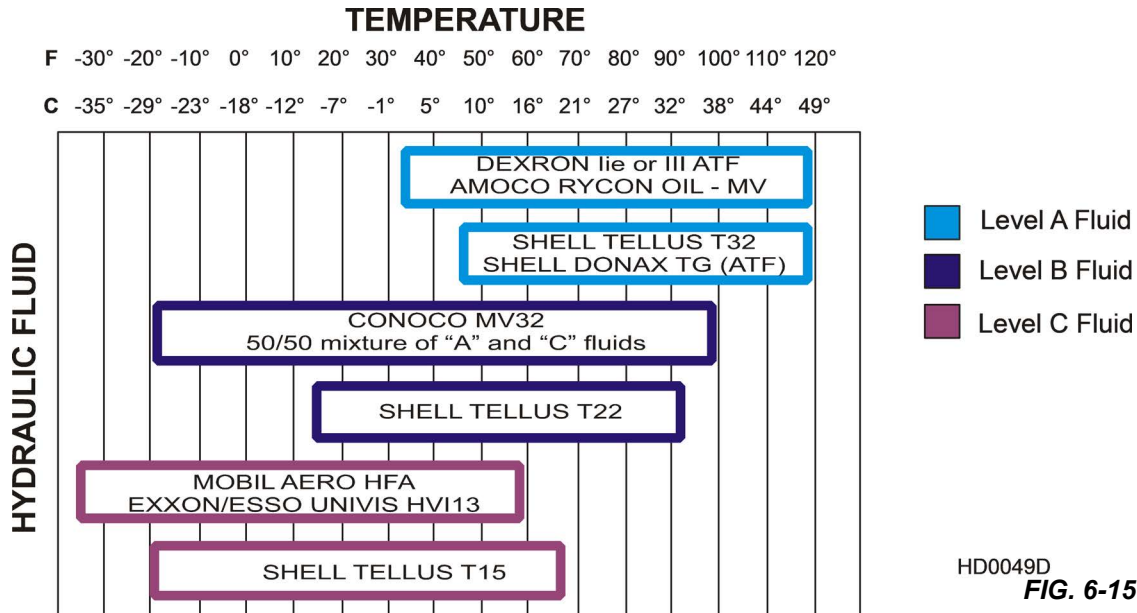

3. Replace the hydraulic system cartridge filter **every 500 hours** of operation.
4. Inspect the hydraulic pump motor brushes **every 750 hours** of operation. Remove brush dust and replace the brushes if they worn to a length of 1/4" (6mm) or shorter.



**CAUTION!** Do not operate the hydraulic system if the pump motor brushes are worn shorter than 1/4" (6mm). Damage to the pump motor may result.

5. Periodically check all hydraulic lines and fitting **as needed**.
6. Replace as necessary.


## 6.14 Drive Bearing



**WARNING!** Before performing service turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

Drain and refill the fluid in the drive-side cylinder bearing housing **every 500 hours** of operation.

1. Disconnect the oil level view hose from the fitting at the top of the bearing housing.
2. With the fitting at the bottom of the bearing housing still connected, allow oil to drain from the oil level view hose.
3. Once drained, pour fresh Automatic Transmission Fluid (ATF) such as Dexron III ATF into the hose until the oil level is in the acceptable range as indicated on the gauge decal.
4. Reconnect the hose to the top fitting.

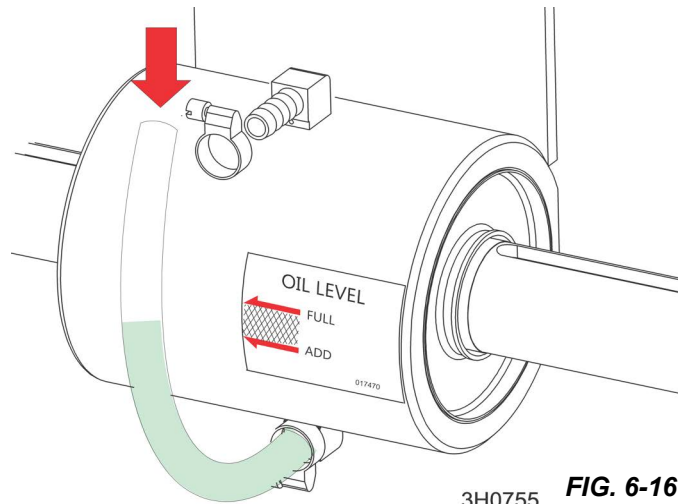

3H0755 **FIG. 6-16**

## 6.15 Up/Down System


**WARNING!** Before performing service turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

### CHAIN TENSION

1. Adjust the up/down chain tension as needed.
2. Measure chain tension with the head all the way to the top of the vertical mast.
3. Secure the head with a chain at the top.
4. Find the chain adjusting bolt at the bottom of the mast.
5. Use the adjustment nut to adjust the bolt until the center of the chain can be deflected  $3/4"$  (1.9cm) forward and  $3/4"$  (1.9cm) backward with a 5 lb. (2.3 Kg) deflection force.

**WARNING!** Always secure the saw head with a  $5/16"$  chain with at least 1900 lbs. working load capacity before adjusting the up/down chain. The cutting head may fall, causing severe injury or death.

**CAUTION!** Do not over-tension the chain. Over-tensioning the chain may lead to early failure of the gear reducer

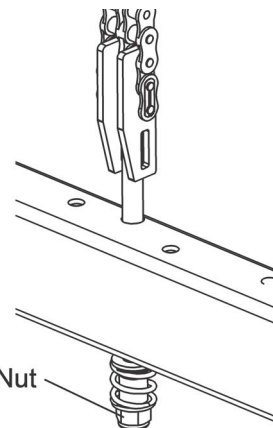

3H0654-2

FIG. 6-17

### GREASE THE UP/DOWN GEAR REDUCER SHAFT BEARING

Use a NLGI No. 2 grade lithium grease every 1000 hours of operation.

1. Adjust the up/down belt as needed.
2. Remove the up/down housing cover.
3. To tighten the belt, loosen the motor mount bolts.
4. Pull the motor upward so there is  $3/8"$  (9.5 mm) deflection with a 7 lb. (3.2 Kg) deflection force.
5. Retighten the motor mount bolts.
6. Replace the drive pulley cover.

**WARNING!** Always secure the saw head with a  $5/16"$  chain with at least 1900 lbs. working load capacity before removing the up/down motor belt. The cutting head may fall, causing severe injury or death.

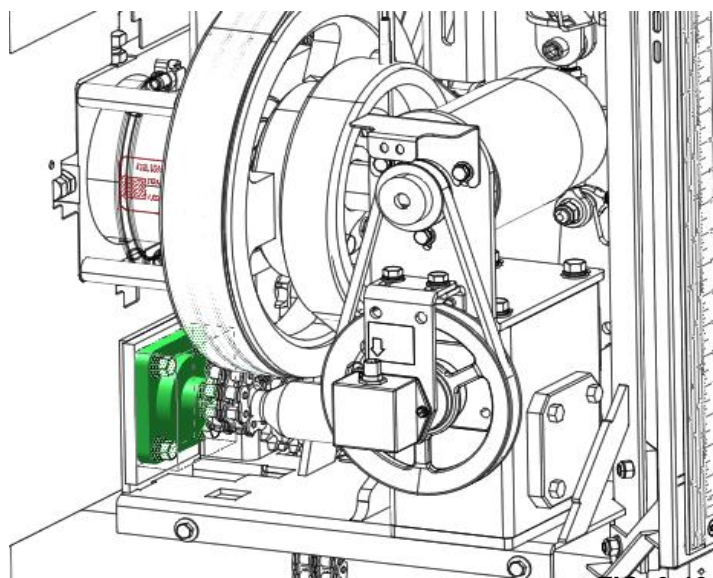


FIG. 6-18



## GENERAL MAINTENANCE

1. Periodically check the belt for wear.
2. Replace any damaged or worn belts as needed.
3. Check the up/down gearbox oil level.
4. Add a synthetic gear oil such as Mobil Glygoyle 460 as needed.
5. Drain and refill the gearbox with 24 (0.7L) ounces of oil after **every 5000 hours** of sawmill operation or every 2 years, whichever comes first.

Wood-Mizer offers replacement gear oil in 8 ounce (0.24L) bottles.

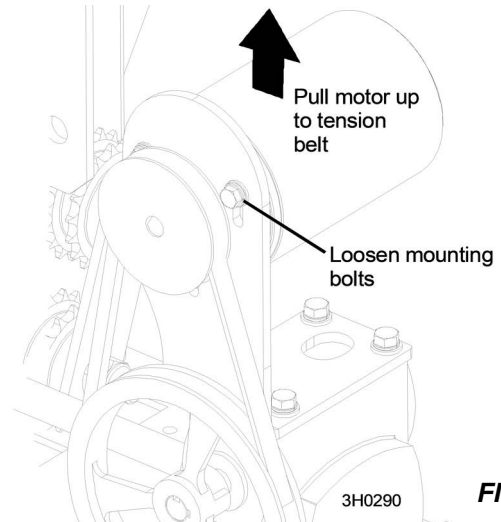


FIG. 6-19

## 6.16 Power Feed

**WARNING!** Before performing service turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

When the power feed belt gets loose, it will begin slipping. This causes the carriage to not move forward when cutting. To retighten the belt:

1. Periodically check the belt for wear.
2. Replace any damaged or worn belts as needed.
3. Adjust the power feed belt **as needed**.
4. Remove the power feed belt cover and pivot the motor so that the motor pulley moves away from the large feed pulley.
5. Tighten the belt so there is 1/8" (3 mm) deflection with a 7 lb. (3.2 Kg) deflection force. .
6. Retighten the motor bolts and replace the feed motor cover
7. Adjust the power feed chain as needed.
8. Measure the power feed chain tension with the saw head all the way toward the front of the mill.
9. Use the two lock nuts at the rear of the mill to tighten or loosen the power feed chain.
10. Adjust the chain until it measures 7 to 8 inches (17.8 to 20.3 cm) from the top of the top rail at its lowest point.

**CAUTION!** Do not overtighten the feed chain. Damage to the power feed motor may result.

## 6.17 Charging the Battery

**DANGER!** Keep sparks, flames, burning cigarettes, or other ignition sources away at all times. Always wear safety goggles and a face shield when working near batteries.

**WARNING!** Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

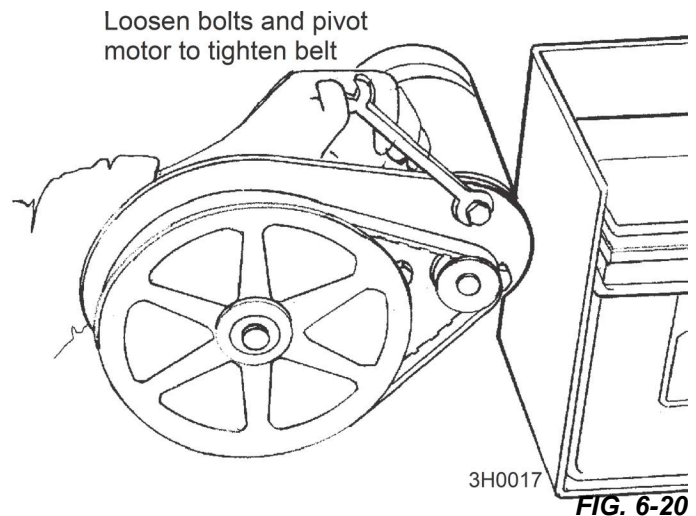


FIG. 6-20

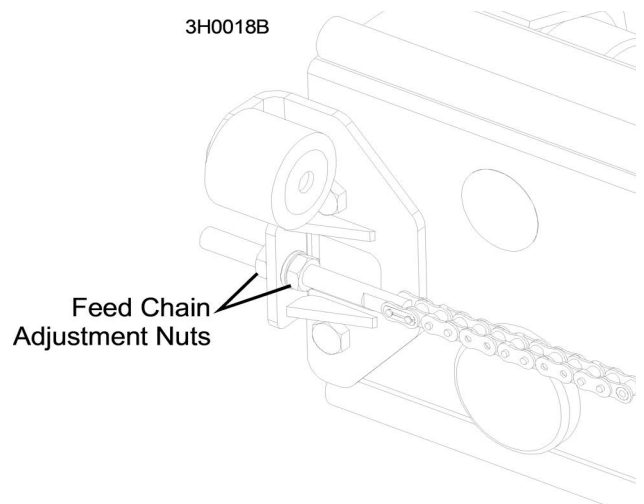


FIG. 6-21

Charge the battery in a well ventilated area. Do not attempt to charge a frozen battery.

Use extreme care to avoid spilling or splashing electrolyte (which is dilute sulfuric acid) as it can destroy clothing and burn the skin.

**EMERGENCY TREATMENT FOR CONTACT WITH BATTERY COMPONENTS (LEAD/SULFURIC ACID) per SDS (Safety Data Sheet):**

<b>EYE CONTACT</b>	<b>Sulfuric Acid and Lead:</b> Flush eyes immediately with large amounts of water for at least 15 minutes while lifting lids. Seek immediate medical attention if eyes have been exposed directly to acid.
<b>SKIN CONTACT</b>	<b>Sulfuric Acid:</b> Flush affected area(s) with large amounts of water using deluge emergency shower, if available, shower for at least 15 minutes. Remove contaminated clothing, including shoes. If symptoms persist, seek medical attention. Wash contaminated clothing before reuse. Discard contaminated shoes. <b>Lead:</b> Wash immediately with soap and water.
<b>INGESTION</b>	<b>Sulfuric Acid:</b> Administer large amounts of water. Do NOT induce vomiting or aspiration into the lungs may occur and can cause permanent injury or death; consult physician.
<b>INHALATION</b>	<b>Sulfuric Acid:</b> Remove to fresh air immediately. If not breathing, give artificial respiration. If breathing is difficult, give oxygen. Consult a physician. <b>Lead:</b> Remove from exposure, gargle, wash nose and lips; consult physician.

If electrolyte is spilled or splashed on any surface of the machine, it should be neutralized and rinsed with clean water.



**CAUTION!** Do not overcharge the battery. Overcharging may reduce the overall service life of the battery.

Be sure the battery is fully charged before transporting the sawmill. If the battery is not fully charged, excessive vibration could reduce the overall service life of the battery.

1. Raise the saw head to access the battery box.
2. Turn the key to the OFF (#0) position and remove the key.
3. Remove the battery box lid.
4. Clean the battery terminals if necessary.
5. Connect the positive charger/jumper cable directly to the positive battery terminal.
6. Connect the negative charger/jumper cable to a grounded metal surface.
7. Follow the instructions supplied with your specific battery charger.

**NOTICE** Do not overcharge the battery, especially when using a high-rate or “boost” charger (40 amps or higher). These are intended to quickly charge a good battery that is discharged. They are not intended for unattended or long-term charging.

8. After the battery is completely recharged, remove the negative charger/jumper cable from ground.
9. Remove the positive charger/jumper cable from the battery.
10. Replace the battery box lid.

## 6.18 Maintenance Chart

<b>Maintenance Log</b> (Check <i>Engine</i> And <i>Option Manuals</i> for additional maintenance procedures)	<b>MANUAL REFERENCE</b>	<b>MAINTENANCE INTERVAL</b>
Clean sawdust from hydraulic loader fuses, battery box lid & track cover	<a href="#">See Section 6.3</a>	8 hours
Clean and lubricate top/bottom track	<a href="#">See Section 6.4</a>	8 hours
Check blade guide Block/roller wear	<a href="#">See Section 6.2</a>	8 hours Every blade change
Remove excess sawdust from blade wheel housings and sawdust chute	<a href="#">See Section 6.3</a>	8 hours Every blade change
Inspect fingers inside sawdust chute	<a href="#">See Section 6.3</a>	8 hours Every blade change
Remove sawdust from upper track roller housings	<a href="#">See Section 6.4</a>	25 hours
Check Blade Guide Block Spacing	<a href="#">See Section 6.2</a>	25 Hours
Clean and lubricate upper track wiper	<a href="#">See Section 6.4</a>	25 hours
Clean & lube mast rails	<a href="#">See Section 5.5</a>	50 hours
Lubricate drum switches	<a href="#">See Section 6.6</a>	50 hours
Grease pivot points and bearings/oil chains	<a href="#">See Section 6.7</a>	50 hours
Lubricate blade tensioner handle and rods	<a href="#">See Section 6.8</a>	50 hours
Rotate drive/idle blade wheel belts/check for wear	<a href="#">See Section 5.9</a>	50 hours
Inspect hydraulic lines & fittings	<a href="#">See Section 6.13</a>	50 hours
Check belt tensions	<a href="#">See Section 6.11</a> <a href="#">See Section 6.14</a>	50 hours
Check hydraulic fluid level	<a href="#">See Section 6.13</a>	50 hours
Check feed & up/down chain tensions	<a href="#">See Section 6.15</a> <a href="#">See Section 6.16</a>	50 hours
Check brake strap tension	<a href="#">See Section 6.10</a>	200 hours
Re-check belt tensions	<a href="#">See Section 6.11</a> <a href="#">See Section 6.15</a> <a href="#">See Section 6.16</a>	200 hours
Check blade throat screw	<a href="#">See Section 6.2</a>	500 hours
Replace cylinder drive bearing fluid	<a href="#">See Section 6.14</a>	500 hours
Replace hydraulic system filter	<a href="#">See Section 6.13</a>	500 hours
Inspect hydraulic pump, power feed and up/down motor brushes	<a href="#">See Section 6.13</a> <a href="#">See Section 6.15</a> <a href="#">See Section 6.16</a>	750 hours
Grease up/down shaft bearing	<a href="#">See Section 6.15</a>	1000 hours

## SECTION 7 TROUBLESHOOTING

### 7.1 Sawing Problems



**WARNING!** Before performing service turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

PROBLEM	CAUSE	SOLUTION
<b>Blades Dull Quickly</b>	Dirty logs	Clean or debark logs, especially on entry side of the cut
	When grinding teeth, heating too much and causing teeth to soften	Grind just enough metal to restore sharpness to the teeth. Use water/coolant while sharpening blade
	Poor sharpening techniques	Make sure the tip is being sharpened completely (See Sharpener Manual)
<b>Blades Break Prematurely</b>	Poor sharpening techniques	See Sharpener Manual
	Rubber belts on blade wheels worn to a point that blade contacts metal pulley - look for shiny spots on edge of wheels	Change blade wheel belts (B-57)
<b>Blade Does Not Track Right on Drive Wheel</b>	Tension too tight	Tension blade to recommended specifications
	Cant adjustment is incorrect	Readjust
<b>Blade Guides Do Not Spin While Cutting</b>	Flat/worn belts	Replace B-57 belts
	Frozen bearings	Replace bearings
<b>Blade Does Not Stop Immediately After Disengaging</b>	Brake strap too loose	Adjust brake strap
<b>Drive Belts Come Off Pulleys When Disengaging Blade</b>	Brake strap too loose	Adjust brake strap
	Brake drum misaligned	Realign on drive shaft
	Brake strap tightened with one edge too loose and one edge too tight	Adjust brake strap
<b>Drive Belts Wear Prematurely or Jump</b>	Engine/motor and drive pulleys out of alignment	Align pulleys <a href="#">See Section 7.13.</a>
<b>Boards Thick Or Thin On Ends Or Middle Of Board.</b>	Stress in log which causes log to not lay flat on the bed.	After log has been squared, take equal cuts off opposing sides. Take a board off the top. Turn the log 180 degrees. Take a board off. Repeat, keeping the heart in the middle of the cant, and making it your last cut.
	Set in teeth.	Resharpen and reset blade.
	Bed rails misaligned.	Realign sawmill.

PROBLEM	CAUSE	SOLUTION
<b>Height Adjustment Jumps or Stutters When Moving Up or Down.</b>	Up/down chain improperly adjusted.	Adjust up/down chain.
	Vertical wear pads are too tight.	Adjust pads.
	Up/down belt loose.	Replace belt.
<b>Lumber Is Not Square</b>	Vertical side supports not square to bed	Adjust side supports.
	Blade not parallel to bed rails	Adjust bed rails parallel to blade.
	Sawdust or bark between cant and bed rails	Remove particles
<b>Sawdust Builds Up On Track</b>	Tooth set problems	Resharpener and reset blade
	Excessive oiling	Do not oil track
	Track wipers worn	Adjust wipers to firmly contact track
	Track is sticky	Clean track with solvent and apply silicone spray
<b>Wavy Cuts</b>	Excessive feed	Slow feed rate
	Improperly sharpened blade (This will be the problem 99% of the time!)	Resharpener blade (See Sharpener Manual - read entire manual!)
	Blade guides improperly adjusted	Adjust blade guides.
	Sap buildup on blade	Use Water Lube.
	Tooth set problem	Resharpener and reset blade

## 7.2 Electrical Problems



**WARNING!** Before performing service turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

Disconnect and lockout power before performing any service to the electrical system. For battery-powered equipment, disconnect the negative battery terminal cable. For AC-powered equipment, follow the lockout procedure provided in the safety section. Failure to do so may result in injury and/or electrical system damage.

PROBLEM	CAUSE	SOLUTION
<b>Up/down Excessively Slow.</b>	Up/down belt loose.	Adjust belt to be as loose as possible without slipping.
	Vertical wear pads too tight.	Adjust pads.
	Worn up/down motor or motor brushes.	Replace up/down motor or motor brushes.
<b>Up/down Or Power Feed Motors Do Not Work.</b>	Worn/dirty contacts in drum switch.	Replace switch or remove control panel cover and clean contacts.
	Bad key switch.	Replace key switch.

PROBLEM	CAUSE	SOLUTION
	Circuit breaker.	Reset breaker in control box ( <a href="#">See Section 7.3</a> ).
	Burned-out motor.	Replace motor.
	Bad connection on battery post or loose wire.	Check for loose wire or terminal connections.
<b>Power Feed Motor Does Not Work.</b>	Sawdust buildup in the power feed pulleys.	Sawdust buildup puts mechanical bind on power feed which causes automatic motor protection circuit to activate. Remove sawdust from pulleys and operate normally. If motor does not operate after sawdust removal, reset circuit breaker on the front of the control box.
<b>Up/Down Or Power Feed Switches Remain Engaged When Switch Is Released.</b>	Worn/dirty contacts in drum switch.	Manually move the power feed or up/down switch back to neutral or "off" position. Replace drum switch or remove control panel cover and clean and lubricate contacts NOTE: Use only contact grease supplied by Wood-Mizer.
	Drum switch spring broken.	Manually move the power feed or up/down switch back to neutral or "off" position. Replace drum switch spring.
<b>Up/Down Or Power Feed Motors Overheat And Lose Power.</b>	System overload or bind occurred.	Correct problem ( <a href="#">See Section 7.7</a> ). Allow motor to cool before restarting.
	Normal operation factors exceeded (eg: up/down control jockeyed excessively).	Allow motor to cool before restarting.
<b>Everything Works And Then Cuts Out - Works Again.</b>	Bad battery, fuse, or ground connection.	Check and tighten connections.
<b>Nothing Works Electrically.</b>	Dead battery.	Check for short circuit or turn OFF key.
	Blown fuse.	Replace.
	Corrosion on battery post.	Remove connection and clean posts.
<b>Battery Will Not Stay Charged.</b>	Key switch left ON.	Turn switch OFF when not in use.
	Short in system.	Visually check for bare wires and/or have checked.
	Charging system not functioning.	Have charging system checked by authorized dealer.
	Bad battery cells.	Check fluid levels and add proper solution
	Idle improper.	Adjust low end RPM per engine manual.
	Loose alternator belt.	Check belt tension and tighten if necessary.
	Loose connections at LED circuit board or alternator.	Check and tighten connections.


PROBLEM	CAUSE	SOLUTION
<b>Intermittent Or Permanent Loss Of Accessory Motor Functions Occurs (Up/down, Fwd/rev, Blade Guide Functions Do Not Work).</b>	Bad connections at accessory solenoid or bad solenoid.	Check all connections at accessory solenoid. If connections are good, replace solenoid.

### 7.3 Circuit Breaker Operation

Sawmill controls are equipped with manual reset circuit breakers to protect the electrical circuits.

The power feed and up/down breakers are externally mounted at the front of the control box. An external breaker is provided on the rear of the control box for the engage sensor circuit on sawmills equipped with diesel engines or autoclutch. The blade guide, accessory, ignition, start and board return breakers are located inside the control box. Remove the circuit breaker panel from the control box to access the internal breakers.

**NOTE:** If the breaker is still hot, you may not be able to reset it immediately. Allow the breaker to cool for a few minutes before attempting to reset.

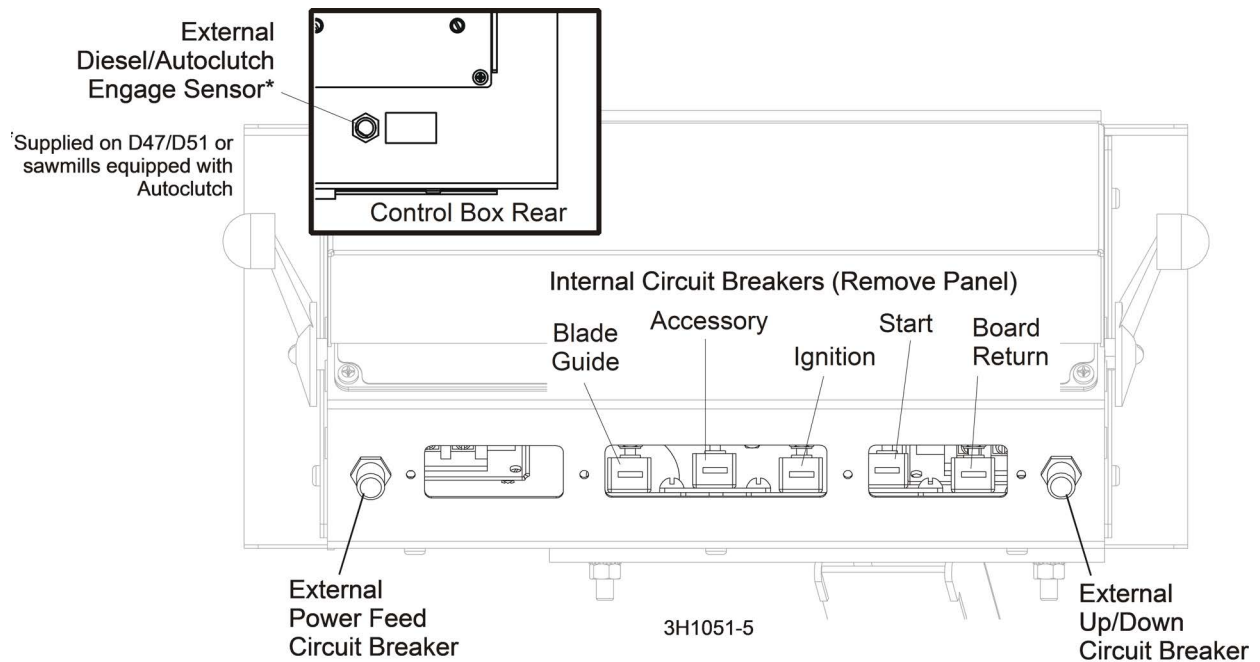

**FIG. 7-1**

## 7.4 Accuset 2 Troubleshooting

### CONTROL LIGHTS

Lights are provided on the control front panel and the motor control assembly to help diagnose up/down problems should they occur.

Two indicator lights are provided on the back of the front control panel. If power is supplied to the control panel, the red power indicator light will be illuminated. The drum switch indicator illuminates when the up/down drum switch is engaged. The light will illuminate green with the drum switch in the up position and red with the drum switch in the down direction.

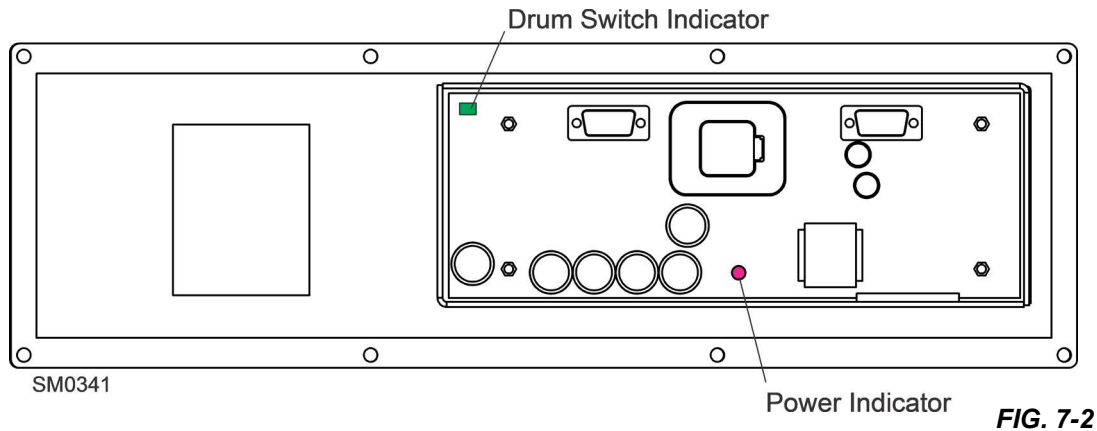


FIG. 7-2

Diagnostic lights are provided on the motor control module. When the saw head is in neutral (not moving up or down), the Status light is green, with a flash of red. When the up/down drum switch is moved to the up position, the switch and motor lights are green. With the up/down drum switch in the down position, the switch and motor lights are red. If an error occurs, the status light will turn red, with a flash of green. A corresponding error message will be displayed to provide more detail about the problem.

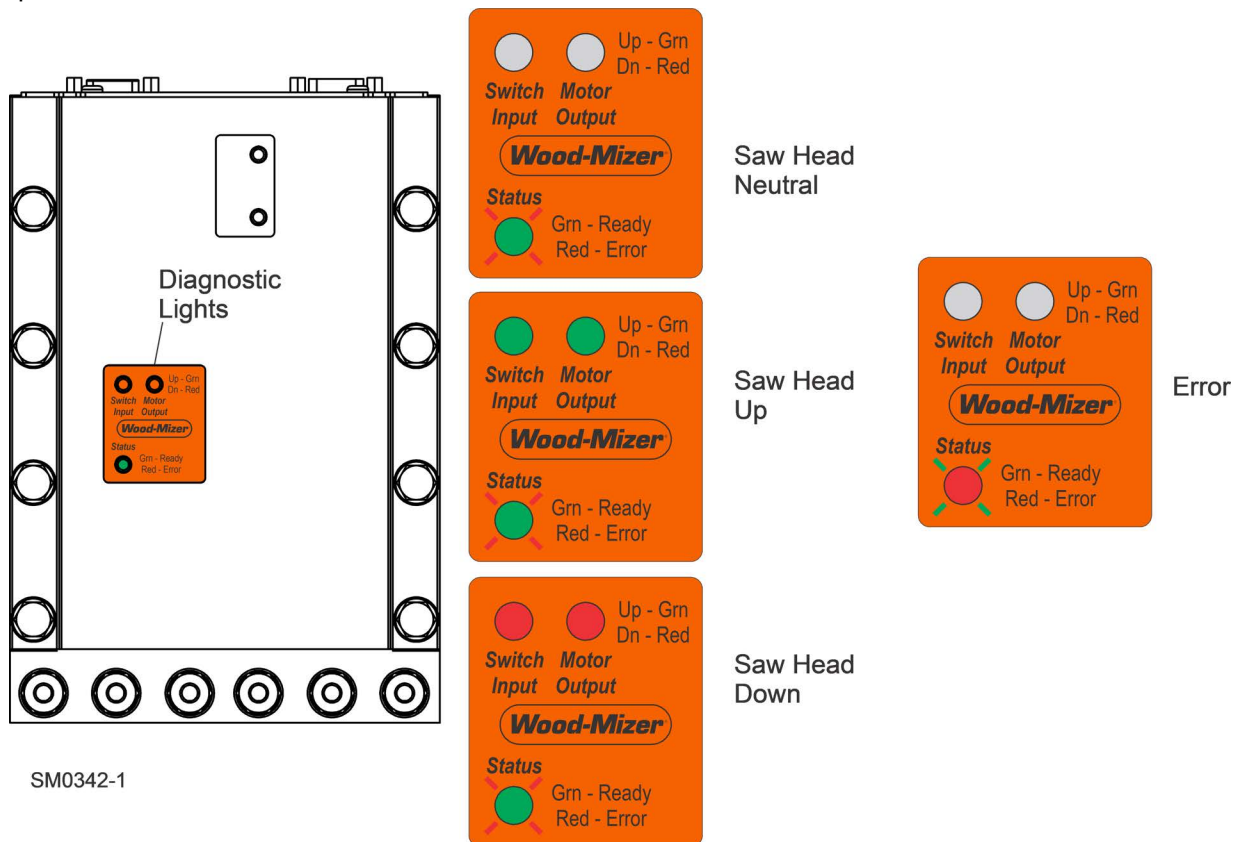


FIG. 7-3



**ERROR MESSAGES**


Possible causes for display error messages are provided below.

Error	Possible Cause(s)
<b>CHECK TRANSUCER</b>	Defective or loose transducer cable Defective transducer
<b>MOTOR CURRENT</b>	Excessive current draw on Up/Down motor caused by mechanical bind in saw head movement Short in up/down motor wires
<b>VOLTAGE ERROR</b>	Low voltage at the H-bridge or HMI (front panel) Weak battery Over-charging alternator Loose connections
<b>CHECK BREAKER OR CABLE</b>	Tripped Up/Down circuit breaker Defective or loose H-bridge communication (splitter) cable

## DIAGNOSTIC SCREEN


The diagnostic screen can be used to help diagnose battery, up/down and power feed motors and power feed potentiometer problems should they occur.

To display the Diagnostic Screen, push the Up button while in Manual Mode to display Configuration Menu 1. Select Other to display Configuration Menu 2. Push the Diagnostic button to display the Diagnostic Screen.

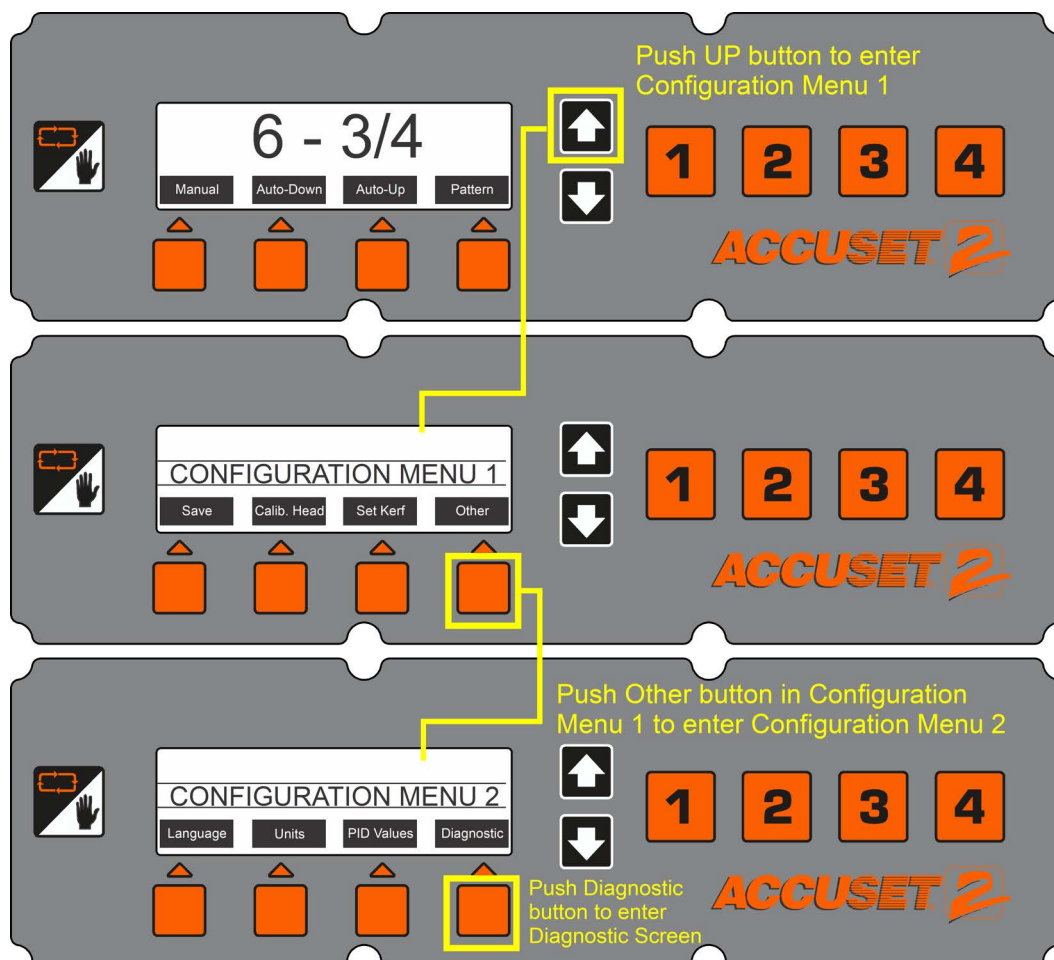

3H0989-8  
FIG. 7-4

The Diagnostic Screen is shown below.

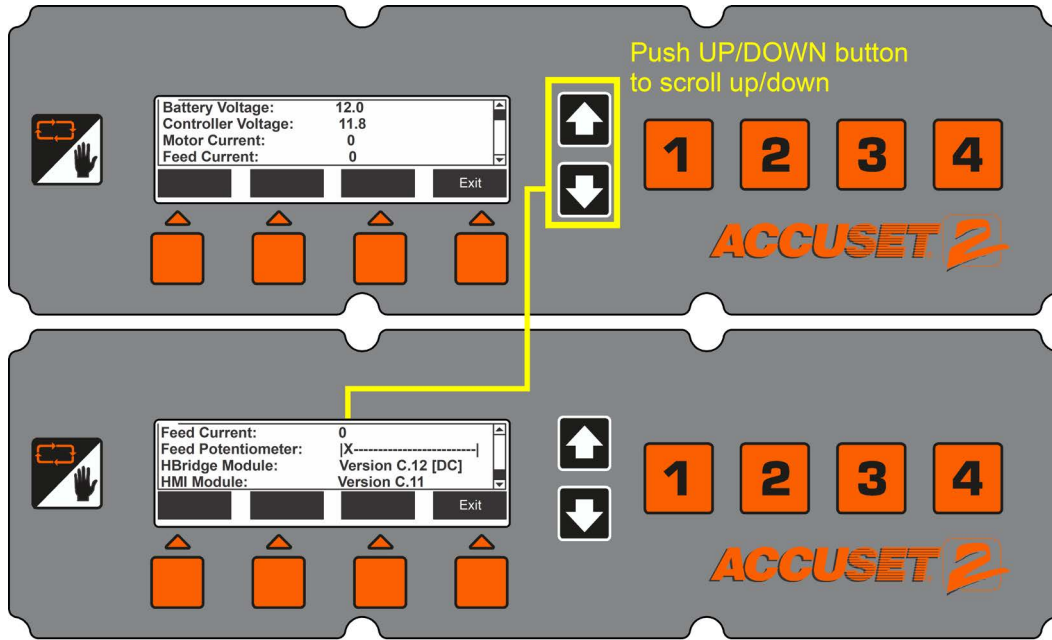

3H0989-9  
FIG. 7-5

**Battery Voltage.** This shows battery voltage as read by the H-Bridge.

**Controller Voltage.** This shows battery voltage as read by the front panel.

**Motor Current.** Amperage of the up/down motor.

**Feed Current.** Amperage of power feed motor.

**Feed Potentiometer.** This tests input signal of the power feed potentiometer. Turn the power feed potentiometer to check if it moves smoothly.

**HBridge Module.** This is the H-Bridge software revision.

**HMI Module.** This is the HMI module software revision.

## 7.5 AutoclutchTroubleshooting

Problem	Cause	Solution
<b>Autoclutch will not stop; continues to engage and disengage</b>	Bad mosfet module	Use a diode meter to check diode wire assembly for proper operation. Replace diode and/or mosfet module as necessary.
	Bad sensor	Check sensor with ohm meter. Pass a piece of ferrous metal across sensor and check that the sensor opens. Replace sensor as necessary.
<b>Autoclutch will not engage or disengage</b>	Metal debris buildup causing sensor to open	Clear metal debris from sensors.
	15Amp or 30Amp breaker tripped; 15Amp ACC Breaker (CB4) tripped	Check and reset as needed
	Bad sensor	Check sensor with Ohm meter. Pass a piece of ferrous metal across sensor and check that the sensor opens. Replace sensor as necessary.
	Metal debris buildup causing sensor to open	Clear metal debris from sensors.

	Bad Autoclutch motor, motor brushes or armature	Disconnect both motor leads from circuit. Use an ohm meter to check continuity between the motor leads. If no continuity, inspect brushes, brush springs and armature. Rebuild or replace motor as necessary.
	Motor overheating	Drive belts are too tight. Check belt tension and adjust properly.
	Gearbox binding	Check gearbox oil. Refill or replace as necessary.
	Damaged switch	Replace switch
<b>Autoclutch will engage or disengage only (won't do both)</b>	Bad sensor	Check sensor with ohm meter. Pass a piece of ferrous metal across sensor and check that the sensor opens. Replace sensor as necessary.
	Metal debris buildup causing sensor to open	Clear metal debris from sensors.

## 7.6 Power Feed Problems



**WARNING!** Disconnect the negative battery terminal cable. Failure to do so may result in injury and/or electrical system damage.

**NOTE:** The power feed circuit board is equipped with LED lights to help determine if the circuit board or feed rate switch are the cause of any feed problems you may encounter. [See Section 7.7](#) for instructions.

PROBLEM	CAUSE	SOLUTION
<b>Power Feed Is Jerky At Low Speeds Or Does Not Move Until Speed Is Above Halfway Mark.</b>	Drum switch is dirty.	Clean drum switch and lubricate with contact grease supplied by Wood-Mizer.
	Drum switch contacts are bad	Check that contacts are in good condition and positively close circuit.
	Components are loose or wires are broken.	Replace or repair PC board.
<b>Power Feed Is Jerky When Shaft Of Feed Rate Dial Is Moved Back And Forth.</b>	Variable speed switch is bad - perform the variable speed switch test.	Replace variable speed switch.
<b>Power Feed Is Jerky, But Power Feed Motor Runs Properly At All Speeds.</b>	Problem is mechanical.	Refer to the Mechanical Test.
<b>Power Feed Motor Overheats.</b>	Middle track oiler is dragging.	Clean middle track oiler and lubricate with 30-weight oil or ATF (Automatic Transmission Fluid) such as Dexron II. Allow motor to cool before restarting.
	Ground is not level.	Level mill with carpenter's level. Allow motor to cool before restarting.
	Track roller bearing drag is excessive.	Lubricate bearings; Replace tight bearings. Allow motor to cool before restarting.

PROBLEM	CAUSE	SOLUTION
	Lower track rollers are not aligned properly.	Check stop clearance from lower track rail. Allow motor to cool before restarting.
	Chain is dragging.	Make sure chain is centered on idler; Clean and lubricate chain; Adjust chain tension. Allow motor to cool before restarting.
	Chain is improperly tensioned.	Adjust chain tension. Allow motor to cool before restarting.
	Operator Seat option load is excessive.	Check seat bearings for freedom of movement; Loosen clamping screw 1/4 turn. Allow motor to cool before restarting.
	Power feed is binding.	Adjust belt tension; Check condition of belt, pulleys, bearings, and sprocket; Check motor for ground fault. Allow motor to cool before restarting.
	Saw head load is excessive.	Avoid unnecessary modifications to saw heads that would give them extra weight. Allow motor to cool before restarting.
	Blade is dull or improperly set.	Use proper blade maintenance procedures (See Sharpener or Toothsetter manual). Allow motor to cool before restarting.

## 7.7 Power Feed Circuit Troubleshooting

LED lights are provided on the control module to help troubleshoot any feed problems you may encounter.

The lights can be viewed by removing the rear control box panel.

If you have trouble determining the problem indicated by the LED lights, please note which lights are on and call customer service for assistance.

**IN** - This light normally brightens and dims as the feed rate switch is turned up or down. If the light is always on or always off, the feed rate switch is probably miswired. An erratic light indicates a worn or defective feed rate switch.

**OV** - This light indicates an over-voltage condition. This can be caused by a defective alternator not regulating voltage properly or a bad connection. The OV light will come on and deactivate the power feed control output until the problem is corrected.

**OL** - This light indicates an extreme overload condition of the power feed motor caused by a mechanical bind or a short in the wiring between the motor and circuit board. The OL light will come on and deactivate the power feed control output until the problem is corrected.

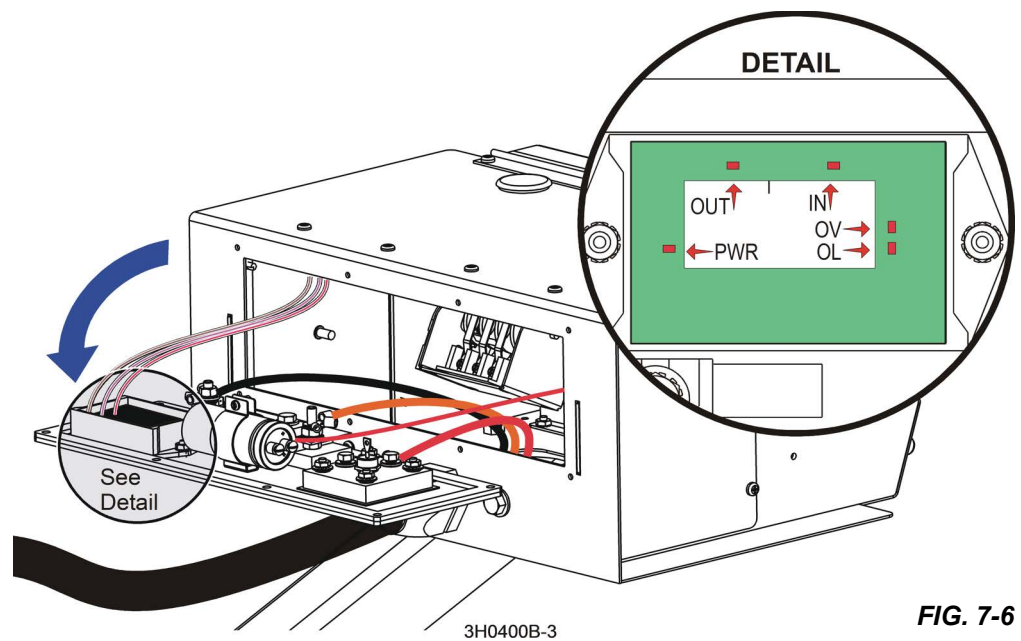


FIG. 7-6

**OUT** - This light normally dims and brightens at the same rate as the IN light when the feed rate switch is turned up and down. If the OUT light does not correspond with the IN light, look to see if OV or OL lights are coming on. If not, then the control module may be damaged. Call Customer Service for assistance.

**PWR** - Indicates battery power is present at the power feed control circuit board.

## 7.8 Power Feed Variable Feed Rate Switch Test

1. Turn the feed rate dial switch all the way down.
2. Move the shaft of the dial back and forth to see if there is a jerky response.
3. Turn the dial and move the shaft back and forth again.
4. Repeat several times.
5. If the jerkiness occurs at the same location on the dial several times, replace the variable speed switch.



**WARNING!** Disconnect and lockout power before performing any service to the electrical system. For battery-powered equipment, disconnect the negative battery terminal cable. For AC-powered equipment, follow the lockout procedure provided in the safety section ([See Section 2.2](#)). Failure to do so may result in injury and/or electrical system damage.

## 7.9 Power Feed Preliminary Test

This test will determine if the problem is mechanical or electrical.

1. Remove the drive belt from the power feed drive pulley.
2. Turn the key switch to the ACC position.
3. Put the carriage forward/reverse switch into the forward position.
4. Turn the feed rate dial through all speeds. If the power feed motor runs properly at all speeds, the problem is a mechanical one instead of an electrical one.

## 7.10 Power Feed Mechanical Test

1. Remove the weight from the track rollers. They should turn smoothly and easily with very little play.
2. Check the middle track cover to ensure it is not bent or touching the top rail.

3. Clean middle track oiler of sawdust buildup.
4. Make sure the power feed chain is not stiff from rust.
5. Ensure the chain is not too tight.
6. Check the power feed shaft. Visually inspect the bearings. The shaft should move neither in or out nor side to side.
7. Make sure the power feed chain cam bearing is not touching the main frame tube.
8. Make sure there is no sap or rust on the rails.
9. Make sure the stop on the lower track roller assembly is not rubbing the lower rail.
10. Make sure the track rollers are not too tight.
11. Make sure the power feed belt is properly tightened.

## 7.11 Hydraulic Problems




**WARNING!** Disconnect and lockout power before performing any service to the electrical system. For battery-powered equipment, disconnect the negative battery terminal cable. For AC-powered equipment, follow the lockout procedure provided in the safety section ([See Section 2.2](#)). Failure to do so may result in injury and/or electrical system damage.

Before performing service turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

PROBLEM	CAUSE	SOLUTION
<b>Any Hydraulic Handle Can Be Actuated, But No Response From The Pump.</b>	Carriage not positioned properly to provide power to the pump	Make sure carriage contact bracket is adjusted far enough forward for battery positive contact to touch 6ft. strip on main tube. Check contact and strip for tarnish or loose wires. Clean as necessary
	Poor ground connection	Check ground connection between pump and saw frame and between battery negative contact and lower rail. Check contact and rail for tarnish or loose wires. Clean as necessary
	Blown fuse	Replace
	Low or dead battery	Test battery amperage capability (such as low battery charge, low alternator output, defective voltage regulator, bad battery cell, battery age deterioration, etc.). Replace or recharge as necessary
	Poor cable connection	Check cable connection and make sure that battery terminals are in good condition (not corroded)
	Defective solenoid (may be indicated by solenoid clicking) See Monarch manual for troubleshooting solenoid	After checking all other possibilities for low voltage to solenoid, check solenoid. Tapping on solenoid may fix temporarily. Replace solenoid if necessary. NOTE: The solenoid is not a standard automotive type. Order from Wood-Mizer only
	Defective pump motor	Remove motor from pump and inspect. Repair or replace as necessary

PROBLEM	CAUSE	SOLUTION
<b>You Can Get Response From the Pump By Actuating All But One or Two Handles</b>	Valve assembly switch contacts are not properly adjusted	Locate the valve switch at the bottom of the valve assembly. Use a 3MM hex wrench to loosen the set screw on each of the five switch contacts. Press each contact to the valve block and tighten the contact set screw to secure in place. <b>CAUTION!</b> Do not over-tighten!
		<b>NOTE:</b> Do not adjust the valve switch or switch spring; they have been preset at the factory.
<b>Pump Motor Runs With Little Or No Response From The Cylinders</b>	Low battery	Test battery. Recharge or replace as necessary
	Low fluid level	Check fluid level. Add an all-season hydraulic fluid such as Amoco Rycon Oil MV or Mobil Multipurpose ATF (automatic transmission fluid) until level is 4 - 4 1/2" (100 - 114mm) from bottom of reservoir with all cylinders retracted
	Pressure relief valve moved from proper setting	Adjust pressure relief valve.
	Low air temperature causing fluid to thicken	Allow fluid to warm up. Synthetic fluids are available that allow for hydraulic operation in cold weather conditions (Univis HVI 13)
<b>Pump Motor Runs Continuously When Power Contact Is Made</b>	Solenoid is stuck closed	Tapping the solenoid may solve this problem temporarily. Replace solenoid
<b>Fluid Leaks From Around Cylinder Piston Ram</b>	Worn seals	Replace seals in cylinder. Check piston ram for abrasive weld that may be causing premature seal failure
<b>Fluid Leak Around Pump Box</b>	Loose seal or fitting	Wipe pump off completely to locate cause of leak. You may have to unbolt the pump to wipe behind it. <b>NOTE:</b> Movement of the sawmill can cause fluid to slosh up into the foam filter in the reservoir cap, and subsequently spray out, giving the appearance that fluid is leaking from the pump
<b>Hydraulic Side Supports Go Down Before Or At Same Time As Log Turner</b>	Dirt in sequence valve	Remove sequence valves and clean thoroughly with kerosene. <b>NOTE:</b> Be sure to reassemble the valve and install it in its original position on the cylinder
	Retainer in sequence valve worn	Replace sequence valve
	Low air temperature causing fluid to thicken	Allow fluid to warm up. Synthetic fluids are available that allow for hydraulic operation in cold weather conditions (Univis HVI 13)
<b>Hydraulic Turner Goes Up Before Or At Same Time As Side Supports</b>	Dirt in sequence valve	Remove sequence valves and clean thoroughly with kerosene. <b>NOTE:</b> Be sure to reassemble the valve and install it in its original position on the cylinder
	Retainer in sequence valve worn	Replace sequence valve
	Low air temperature causing fluid to thicken	Allow fluid to warm up. Synthetic fluids are available that allow for hydraulic operation in cold weather conditions. (Univis HVI 13)

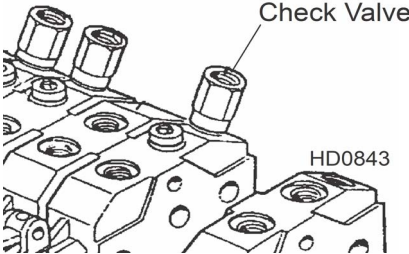

PROBLEM	CAUSE	SOLUTION
<p><b>Hydraulic Toe Boards "Creep" UP or DOWN without the valve control handles being operated OR do not raise or lower at all</b></p>	<p>Can be a result of shock load caused by improperly using the toe boards to "cushion" or break the fall of a cant onto the bed):</p> <ul style="list-style-type: none"> <li>· damaged hoses</li> <li>· damaged cylinder seals or cylinder</li> <li>· damaged valve</li> </ul>	<p><b>INITIAL CHECK</b> Disconnect the toe board hydraulic hose from its current valve section and temporarily connect it to another valve section. Check to see if the hydraulics operate properly. <b>If hydraulics operate properly</b>, hoses and cylinder seals are good. Perform further valve inspection, found below. <b>If creep still occurs</b>, check all hoses for possible pin-holes causing leakage. Replace if applicable. Retest. <b>If creep still occurs</b>, replace cylinder seals or cylinder and retest. Be sure to reconnect the hose to the proper valve section when done.</p> <p><b>FURTHER VALVE INSPECTION</b> Remove the check valve shown below. Flush the check valve with an air hose or solvent to remove any dirt from the valve's seat. Reinstall and test again. Check to see if the hydraulics operate properly. <b>If creep still occurs</b>, replace the check valve with a new one. Retest. <b>If creep still occurs</b>, replace the hydraulic valve.</p>
		
	Bad check valve (results in one of the toe boards experiencing down-creep)	Check the release valve as instructed above. If the release valve is good, replace the high-pressure hydraulic check valves (A12869) located on the pump.
<p><b>Pump runs but makes "growling" sound and hydraulic functions are slow, jerky or don't work at all</b></p>	Low fluid level	Check fluid level and add fluid as necessary. Check for leaks in the system at the control box fittings, hoses and cylinders
<p><b>A log loader cylinder does not move when lowering the loader causing the foot of other to raise completely before loader will start down</b></p>	Damaged cylinder shaft	Replace the cylinder that is not moving

## 7.12 Hydraulic Pressure Test

1. Disconnect power from the pump by moving the saw head forward until it no longer contacts the power strip.
2. Locate the loading arm port fitting on the hydraulic valve body.
3. Disconnect the hydraulic hose from the fitting and install a gauge to the fitting.

**NOTE:** Installing the gauge at the loading arm fitting port will insure the pressure reading is not affected by a relief valve.

**WARNING!** Wear safety goggles and keep people away from area when performing this procedure. Highly pressurized fluid escaping through a leak may cause serious injury.

Check gauge fitting connection for leaks before activating the hydraulic valve levers.


Carefully activate the lever and watch for leaks. Fix any leaks before proceeding.

4. Restore power to the pump by moving the saw head back until it contacts the power strip.
5. Operate the loading arm hydraulic lever and read the pressure on the gauge.

Hydraulic pressure is factory-set at 2000  $\pm$ 100 psi and should not need to be readjusted. The relief valve adjustment screw shown may be used to fine-tune the hydraulic pressure:

6. Remove the adjustment screw nut.
7. Tighten the adjustment screw (clockwise) to increase pressure.
8. Loosen the adjustment screw (counterclockwise) to lower pressure.

**CAUTION!** Pressure should not exceed 2000 psi. If it does, the amp draw will rise above the design maximum of 200 amps, and could cause battery and system problems. Pressure above 2000 psi may also damage the hydraulic hoses.

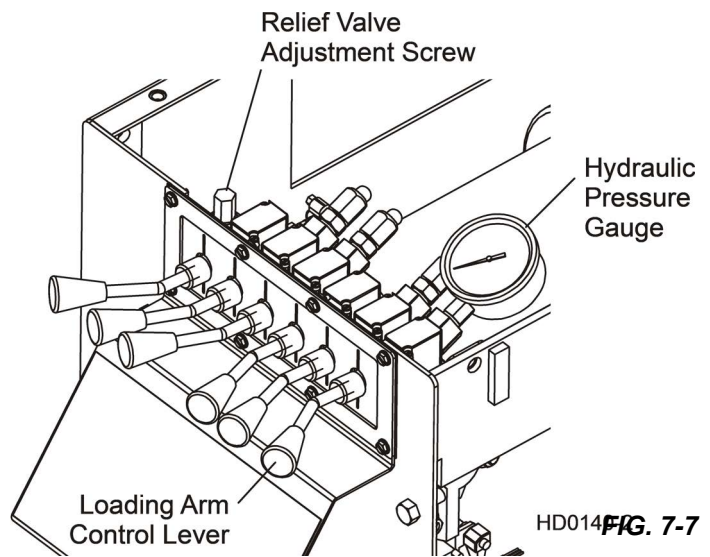

### 7.13 Engine/Motor and Drive Pulleys Alignment

**WARNING!** Before performing service near moving parts such as blades, pulleys, motors, belts and chains, first turn the key switch to the OFF (#0) position and remove the key. If the key is turned on and moving parts activated, serious injury may result.

**WARNING!** Do not for any reason adjust the engine drive belts or belt support bracket with the engine running. Doing so may result in serious injury.

1. Install and properly tension the drive belt ([See Section 6.11](#)).
2. With the autoclutch disengaged, use a straight edge to check the alignment of the pulley on the engine/motor to the alternator pulley. Loosen the bushing on the engine/motor pulley and adjust if necessary until it is aligned with the alternator pulley.
3. With the autoclutch disengaged, use a straight edge to check the alignment of the engine/motor pulley to the main drive pulley. Loosen the bushing on the drive pulley and adjust if necessary until it is aligned with the engine/motor pulley.
4. **(E25 Only):** Check that the engine/motor pulley is also square with the drive pulley. If necessary, loosen the engine mounting bolts and cock the engine until the pulley is square with the drive pulley. Retighten the engine mounting bolts.
5. Check that all engine mounting bolts and pivot bushing clamps are tight.
6. Engage the autoclutch and recheck the pulley alignment. Adjust if necessary.
7. If any pulleys were adjusted, recheck the drive belt support(s) and adjust if necessary ([See Section 6.11](#)).

## SECTION 8 SAWMILL ALIGNMENT

The Wood-Mizer sawmill is factory aligned. Two alignment procedures are available to realign the sawmill if necessary. The Routine Alignment instructions should be performed as necessary to solve sawing problems not related to blade performance. The Complete Alignment procedure should be performed approximately every 1500 hours of operation (sooner if you regularly transport the sawmill over rough terrain).

**NOTE: THE PROCEDURES LISTED HERE MUST BE PERFORMED IN THE ORDER THEY APPEAR.**

### 8.1 Routine Alignment Procedure

#### Blade Installation

1. Remove the blade and check the blade wheel belts.
2. Remove any sawdust buildup from the surface of the belts.
3. Replace worn belts if they do not keep the blade from contacting the blade wheel.
4. Install a clean blade and apply the appropriate tension ([See Section 3.3](#)).
5. Inspect the blade guide blocks for damage or wear and replace as necessary.
6. Check the blade guide blocks and drive side deflector plate are properly adjusted.
7. Adjust the idle-side cant control to track the blade ([See Section 3.5](#)).
8. Close the middle blade housing cover and make sure all persons are clear of the open side of the saw head.
9. Start the engine.
10. Engage the blade, rotating the blade until the blade positions itself on the wheels.



**WARNING!** Do not spin the blade wheels by hand. Spinning the blade wheels by hand may result in serious injury.

11. Disengage the blade.
12. Turn the engine off and remove the key.

#### Saw Head Tilt

As the blade enters a wide log or cant, the outside of the saw head will drop down slightly. To compensate for the drop, the saw head is adjusted 1/16" (1.5 mm) higher at the outside.

1. Move the saw carriage so the blade is positioned over a bed rail.
2. Adjust the blade guide arm to 1/2" (15 mm) from full open.
3. Raise the saw head so the bottom of the blade measures 14 3/4" (375 mm) from the top surface of the bed rail near the inner blade guide assembly.
4. Measure from the blade to the bed rail near the outer blade guide assembly.

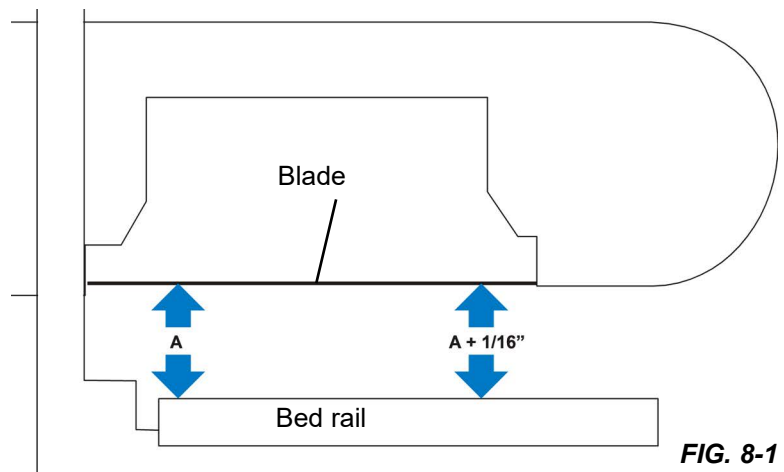


FIG. 8-1

This measurement should be 1/16" (1.5 mm) higher than the inner measurement or 14 13/16" (376.5 mm).

5. Adjust the saw head tilt by using the horizontal adjustment nuts.
6. Loosen the four inner adjustment nuts 1/4 turn to raise the outside of the saw head and tighten the four outer nuts.
7. Recheck the measurement from the blade to the bed rails and adjust the horizontal adjustment nuts until the outside of the saw head is 1/16" higher than the inside.

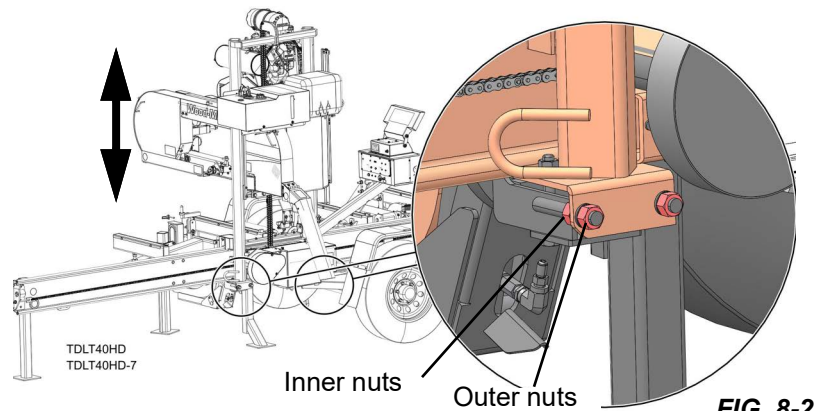


FIG. 8-2

### Blade Guide Arm Alignment

The blade guide arm moves the outer blade guide in and out. If the arm becomes loose, the blade guide will not deflect the blade properly, causing inaccurate cuts. A loose blade guide arm can also cause blade vibration.

A video is available at <https://www.youtube.com/watch?v=yH93eH-Hlrs>.

1. Adjust the blade guide arm in to 1/2" (13 mm) from fully closed.
2. Manually try to move the arm up and down.

If you can move the arm by hand, tighten the arm rollers.

3. Remove the blade housing cover to access the blade guide arm roller mounting bolts.

The blade guide arm rollers are mounted on cam-shaped bolts.

4. Turn the bolts to move each roller up or down.
5. If the inner lower roller is loose, adjust the inner top roller down.
6. If the outer lower roller is loose, adjust the outer lower roller up. See FIG. 8-3.
7. Retighten the jam nuts and recheck the tightness of the bottom rollers.
8. Check that the arm is aligned properly.

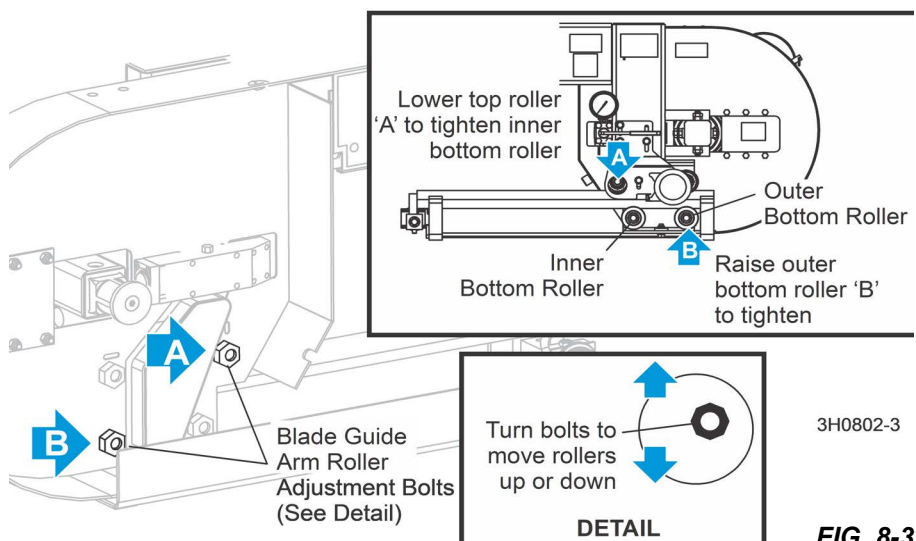


FIG. 8-3

9. With the arm adjusted 1/2" (12.7 mm) from fully closed, measure the distance between the blade guide roller flange and the back of the blade. See FIG. 8-4.

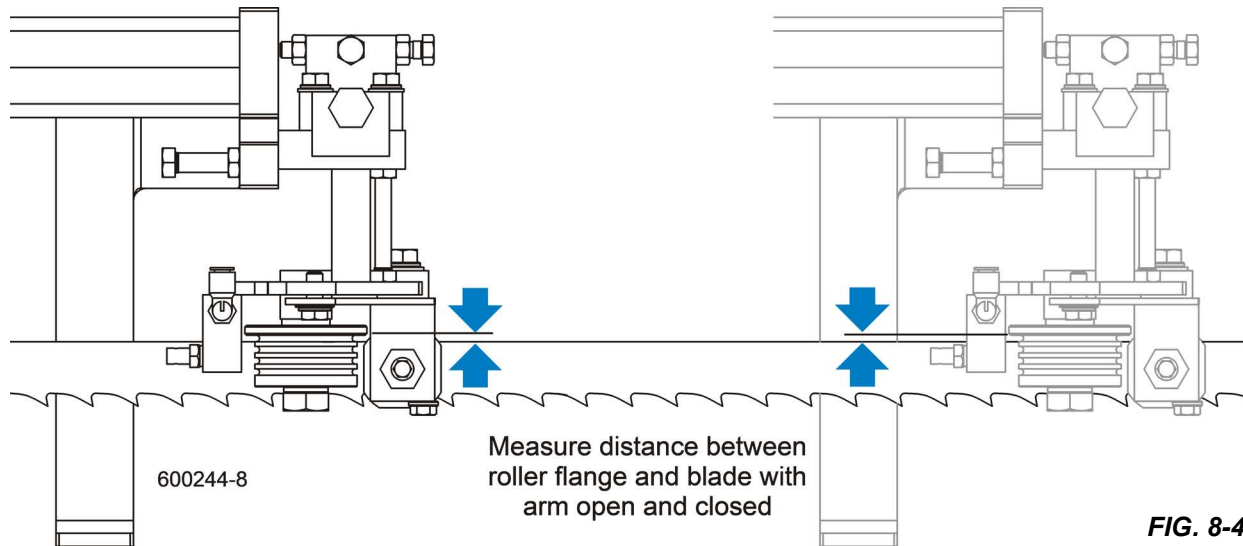


FIG. 8-4

10. Adjust the blade guide arm to 1/2" (12.7 mm) from fully open and remeasure the distance from the roller flange to the back of the blade.

The two measurements should be the same. If not, adjust the outer rollers in or out to tilt the arm horizontally.

11. Loosen the front nuts on the outer rollers and tighten the rear nuts to tilt the arm in toward the blade.
12. Loosen the rear nuts on the outer rollers and tighten the front nuts to tilt the arm out away from the blade.
13. Recheck the blade guide arm horizontal tilt.
14. Check the vertical tilt of the blade guide arm.
15. Move the saw carriage so the blade guide arm is positioned over a bed rail.

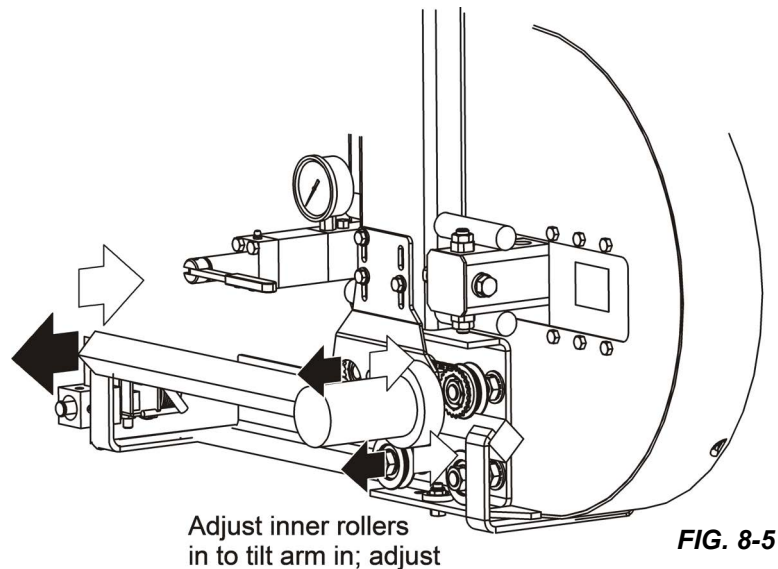
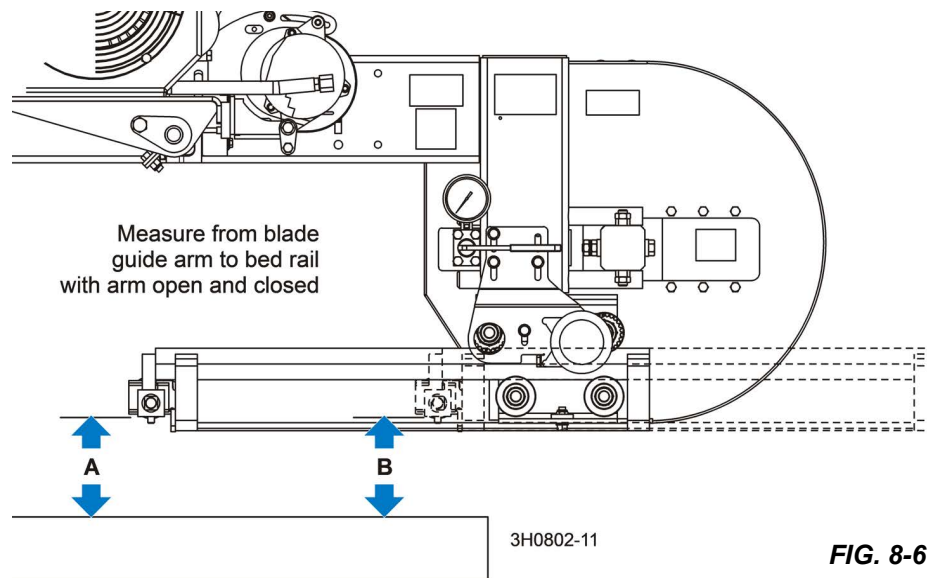



FIG. 8-5

16. With the arm 1/2" (13 mm) from fully closed, raise or lower the saw head until the bottom of the blade guide block is 15" (375 mm) from the top of the bed rail.
17. Adjust the blade guide arm to 1/2" (13 mm) from fully open.
18. Measure the distance from the bottom of the blade guide mounting block to the bed rail.

This measurement should be 15" (376.5 mm) or slightly higher because the saw head is tilted up 1/16" (1.5 mm) on the outside (See [Saw Head Tilt](#)). If the blade guide is closer to the bed rail or more than 1/16" (1.5mm) higher with the arm open, adjust the outer rollers up or down to tilt the blade guide arm vertically.

**FIG. 8-6**

1. Remove the blade housing cover to access the blade guide arm roller mounting bolts.
2. Loosen the roller jam nuts on the other side of the blade housing and turn the mounting bolts.
3. Adjust the outer top and bottom rollers up to tilt the arm down.
4. Adjust the outer top and bottom rollers down to tilt the arm up.
5. Retighten the jam nuts and recheck the blade guide arm vertical tilt.

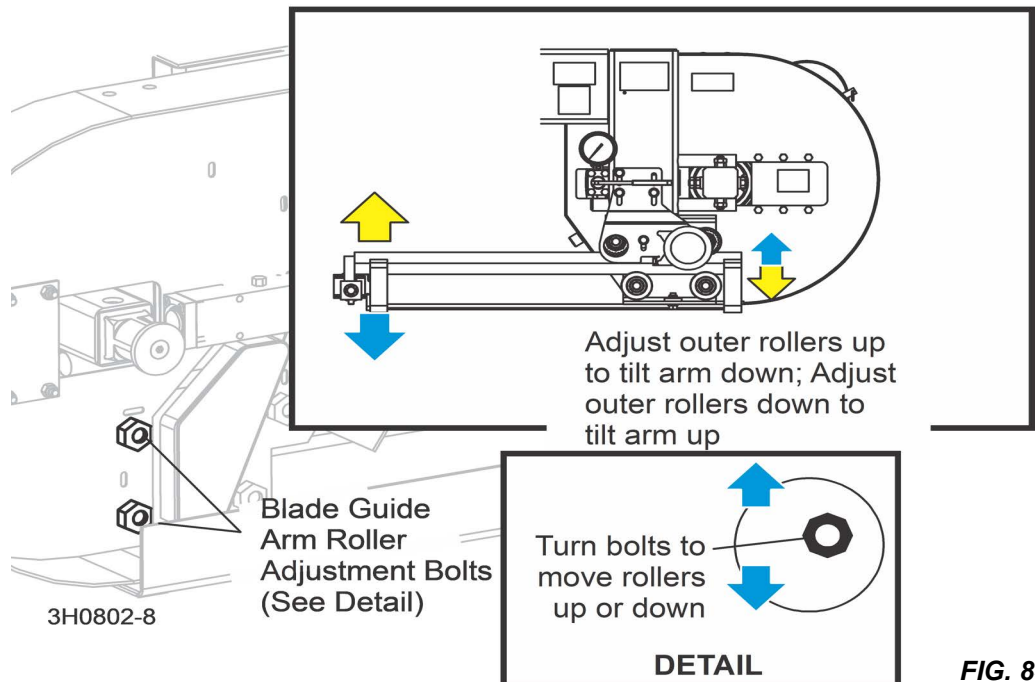
**FIG. 8-7**

### **Blade Guide Vertical Tilt Alignment**

The blade guides should be adjusted properly in the vertical plane. If the blade guides are tilted vertically, the blade will try to travel in the tilted direction.

A Blade Guide Alignment Tool (BGAT) is provided to help you measure the vertical tilt of the blade.

1. Open the adjustable blade guide arm 1/2" (13 mm) from full open.
2. Clip the alignment tool on the blade.
3. Position the tool close to the outer blade guide assembly.
4. Ensure the tool does not rest on a tooth or burr, and is lying flat against the bottom of the blade.
5. Move the carriage so that the front end of the tool is positioned above the bed rail.
6. Measure the distance from the bed rail to the bottom edge of the tool.
7. Move the carriage so that the back end of the tool is positioned above the bed rail.

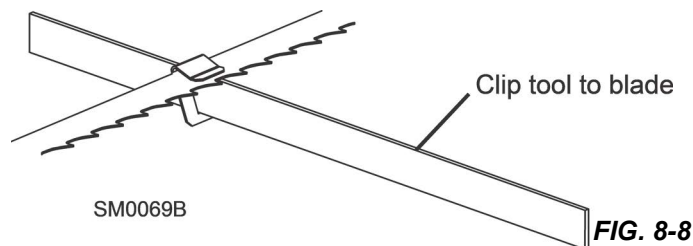**FIG. 8-8**

8. Measure the distance from the bed rail to the bottom edge of the tool.
9. If the measurement from the tool to the bed rail is not equal within 1/32" (.75 mm), adjust the vertical tilt of the outer blade guide roller.
10. Loosen one set screw at the side of the blade guide assembly.
11. Loosen the jam nuts on the top and bottom vertical tilt adjustment screws.
12. Loosen the bottom screw and tighten top screw to tilt the roller up.
13. Loosen the top screw and tighten the bottom screw to tilt the roller down.
14. Tighten the jam nuts and recheck the tilt of the blade.
15. Move the blade guide alignment tool close to the inner blade guide roller assembly and repeat the above steps.
16. Adjust the vertical tilt of the inner blade guide if necessary.

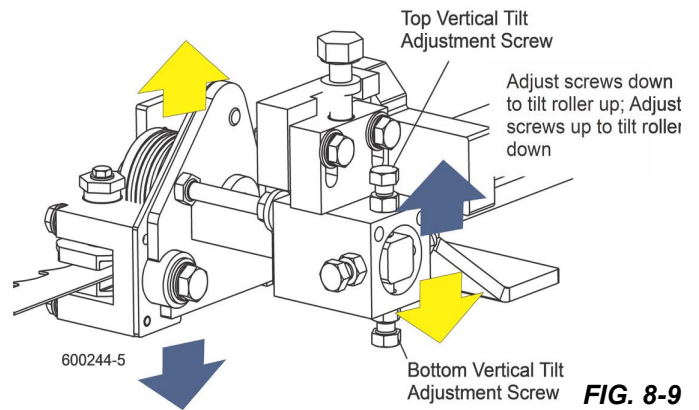


FIG. 8-9

### Blade Guide Horizontal Tilt Adjustment

If the blade guides are tilted in the wrong direction horizontally, the back of the blade may contact the flange as the roller is spinning down, causing it to push the blade away from the guide roller.

17. Remove the blade guide alignment tool from the blade and adjust the blade guide arm halfway in.
18. Remove the clip from the blade guide alignment tool.
19. Place the tool against the face of the outer blade guide roller.
20. Measure between the back edge of the blade and the tool at the end closest to the inner blade guide ("B").
21. Measure between the back edge of the blade and the other end of the tool ("A").

The roller should be tilted slightly to the left ('A' 1/8" [3 mm] less than 'B' ± 1/8" [3 mm]).

22. Loosen the jam nuts on the horizontal tilt adjustment screws.
23. Loosen the right screw and tighten left screw to tilt the roller left.
24. Loosen the left screw and tighten the right screw to tilt the roller right.
25. Tighten the jam nuts and recheck the tilt of the blade.
26. Repeat the above steps for the inner blade guide roller assembly.

**NOTE:** Once the blade guides have been adjusted, any cutting variances are most likely caused by the blade.

### Blade Guide Flange Spacing

Each blade guide must be adjusted so the roller flange is the correct distance from the back edge of the blade. If the flange is too close to or too far from the blade, the sawmill will not cut accurately.

**HINT:** When adjusting blade guide spacing, loosen the top set screw and one side set screw only. This will ensure horizontal and vertical tilt adjustments are maintained when the adjustment screws are retightened.

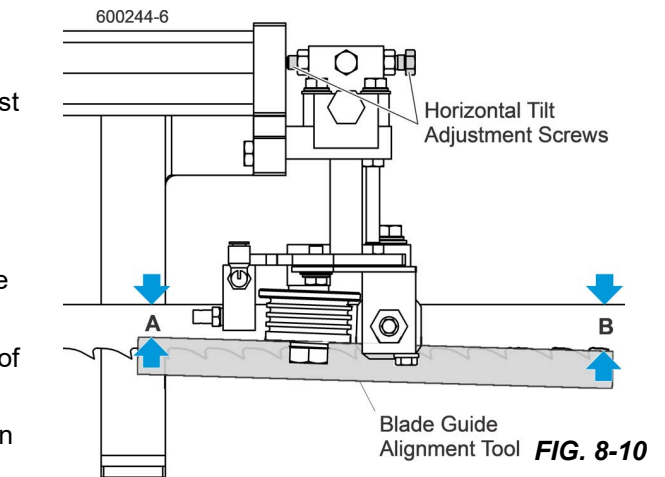


FIG. 8-10

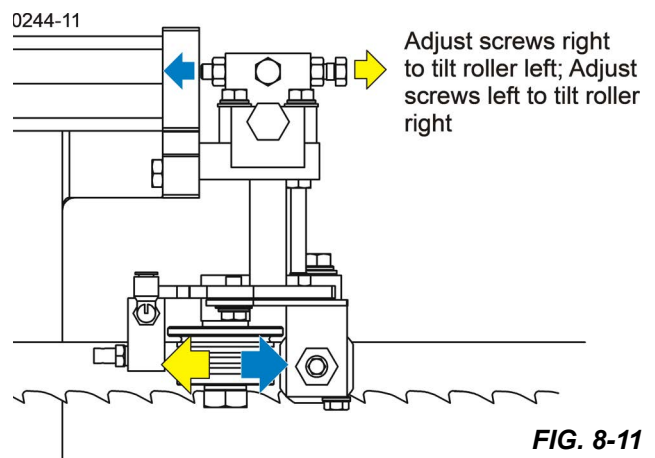


FIG. 8-11

1. Measure the distance between the flange on the outer blade guide roller to the back edge of the blade.

This distance should measure 1/8" (3.0 mm).

2. Adjust the roller back or forward if necessary.
3. Loosen the top and one side screw shown.
4. Tap the blade guide forward or backward until properly positioned.
5. Retighten the screws and jam nuts.
6. Measure the distance between the flange on the inner blade guide roller to the back edge of the blade.

This distance should measure 1/16" (1.5 mm).

7. Adjust the roller back or forward if necessary.

### Side Support Alignment

Logs and boards are clamped against the side supports when sawing. The sides supports **must be square** to the bed to ensure square lumber.

1. Swing a side support down and measure between the face of the support and the main bed tube. See FIG. 8-12.

The distance at the top of the side support ('B') should be equal to or no more than 1/32" (0.8 mm) greater than the distance at the base of the side support ('A').

2. Adjust the horizontal tilt of the side support if necessary.

3. Loosen the two adjustment plate mounting bolts.

4. Use a mallet to move the plate until the side support is parallel to the bed tube in the horizontal position.

5. Retighten the mounting bolts.

6. Repeat the horizontal check for the remaining side supports. Adjust as necessary.

7. Place square alignment tubes (Part No. S12831 - 2 required) across the bed rails.

8. Swing a side support up so that it is vertical.

9. Pull back at the top of the support to eliminate slack as if a log were being clamped against it.

10. Place a square against the face of the side support.

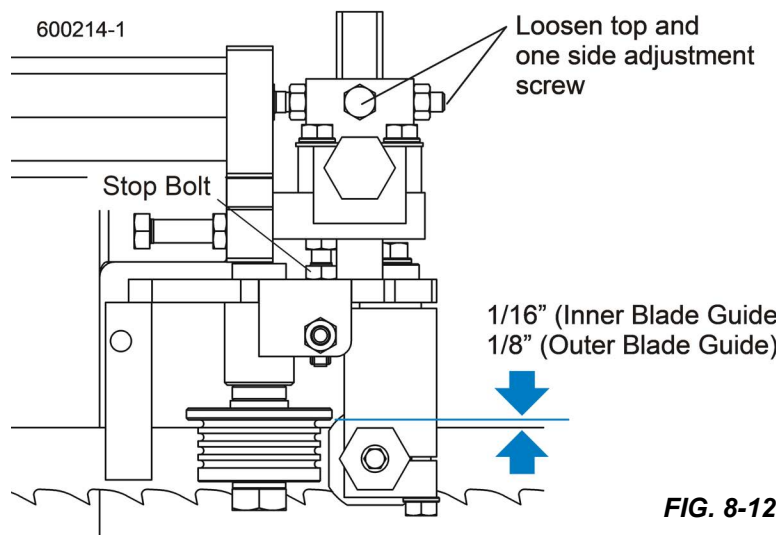


FIG. 8-12

The side support should be square or slightly tilted forward 1/32" (0.8 mm).

11. Adjust the vertical tilt of the side support if necessary.

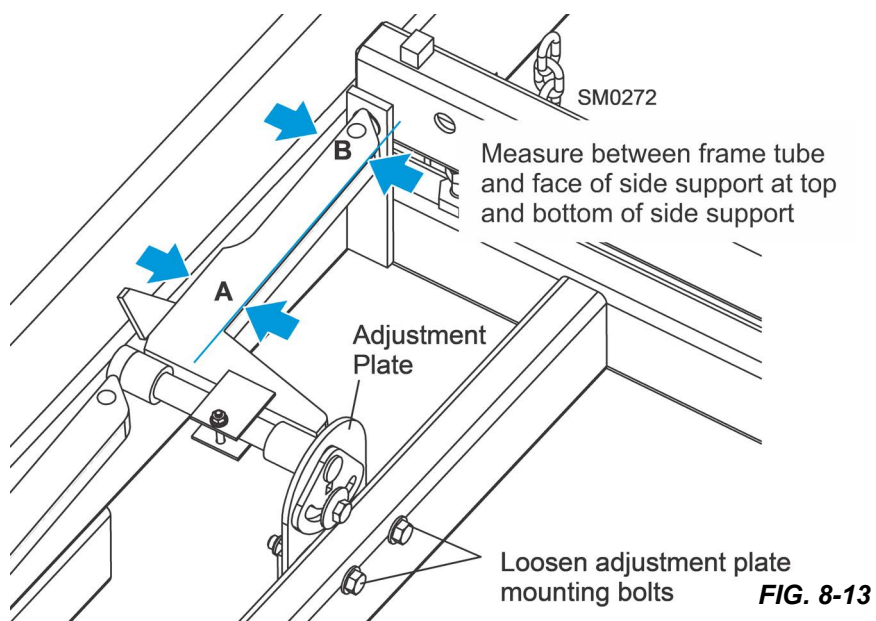


FIG. 8-13



12. Loosen the side support mounting bolt.
13. Use a 3/8" ratchet to rotate the pin until the side support is square to the bed. See FIG. 8-14.
14. Repeat the vertical check for the remaining side supports and adjust as necessary.

### Blade Height Scale Adjustment

After the entire sawmill has been aligned and all adjustments made, check that the blade height scale indicates the true distance from the blade to the bed rails.

1. Move the saw carriage so the blade is positioned directly above one of the bed rails.
2. Measure from the bottom edge on a down-set tooth of the blade to the top of the bed rail, near the inner blade guide assembly.
3. View the blade height scale with eyes level with the indicator.

The scale should indicate the **actual distance** from the blade to the bed rail.

4. Adjust the indicator if necessary.

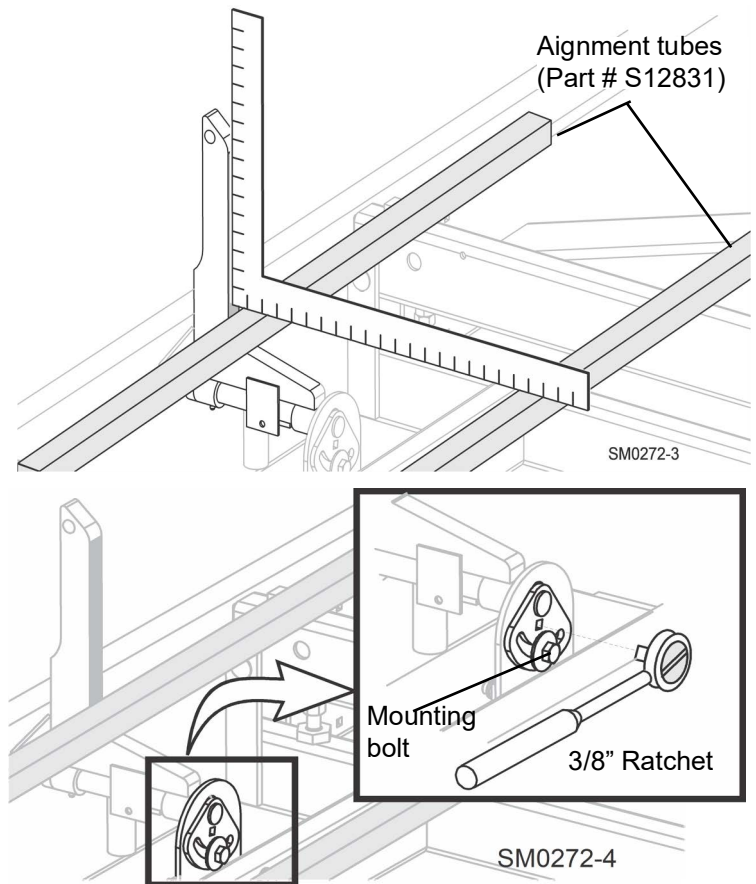


FIG. 8-14

5. Loosen the indicator bracket mounting bolts.
6. Adjust the bracket up or down until the indicator is aligned with the correct mark on the scale (+0 -1/32 [0.8 mm]).
7. Retighten the bracket mounting bolts.

**For example**, if the measurement from the down-set tooth of the blade to the bed rail was 14 3/4" (375 mm), make sure the indicator reads 14 3/4" (375 mm) on the scale.

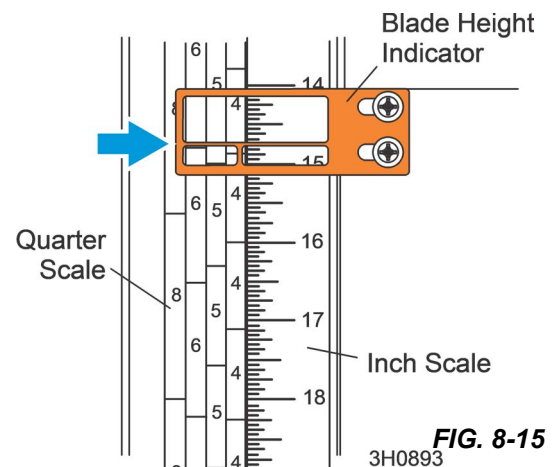


FIG. 8-15

## 8.2 Complete Alignment Procedure

**NOTE: THE PROCEDURES LISTED HERE MUST BE PERFORMED IN THE ORDER THEY APPEAR.**

### **Frame Setup**

Before performing the following alignment procedures, setup the mill on firm, level ground.

If your sawmill is stationary, with no trailer axle, shim the feet so the weight of the sawmill is evenly supported.

If your sawmill has a trailer axle and adjustable outriggers, adjust the front and third outriggers on the main frame tube down just enough to lift weight from the trailer tire.

Adjust the two outer outriggers down just so they touch the ground but do not bear weight.

See [SECTION 3](#) for additional setup information.

### **Blade Installation**

1. Remove the blade and replace the blade wheel belts.

New blade wheel belts are required to perform the complete alignment procedure.

2. Blow sawdust off of the blade guide assemblies and the blade housings.
3. Remove the blade guide assemblies.

**NOTE:** To remove the blade guide assemblies and maintain the tilt adjustments, only loosen one side screw and the top screw. Leaving the other side screw and bottom screw in position will insure you will return the rollers to their original tilt adjustment.

4. Adjust the outer blade guide arm in or out until the outer blade guide is approximately 24" from the inner blade guide.
5. Install a new blade and apply the appropriate tension ([See Section 3.3](#)).
6. Close the middle blade housing cover and make sure all persons are clear of the open side of the saw head.
7. Start the engine.
8. Engage the blade, rotating the blade until the blade positions itself on the wheels.



**WARNING!** Do not spin the blade wheels by hand. Spinning the blade wheels by hand may result in serious injury.

9. Disengage the blade. Turn the engine off and remove the key.

### **Saw Head Slide Pad Adjustment**

There are eight nylon pads positioned between the saw head frame and vertical mast. The spacing of the pads is factory set and rarely needs adjusting. To check the pad spacing, perform the following steps.


**NOTE:** The pads on the engine side of the mast are referred to as the "inner" pads. The pads on the control side of the mast are referred to as the "outer" pads.

**NOTE:** Shims are often used around the clamping bolts, between the C-frame support bracket and the mast v-brace. The shims align the v-brace to the mast so that the entire face of each slide pad makes contact with the mast. Be sure to keep these shims in place when performing the following adjustment.

1. Raise the saw head to the top of the vertical mast and secure the saw head with a chain at the top.
2. Check the top set of four pads.

The outer two pads should be touching the mast rails. There should be a small gap (just wide enough to slide a business card through) between one of the inner pads and the mast rail.

**WARNING!** Always secure the saw head with a 5/16" (8mm) chain with at least 1900 lbs. (860Kg) working load capacity before adjusting the mast pads. The cutting head may fall, causing severe injury or death.

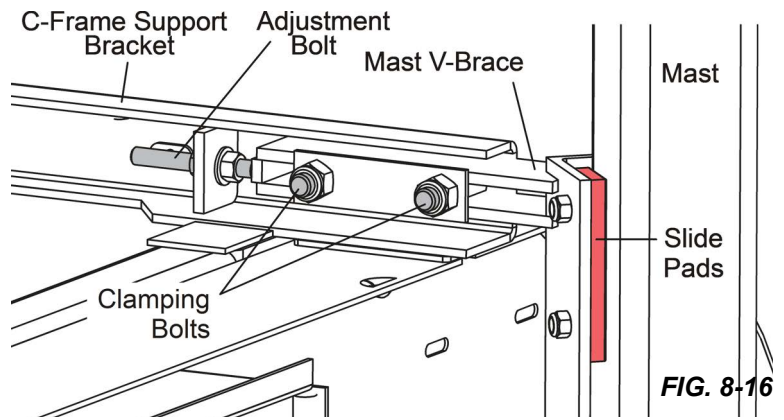

3. Make sure the saw head is adjusted up off the safety chain to ensure the chain is not affecting the alignment of the mast pads.
4. Lower the saw head until you can access the upper slide pad adjustment bolts to adjust the spacing of the upper set of pads.
5. Loosen the upper clamping bolts and turn the adjusting bolt as necessary to provide the pad spacing described above.
6. Lower the saw head to the bottom of the vertical mast.
7. Check the bottom set of four pads.

There should be a small gap between one of the outer pads and the mast rail. The gap should be just wide enough to slide a business card through. The inner two pads should be touching the mast rails. To adjust the spacing of the lower set of pads, raise the saw head until you can access the lower slide pad adjustment bolts.


8. Loosen the lower locking bolts and turn the adjusting bolt as necessary to provide the pad spacing described in Step 6.

**CAUTION!** Due to variations in the vertical mast, the pad spacing may vary throughout the travel of the saw head. Check the pad spacing at the top and bottom ends of the mast only. Pads adjusted too tight will cause premature up/down motor failure.


### Blade Wheel Alignment

The blade wheels should be adjusted so they are level in the vertical and horizontal planes. If the blade wheels are tilted up or down, the blade will want to travel in the tilted direction. If the blade wheels are tilted horizontally, the blade will not track properly on the wheels.

1. Use the blade guide alignment tool to check the vertical alignment of each blade wheel.
2. Attach the tool to the blade near the inner blade guide mount.
3. Be sure the tool does not rest on a tooth or burr, and is lying flat against the bottom of the blade.
4. Move the saw carriage so the front end of the tool is positioned over the first bed rail.
5. Measure from the bottom of the tool to the top surface of the bed rail.
6. Move the saw carriage so the rear of the tool is positioned over the bed rail.
7. Again, measure from the bottom of the tool to the bed rail.
8. If the two measurements differ by more than 1/16" (1.5 mm), adjust the vertical tilt of the drive-side blade wheel.

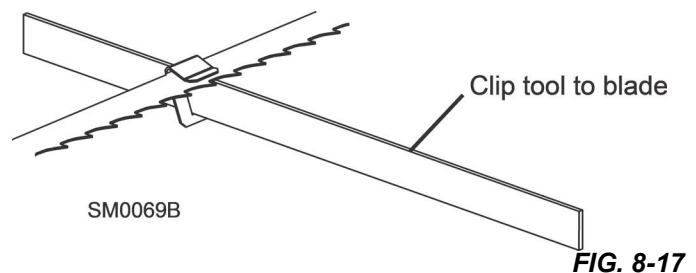


9. Use the vertical adjustment screws to adjust the drive-side blade wheel.
10. To tilt the wheel up, loosen the top adjustment screw one quarter turn.
11. Loosen the jam nut on the bottom adjustment screw and tighten the screw to 30 ft.-lbs torque.
12. Tighten the top and bottom jam nuts.
13. To tilt the wheel down, loosen the bottom adjustment screw one quarter turn.
14. Loosen the jam nut on the top adjustment screw and tighten the screw to 30 ft.-lbs torque.
15. Tighten the top and bottom jam nuts.
16. Recheck the vertical tilt of the drive-side blade wheel with the blade guide alignment tool.
17. Readjust the blade wheel as necessary until the front and rear of the tool are the same distance from the bed rail (within 1/16" [1.5 mm]).

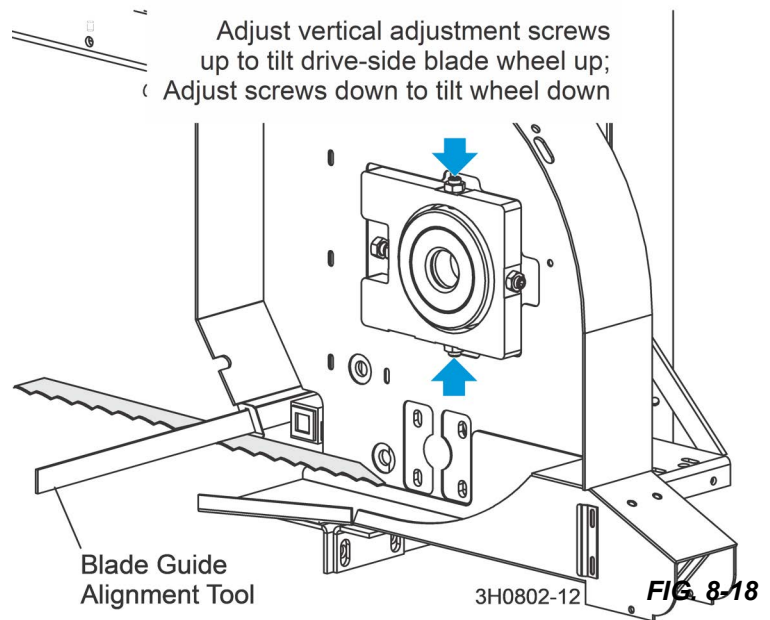

18. Remove the tool from the blade and reattach it near the outer blade guide assembly.
19. Measure from the tool to the bed rail at both ends of the tool.

If the measurements at the front and rear ends of the tool differ by more than 1/16" (1.5 mm), adjust the vertical tilt of the idle-side blade wheel.

20. Use the vertical adjustment screws to adjust the idle-side blade wheel.
21. To tilt the wheel up, loosen the bottom adjustment screw one quarter turn.
22. Loosen the jam nut on the top adjustment screw and tighten the screw.
23. Tighten the top and bottom jam nuts.
24. To tilt the wheel down, loosen the top adjustment screw one quarter turn.
25. Loosen the jam nut on the bottom adjustment screw and tighten the screw.
26. Tighten the top and bottom jam nuts.
27. Recheck the vertical tilt of the idle-side blade wheel with the blade guide alignment tool.
28. Readjust the blade wheel as necessary until the front and rear of the tool are the same distance from the bed rail (within 1/16" [1.5 mm]).
29. Check the position of the blade on the idle-side blade wheel.

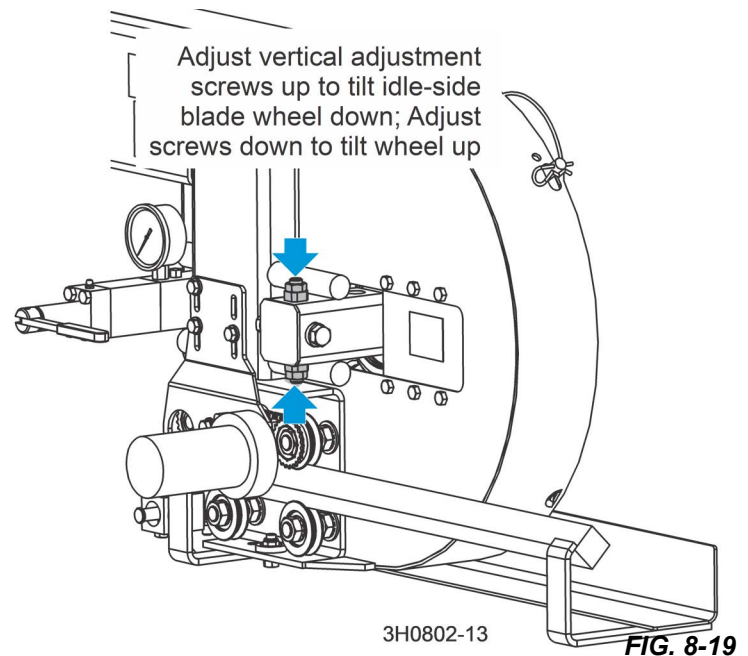

The horizontal tilt of the blade wheel should be adjusted so that the gullet of an 1-1/4" blade is 1/8" (3 mm) out from the front edge of the wheel ( $\pm 1/16$  [1.5 mm]). The gullet of an 1-1/2" blade should be 3/16" (4.5 mm) out from the front edge of the wheel ( $\pm 1/16$  [1.5 mm]). Do not let the teeth ride on the wheels.

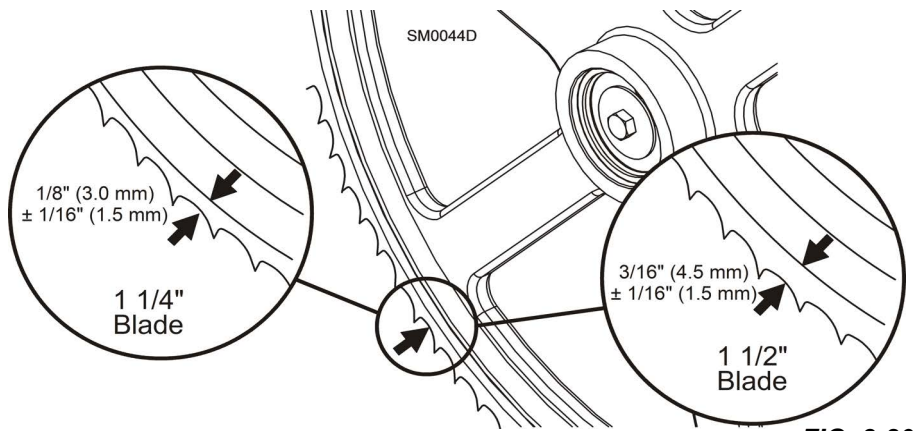


FIG. 8-20

30. Use the cant control adjustment to adjust the idle-side blade wheel.
31. If the blade is too far forward on the wheel, turn the cant control counterclockwise.
32. If it is too far back on the wheel, turn the cant control clockwise.
33. Check the position of the blade on the drive-side blade wheel.

The blade should be positioned on the wheel as described for the idle-side blade wheel. Adjust the drive-side blade wheel if necessary.

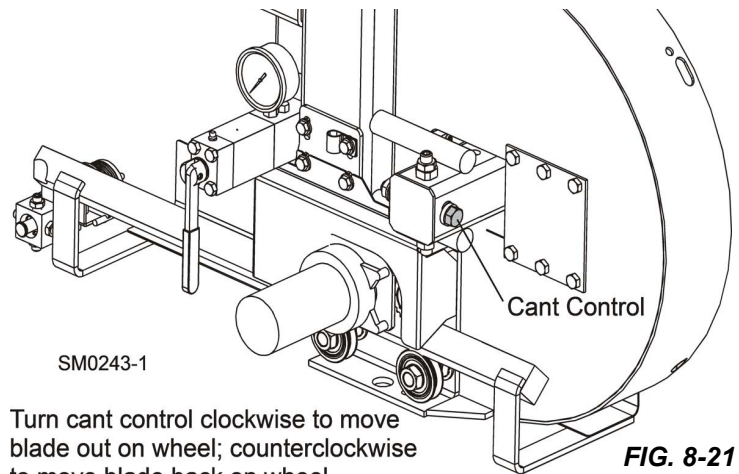


FIG. 8-21

Turn cant control clockwise to move blade out on wheel; counterclockwise to move blade back on wheel

34. Use the horizontal adjustment screws to adjust the drive-side blade wheel.
35. To move the blade back on the wheel, loosen the right adjustment screw one quarter turn.
36. Loosen the jam nut on the left adjustment screw and tighten the screw to 30 ft.-lbs torque.
37. Tighten the left and right jam nuts.
38. To move the blade out on the wheel, loosen the left adjustment screw one quarter turn.
39. Loosen the jam nut on the right adjustment screw and tighten the screw to 30 ft.-lbs torque.
40. Tighten the left and right jam nuts.

Adjust horizontal adjustment screws left to move blade in on wheel; Adjust screws right to move blade out on wheel

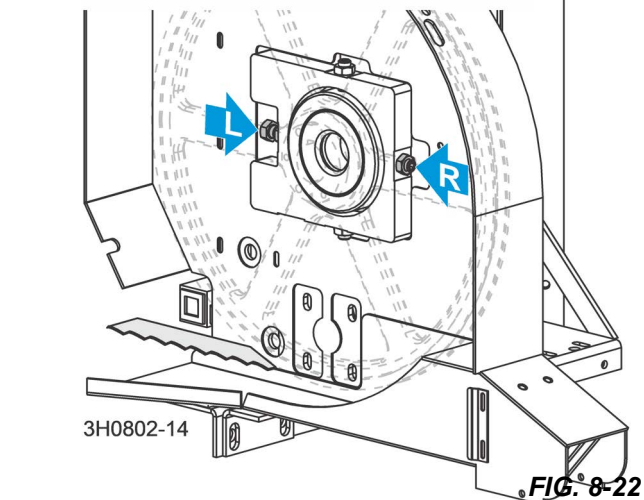


FIG. 8-22

### Track Roller Adjustment

Making these adjustments correctly will insure the saw carriage travels smoothly along the track and blade will remain parallel with the bed frame.

1. Using the feed controls, move the saw carriage so that the blade is positioned over the front pivot end rail.
2. Check the lower stop blocks on the bottom track rail. Make sure that the stop blocks are adjusted 1/32"-1/16" (.75mm - 1.5mm) from the track rail. Use the vertical bolts to adjust the stop blocks.

3. Tighten the vertical adjustment bolt to move the stop block toward the track rail.
4. Loosen the bolt to move the stop block away from the track rail.
5. Check the inside lower rollers.

Both inside rollers should touch the rail so that you cannot spin them by hand. If the rollers are not adjusted evenly and you can spin one, adjust the horizontal adjustment nuts until the roller cannot be spun by hand. Stop adjusting before the other roller can be spun by hand. The two inside rollers should bear the weight of the saw carriage evenly.

6. Move the carriage forward until the blade is positioned over the rear pivot end rail.
7. Repeat steps 2 & 3 until all lower rollers are adjusted properly at the front and rear of the sawmill.
8. Open the adjustable blade guide arm to within 1/2" (15 mm) of full open.
9. Move the carriage back to the front pivot end rail.

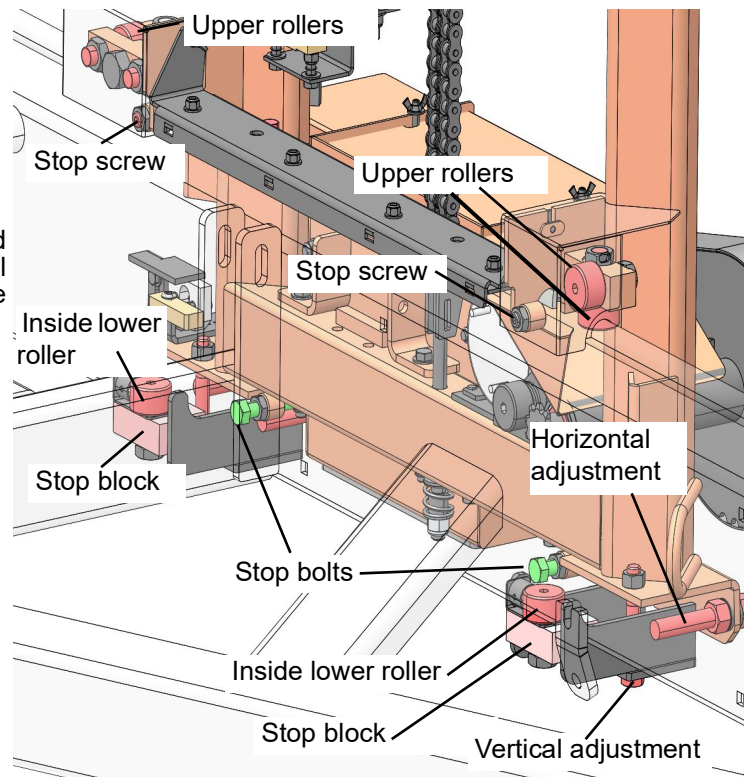


FIG. 8-23

10. Raise the cutting head until the bottom of the blade is 17" (400 mm) above the outside of the pivot rail support by actual measurement with a tape or ruler.
11. Move the carriage forward to check the distance to the blade at the inside of the pivot rail support.

All measurements should be equal within 1/32" (0.8 mm).

12. To adjust the saw head tilt, use the horizontal adjustment nuts.
13. To raise the outside of the saw head, loosen the four inner adjustment nuts 1/2 turn then tighten the four outer nuts.
14. To lower the outside of the saw head, loosen the four outer adjustment nuts 1/2 turn then tighten the the inner nuts.

15. Recheck the saw head tilt and readjust the nuts as necessary.

16. After the lower track rollers are adjusted properly, adjust the upper and lower stop screws.

17. Tighten each screw until it just touches the rail.

18. Then, back the screw off 1/2 turn.

The gap will be approximately 1/32" (0.8mm).



**CAUTION!** It is important that the lower stop bolts are properly adjusted to secure the carriage on the track rail. Failure to properly adjust the stop bolts can cause saw head damage, especially during mill transportation.

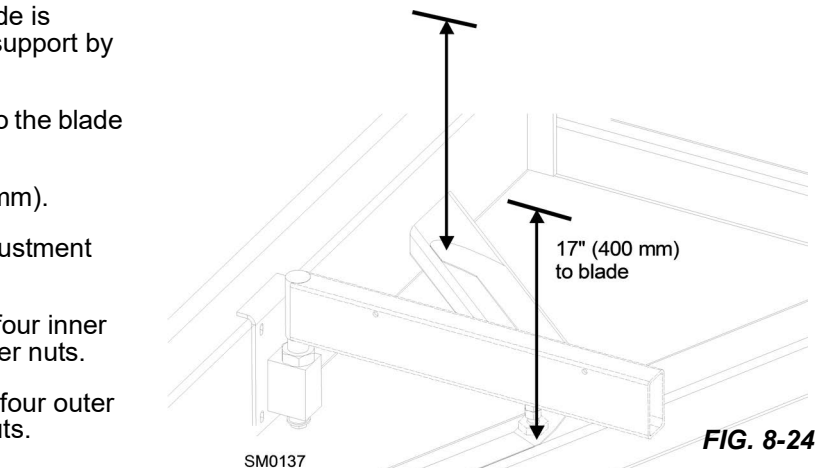


FIG. 8-24

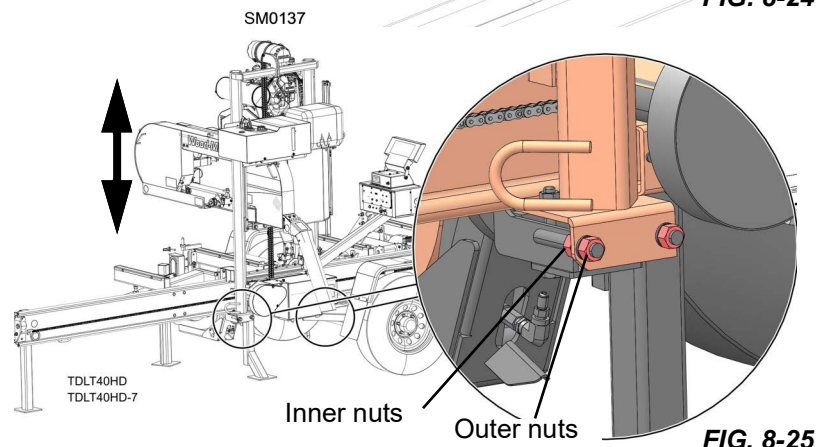


FIG. 8-25

## Bed Rail Adjustment

1. Move the clamp so it is 10" (254mm) from the clamp stop.
2. Adjust the clamp down to its lowest position.
3. Move the saw head forward until it is positioned over the clamp.
4. Raise the saw head until the blade measures 15 5/16" (385 mm) from the clamp at its lowest position.
5. Adjust the front pivot rail 90° to the main bed tube.
6. Move the saw head to center the blade over the front pivot bed rail.
7. Measure the distance from the top of the pivot rail to the bottom of the blade.
8. Make this measurement at each end of the pivot rail.
9. The two measurements should be 15" (380 mm).
10. Loosen the locking set screws and turn the inner height adjustment nut to adjust the height of the inner end of the pivot rail.
11. Loosen the jam nut and turn the outer adjustment bolt to adjust the height of the outer end of the pivot rail.
12. Move the saw head so the blade is positioned over the center of the front main bed rail.
13. Measure the distance between the bottom of the blade and the bed rail at each end of the bed rail.

The bed rail should measure 15" (380 mm) from the blade at each end of the rail.

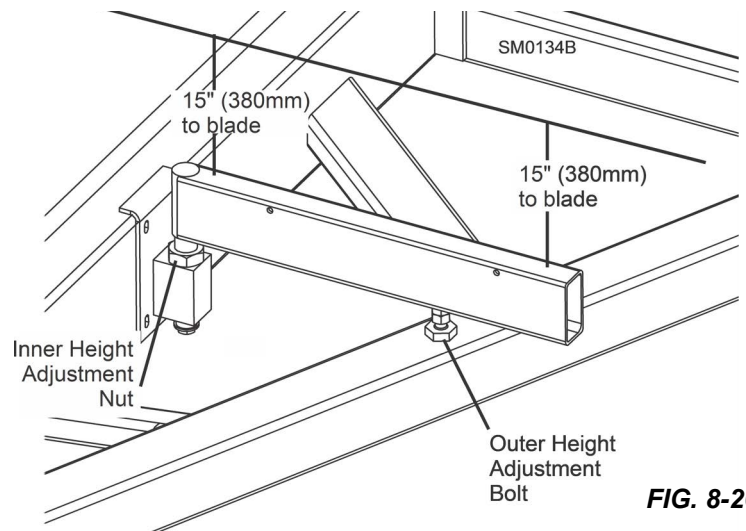


FIG. 8-26

14. Loosen the bed rail clamping bolts and turn the adjustment bolts to move the bed rails to the blade if necessary.
15. Retighten the clamping bolts and adjustment bolt jam nuts.
16. Without adjusting the saw head height, check the three remaining main bed rails and the rear pivot rail.
17. Adjust them so that all measure the same distance from the blade at both ends of the bed rail.

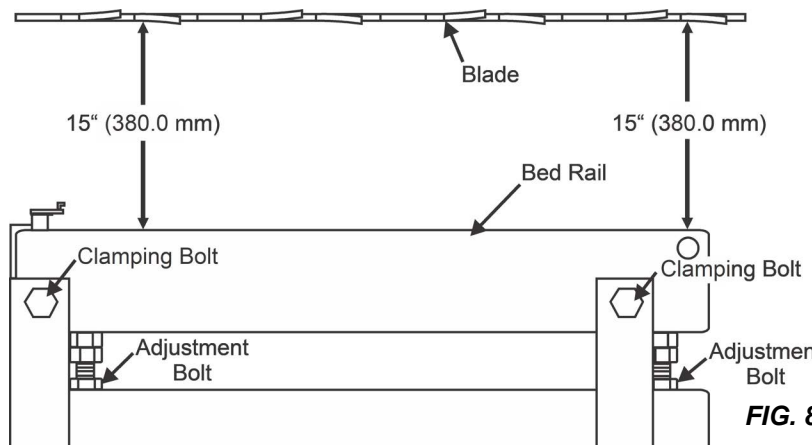


FIG. 8-27

## Blade Guide Installation

Each Wood-Mizer sawmill has two blade guide assemblies that help the blade maintain a straight cut. The two blade guide assemblies are positioned on the saw head to guide the blade on each side of the material being cut.

One blade guide assembly is mounted in a stationary position on the drive side of the saw head. This assembly is referred to as the "inner" blade guide assembly.

The other blade guide assembly is mounted on the idle side of the saw head. It is referred to as the "outer" assembly and is adjustable for various widths of materials to be processed.


**NOTE:** Before installing the blade guide assemblies, remove the blade guide adjusting screws and apply a lubricating oil such as 10W30 or Dexron III to each screw. This will

prevent the screws and threaded holes from corroding and make screw adjustments easier.

**NOTE:** If blade guides equipped with optional high-performance blocks, remove the blade from the sawmill before installing the blade guide assemblies. Place both guide assemblies in the mounts then reinstall, tension and track the blade properly.


### **Blade guides equipped with High-Performance blocks:**

1. Inspect the guide blocks and repair or replace as necessary.
2. Remove the blade from the sawmill.
3. Loosen the top block clamp bolt and mounting bolt.
4. Turn the adjustment bolt counterclockwise to raise the top block all the way up.
5. Remove the bottom guide block from each blade guide assembly and install the provided alignment bar.
6. Install each blade guide assembly to the mounting blocks and push all the way back.
7. Install, tension and track a new blade.
8. Adjust the outer blade guide assembly so the roller flange is 1/8" from the back of the blade.
9. Adjust the inner blade guide assembly so the roller flange is 1/16" from the blade.

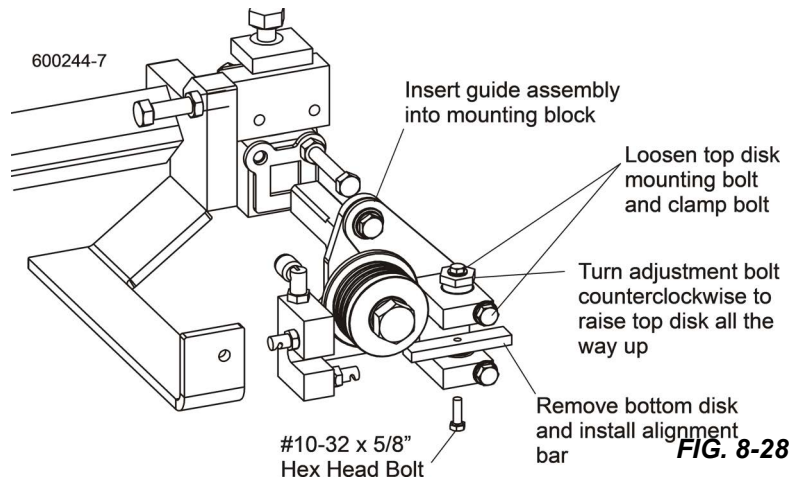

### **Blade guides not equipped with High-Performance blocks:**

1. Install the outer blade guide assembly (with waterlube tube) to the mounting block on the blade guide arm.
2. Position the assembly so the roller flange is 1/8" (3.0 mm) from the blade.
3. Install the inner blade guide assembly to the mounting block on the saw head.
4. Position the assembly so the roller flange is 1/16" (1.5 mm) from the blade.
5. Tighten the two previously-loosened tilt adjustment screws to secure the blade guide assembly.
6. Turn the top adjustment bolt clockwise to raise the blade guide assembly so the roller does not contact the blade.

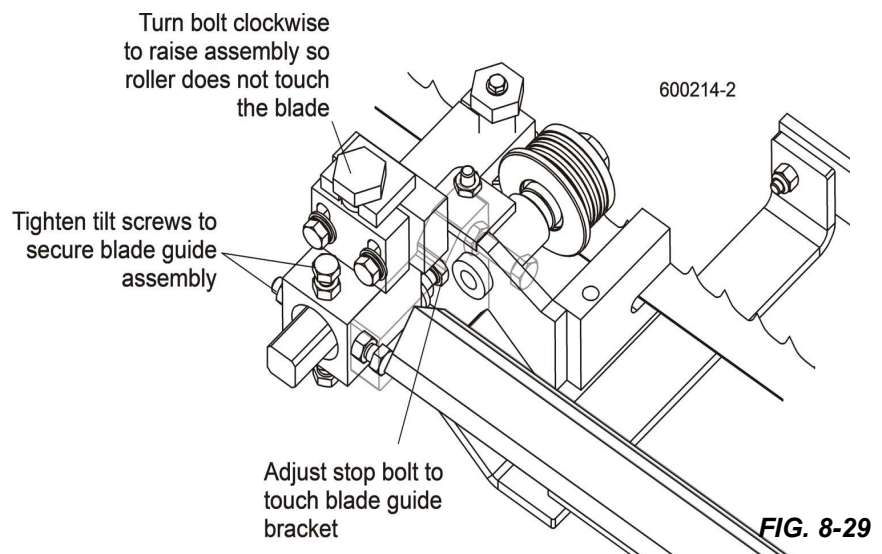

**NOTE:** Before adjusting the top bolt, unload pressure on the bolt by turning 1/2 turn in the opposite direction it was last adjusted.

7. With the roller flange positioned properly from the back of the blade, adjust the stop bolt so it touches the blade guide bracket.
8. Loosen the top vertical adjustment jam nut and tighten the bottom vertical adjustment jam nut to adjust the blade guide roller up so it does not touch the blade.

### **Blade Guide Arm Alignment**

See [Blade Guide Arm Alignment](#) in Routine Alignment Procedure



**Blade Guide Deflection**

1. Raise the saw head until the blade is 15" (380mm) above a bed rail.
2. Measure the actual distance with a tape from the top of the rail to the bottom of the blade.
3. Turn the top adjustment bolt counterclockwise to lower the assembly until the blade guide roller deflects the blade down until the bottom of the blade measures 14 3/4" (375 mm) from the bed rail.

**NOTE:** Before adjusting the top bolt, unload pressure on the bolt by turning 1/2 turn in the opposite direction it was last adjusted.

4. Repeat for the other blade guide.

**Blade Guide Vertical Tilt Alignment**

See [Blade Guide Vertical Tilt Alignment](#) in Routine Alignment Procedure

**Blade Guide Horizontal Tilt Adjustment**

See [Blade Guide Horizontal Tilt Adjustment](#) in Routine Alignment Procedure


**Blade Guide Flange Spacing**

See [Blade Guide Flange Spacing](#) in Routine Alignment Procedure

**Blade Guide Level****(OPTIONAL HIGH-PERFORMANCE BLOCKS ONLY)**

Perform the following adjustments to make sure the blade guide assembly is parallel to the blade.

1. Loosen the alignment bar mounting bolt.
2. Use the provided bottom block adjustment tool to adjust the alignment bar up so the bar is close to, but not touching the bottom of the blade.
3. Retighten the alignment bar mounting bolt
4. Check that the gap from the alignment bar to the blade is the same along entire length of the bar.
5. Shine a flashlight behind the blade guide assembly to help you see the gap between the bar and the blade.

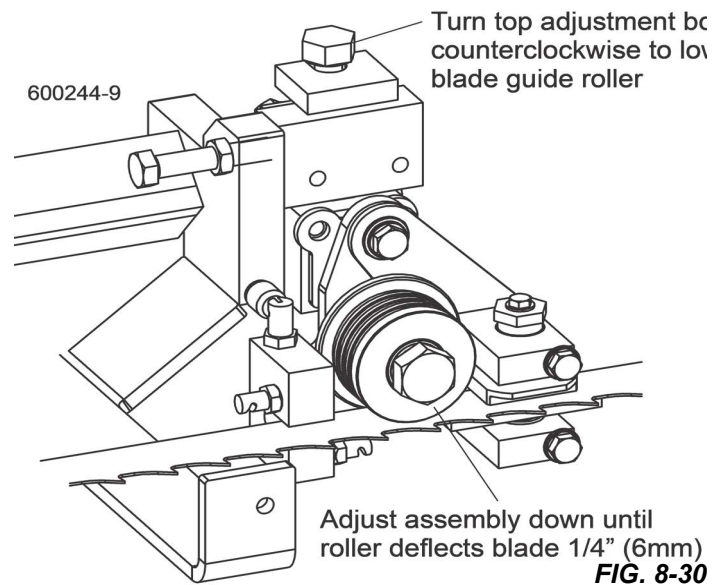


**FIG. 8-30**

## Blade Block Adjustment

### (OPTIONAL HIGH-PERFORMANCE BLOCKS ONLY)

1. Remove the blade and remove the alignment bars from the blade guide assemblies.
2. Install new or reconditioned bottom guide blocks to both blade guide assemblies (leave mounting bolts loose).
3. Use the provided bottom block adjustment tool to lower the bottom block all the way down.
4. Install, tension, and track the blade.
5. Use the bottom block adjustment tool to raise the bottom block to 0.008" - 0.010" (0.2-0.25mm) from the blade.
6. Use the provided shim to set the distance from the block to the blade.
7. Tighten the bottom block mounting bolt and clamp bolt.
8. Turn the top block adjustment bolt clockwise to lower the top block to 0.008" - 0.010" (0.2-0.25mm) from the blade (using the shim as a guide).
9. Tighten the top block mounting bolt and clamp bolt.
10. After tightening the clamp bolt, recheck the distance from the top block to the blade and readjust if necessary.

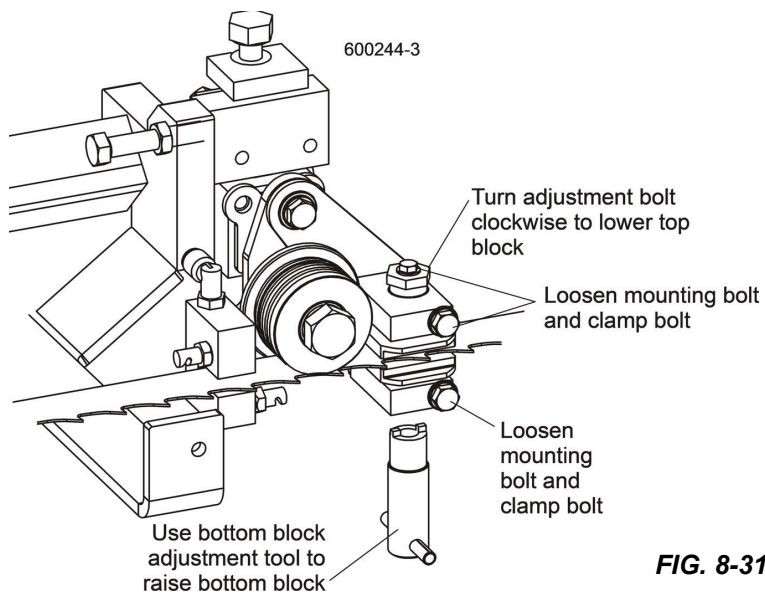


**FIG. 8-31**

## Side Support Alignment

See [Side Support Alignment](#) in Routine Alignment Procedure

### Clamp Stop/Stop Bolt Adjustment

1. Pivot the aligned side supports down to their horizontal position.
2. Tie a string to the stop block at the first bed rail.
3. Stretch the string toward the rear of the frame and tie to the stop block at the last bed rail.
4. Loosen the clamp stop bolts and adjust the clamp stop until it touches the string.
5. Loosen the jam nut and adjust the bolt on the middle-rear bed rail until it touches the string.

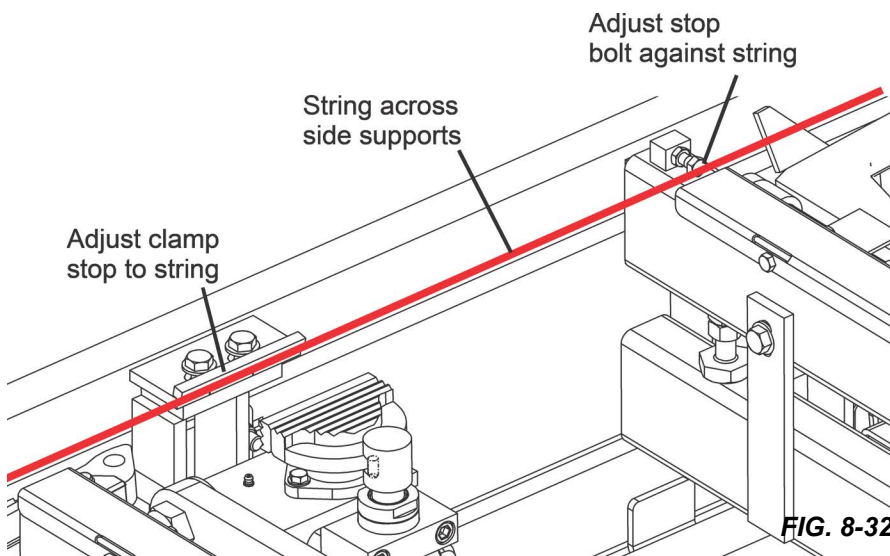

**FIG. 8-32**

## Saw Head Tilt

See [Saw Head Tilt](#) in Routine Alignment Procedure

## Blade Height Scale Adjustment

See [Blade Height Scale Adjustment](#) in Routine Alignment Procedure


### Optional Board Return Bracket

Adjust the board return bracket so the bottom edge is positioned 1/4" (6mm) below the bottom of the blade.

1. With a square cant on the bed rails, lower the blade until it touches the top of the cant.
2. Raise the saw head 1/4" (6mm) as shown on the scale.
3. Lower the board return arm.

The board return bracket should barely touch the top of the cant.

4. Loosen the three bracket mounting bolts to adjust the bracket up or down as necessary.

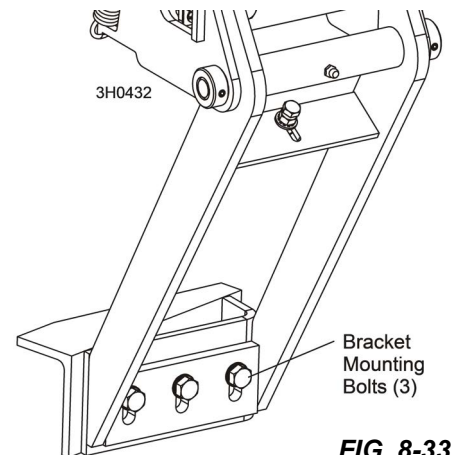

**FIG. 8-33**

## A

## alignment

- lower track rollers 11
- main bed rails 13
- slide pad adjustment 11

## autoclutch option

- operation 5

## B

## battery

- troubleshooting problems 10

## blade

- breakage, troubleshooting 8
- installation 8
- tensioning 8
- tracking 9

## C

## chain

- maintenance 4
- up/down tension 12

## clamping logs 2

## H

## hydraulic

- control operation 1, 2
- fluid level 9

## L

## leveling logs 3

## loading logs 2

## M

## maintenance

- autoclutch 8
- blade guide 1
- blade tensioner 4
- blade wheel belts 5, 6
- brake adjustment 6
- brake strap 6
- carriage track/wipers 3
- drive bearing 11
- drive belt 6
- drum switches 4
- hydraulic system 9
- mast rails 3
- miscellaneous 4
- part wear life 1
- sawdust removal 2
- up/down 12

## O

## operation

- auto-down mode 9
- auto-up mode 10
- control description 7

edging 8  
reference mode 12  
sawing 8

## P

power feed  
    mechanical troubleshooting test 18  
    operation 7  
    preliminary troubleshooting test 18  
    speed adjustment 6, 7  
    troubleshooting problems 16

## S

safety  
    lockout procedure 3

Safety Instructions 1

Safety Symbols 1

## scale

    blade height operation 10  
    inch height 10  
    quarter inch 10

## setup

    contrast adjustment 1  
    control setup 1  
    model configuration 2  
    restore defaults 7  
    startup configuration 2

## T

## tensioner

    maintenance 5

## troubleshooting 8, 15

    control lights 12  
    diagnostics screen 14  
    electrical problems 9  
    error messages 13  
    hydraulic problems 19  
    power feed circuit 17  
    power feed problems 16  
    sawing problems 8

## U

## up/down

    operation 3, 4  
    troubleshooting problems 9

## W

## water lube

    operation 11