

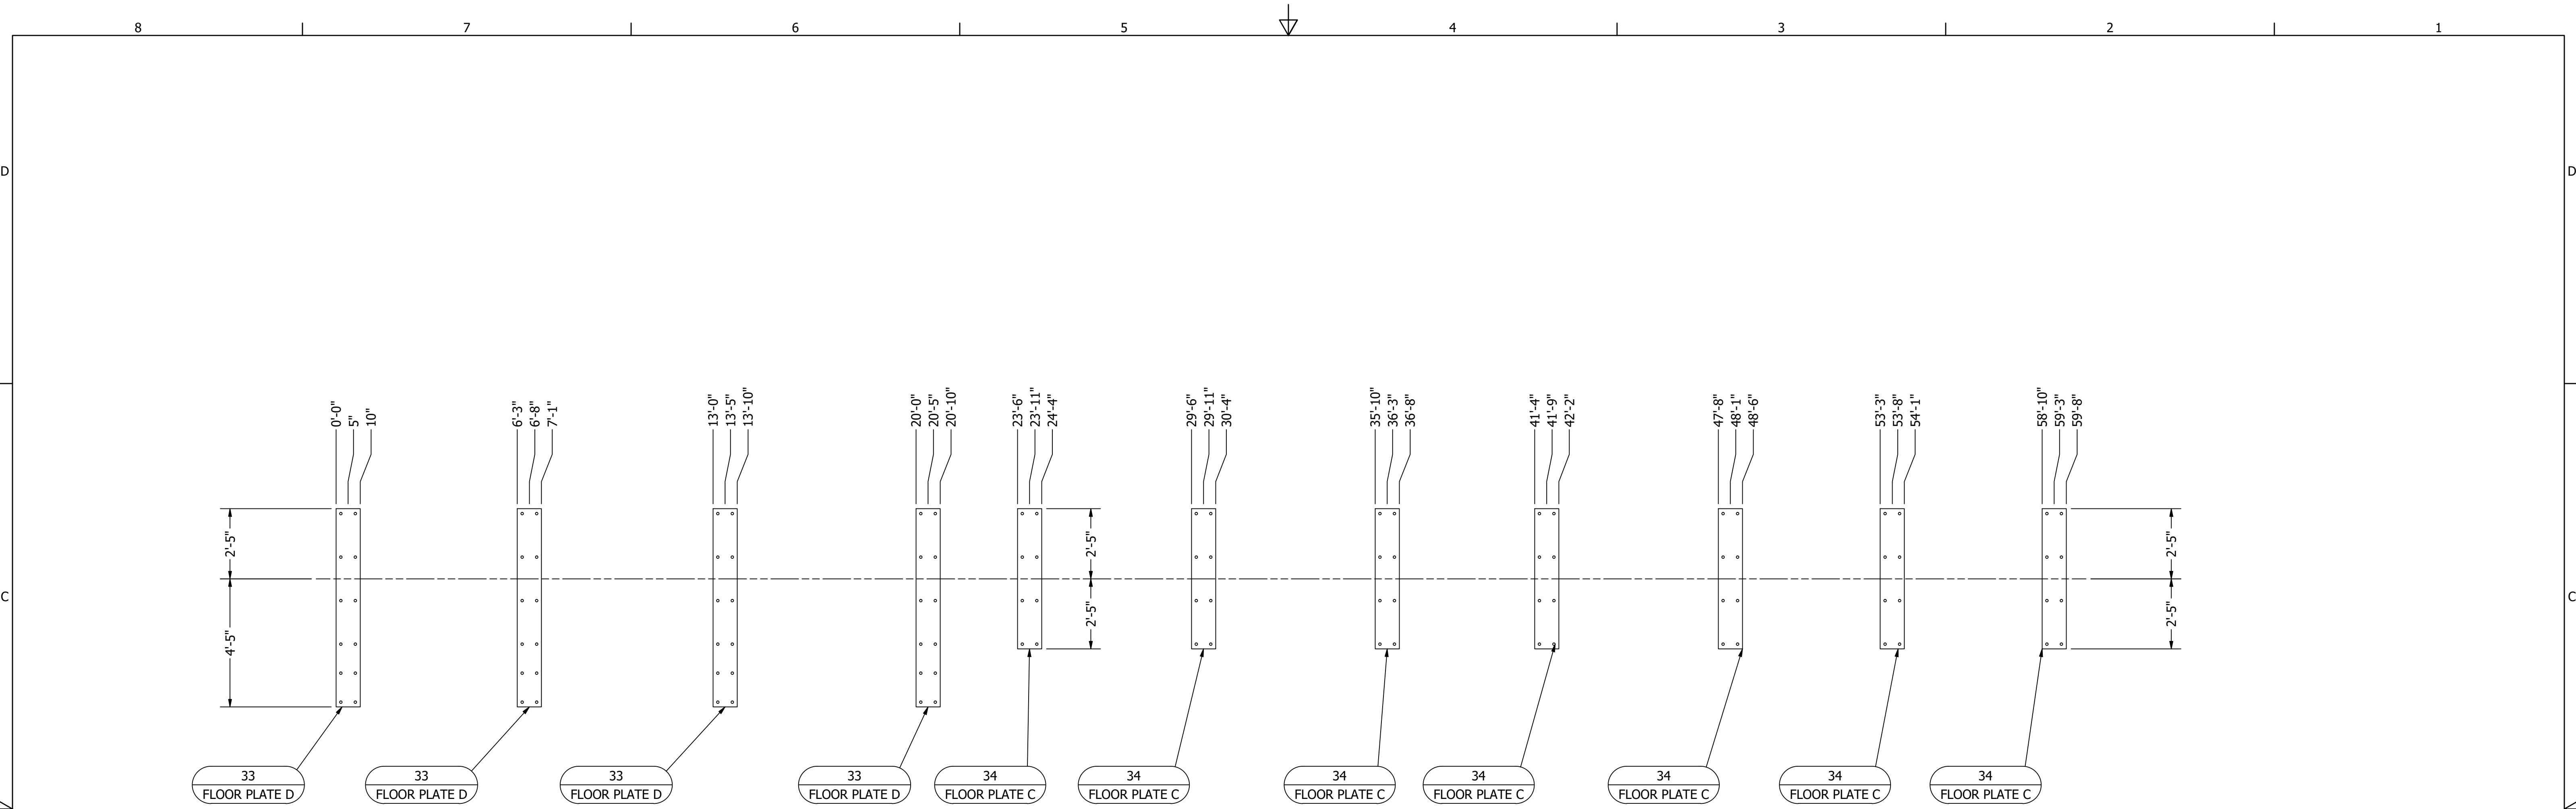


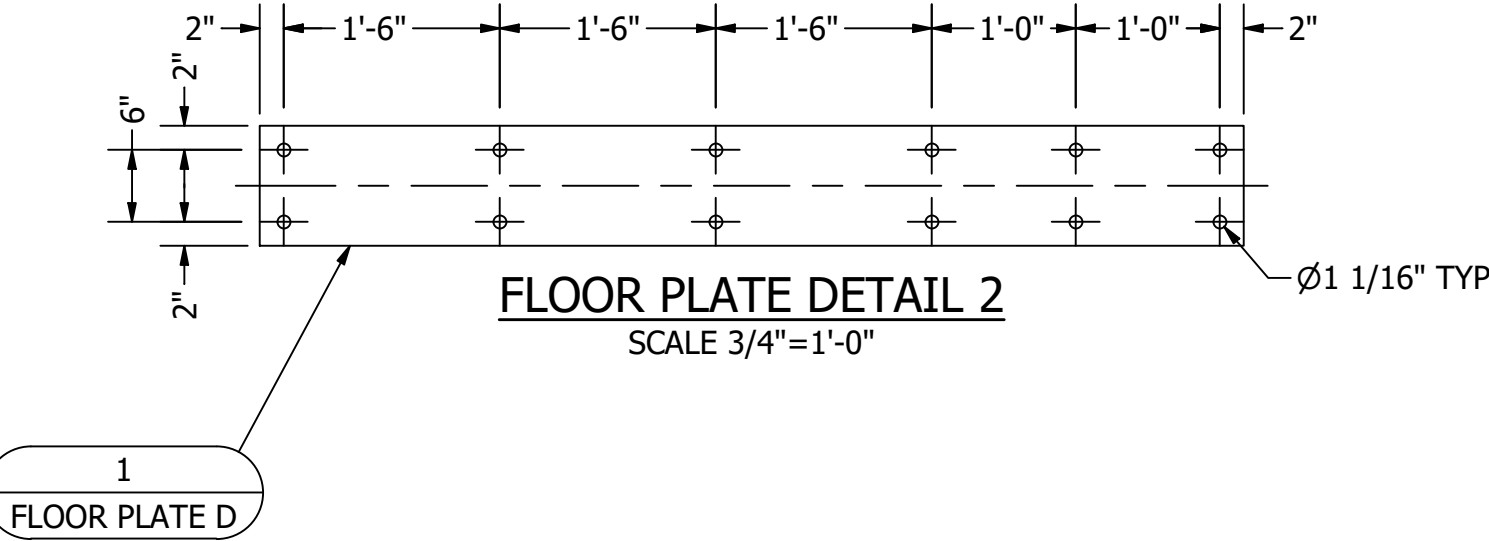

SETTING PLAN
SCALE 1 / 32


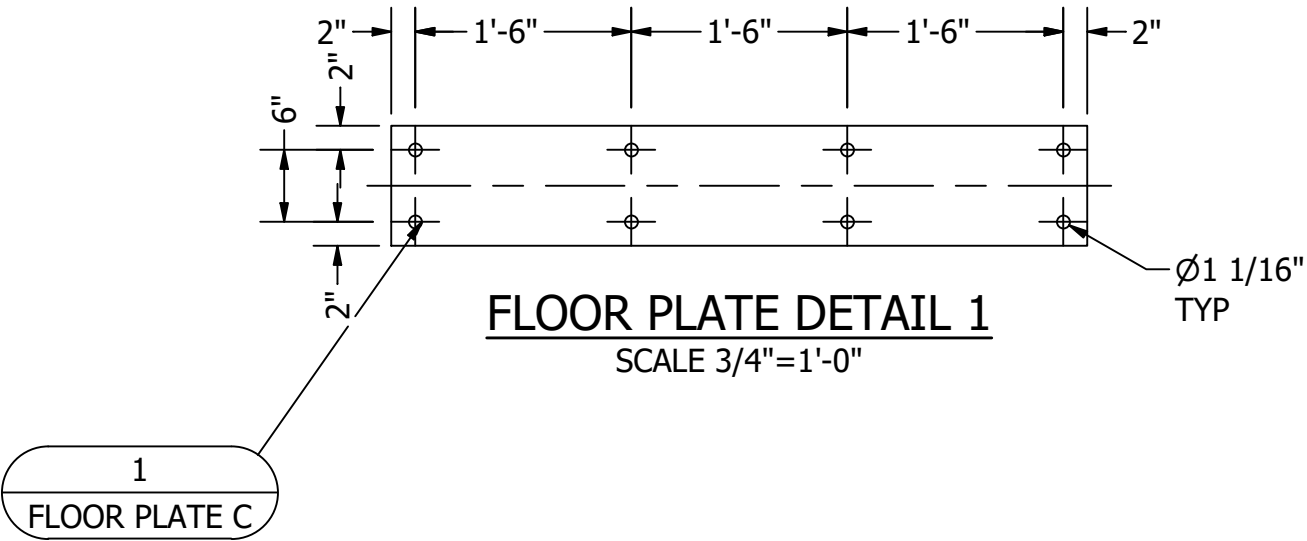


ANCHOR PLATE NOTES

1. EPOXY FLOOR PLATES TO FLOOR WITH:
CONCESSIVE PASTE (LPL) SUITABLE
ABOVE 60° F. OR (SPL) WHICH MAY
BE USED IN A TEMPERATURE RANGE
OF 35 TO 60° F. PER MANUFACTURER'S
RECOMMENDATIONS (BY OTHERS).

CONTACT: BASF BUILDING SYSTEMS
889 VALLEY PARK DR
SHAKOPEE, MN 55379
(800) 433-9517
WWW.CHEMREX.COM

2. USE NON-LEAD TYPE ANCHOR BOLTS
SUITED FOR FATIGUE APPLICATIONS
(BY OTHERS)

WM# SLPT-017-60-115															CUSTOMER				
A	STATIC LOAD TOTAL ↓ 28,585 LBS WITHOUT MATERIAL ACTION SUPPLIED EQUIPMENT ONLY	DYNAMIC LOADING TOTAL 1,700 LBS 2,200 LBS ← → 2,200 LBS 1,700 LBS ACTION EQUIPMENT COMPANY, INC. ASSUMES NO RESPONSIBILITY FOR THE DESIGN OF CONVEYOR FOUNDATIONS AND / OR SUPPORTING STEEL.	MODEL / SIZE	OPERATING SPECIFICATIONS		NOTES	THIS DRAWING WITH THE DESIGNS, IDEAS, AND DETAILS SHOWN HEREON IS THE PROPERTY OF ACTION EQUIPMENT COMPANY, INC., NEWBERG, OREGON, AND IS TO BE RETURNED UPON REQUEST. IT SHALL NOT BE USED, DISCLOSED TO OTHERS OR COPIED IN WHOLE OR IN PART WITHOUT EXPRESS WRITTEN AUTHORIZATION BY ACTION EQUIPMENT COMPANY, INC. ALL RIGHTS OF DESIGN OR INVENTION ARE RESERVED.	ACTION EQUIPMENT COMPANY, INC. P.O. BOX 3100 NEWBERG, OREGON 97132 PHONE (503) 537 - 1111 sales@actionconveyors.com www.actionconveyors.com			TITLE LINE 4 CHIPER INFEED XHDB CONVEYOR FOR WINDFALL LUMBER WINDFALL, AZ								
				ONE (1) MODEL 42"/52" WIDE X 12" DEEP X 66'-4" LONG VIBRATING CONVEYOR	PAN STROKE 23 mm										BALANCER STROKE 24 mm				
			MATERIAL DESCRIPTION	ECCENTRIC SHAFT RPM = 455		PAINT ORANGE (RAL # 2001) w/Safety Yellow Drive Guard	FOUNDATIONS, ANCHOR BOLTS, EMBEDDED STEEL FOR MOUNTING UNIT IN PLACE, SUPPORTS, MOTOR CONTROLS, CONDUIT AND ELECTRICAL WIRING, ALL NECESSARY CHUTEWORK, HOPPERS, SKIRTING AND ALL ITEMS NOT SHOWN INCLUDING UNLOADING AND ERECTION TO BE FURNISHED BY CUSTOMER UNLESS NOTED OTHERWISE.	SAFETY SAFETY HAS BEEN GIVEN CONSIDERATION IN THIS ARRANGEMENT. PLEASE REVIEW MAINTENANCE MANUAL PRIOR TO INSTALLATION.											
				SAWDUST, CHIPS, TIM BLOCKS						DRAWING TOLERANCES: UNLESS OTHERWISE SPECIFIED DECIMAL X = ± .06" XX = ± .010" XXX = ± .005"	FRACTION X/X = ± 1/16" ANGLE X° = ± 1/2° DIMENSIONS: INCHES UNLESS OTHERWISE SPECIFIED								
												SHIPPING BRACES MUST BE REMOVED BEFORE STARTING CONVEYOR. CUSTOMER TO SUPPLY STRUCTURAL SUPPORTS FOR MACHINE IF NOT PROVIDED BY ACTION.							
8		1		7		6		5		4		3		2		1		SHEET 4 OF 4	

CUSTOMER APPROVAL AND DATE: